TOSHIBA

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS / MULTIFUNCTIONAL DIGITAL SYSTEMS

TopAccess Guide

E-STUDIO2010AC/2510AC

©-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC

E-STUDIO2518A/3018A/3518A/4518A/5018A

E-STUDIO 5516AC/6516AC/7516AC

E-STUDIO 5518 A / 6518 A / 7518 A / 8518 A

E-STUDIO330AC/400AC



Preface

Thank you for purchasing our product. This manual describes remote setup and remote management which operated from the web based management utility TopAccess. Read this manual before using the functions.

Operations on some items are restricted depending on the privileges assigned to the TopAccess user. Also, some items may not be displayed or may not function on some models.

■ How to read this manual

☐ Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding objects.

△ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding objects, or loss of data.

Note

Indicates information to which you should pay attention when operating the equipment.

Tip

Describes handy information that is useful to know when operating the equipment.

Pages describing items related to what you are currently doing. See these pages as required.

☐ Target audience for this manual

This is a manual that is aimed at general users and administrators.

☐ Model and series names in this manual

In this manual, each model name is replaced with a series name as shown below.

Model name	Series name
e-STUDIO2010AC/2510AC	e-STUDIO5015AC Series
e-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC	
e-STUDIO2018A/2518A/3018A/3518A/4518A/5018A	e-STUDIO5018A Series
e-STUDIO5516AC/6516AC/7516AC	e-STUDIO7516AC Series
e-STUDIO5518A/6518A/7518A/8518A	e-STUDIO8518A Series
e-STUDIO330AC/400AC	e-STUDIO400AC Series

□ Optional equipment

For available options, refer to the Quick Start Guide.

☐ Screens in this manual

In this manual, Windows10 is taken for explanation purposes to describe the screens and operation procedures in Windows.

The details on the screens may differ depending on your model and how the equipment is used, such as the status of the installed options, the OS version and the applications.

□ Abbreviations in this manual

In this manual, "Dual Scan Document Feeder" (DSDF) and "Reversing Automatic Document Feeder" (RADF) are collectively referred to as "Automatic Document Feeder" (ADF).

☐ About the defaults shown in this manual

- The defaults shown in this manual are the values in the standard operating environment. The values may have been changed from these defaults. The defaults for your model may differ from the defaults shown.
- The default for the list item is shown underlined.

□ Trademarks

For trademarks, refer to the **Safety Information**.

Security Precautions

- To prevent the configuration settings from being changed illegally or similar, change the initial administrator password at the time of shipping before you use this product.
- Be sure to log out when leaving your computer while changing TopAccess settings for security purposes.
- For security purposes, do not access any other site while you are logged in to TopAccess.

■ Regarding the browser settings

In the Install Client Software in TopAccess, a printer driver may not be able to be installed since the dialog box for starting the installer does not appear even though the printer driver link is clicked. In this case, register the IP address [http://XXX.XXX.XXX] of the MFP in either "Local intranet" or "Trusted sites" of Internet Explorer.

CONTENTS

Preface		3
How	to read this manual	3
Chapter 1	Overview	
TopAcc	ess Overview	10
•	ess Conditions	
•	ng TopAccess	
	essing TopAccess by entering URL	
	ess Screen Descriptions	
-	Policy Mode	
Chapter 2	[Device] Tab Page	
[Device] Item List	10
-		
Display	ed Icons	20
Chapter 3	[Job Status] Tab Page	
		_
-	atus] Tab Page Overview	
=	It Job] Item list	
	/InternetFax Job] Item listn Job] Item list	
=	ti Station Print Job] Item list	
-		
	atus] How to Set and How to Operate	
	laying print jobsting jobs	
	ting jobsting jobs	
	asing print jobsasing print jobs	
	cking recovery information	
	r. 1=1=	
Chapter 4	[Logs] Tab Page	
[Logs] 1	Tab Page Overview	34
Viev	v Logs] Item list	34
	ort Logs] Item list <access mode="" policy=""></access>	
[Log	Settings] Item list <access mode="" policy=""></access>	44
[Logs] H	low to Set and How to Operate	45
	laying job logs	
•	orting logs	
Chapter 5	[Registration] Tab Page	
	r - 0	
	ration] Tab Page Overview	
	nplate] Item list	
	plate settings	
	lress Book] Item list	
	ound FAX routing] Item list	
_	ration] How to Set and How to Operate	
	aging templates	
Man	aging address book	

Man	naging mailboxes	115
Chapter 6	[Counter] Tab Page	
[Count	er] Tab Page Overview	120
[Cou	unter] Item list	120
	er] How to Set and How to Operate	
_	wing counters	
Chapter 7	[User Management] Tab Page	
[User M	Management] Tab Page Overview	136
[Use	er Accounts] Item list <access mode="" policy=""></access>	136
	oup Management] Item list <access mode="" policy=""></access>	
	le Management] Item list <access mode="" policy=""></access>	
	partment Management] Item list <access mode="" policy=""></access>	
	oject Management] Item list <access mode="" policy=""></access>	
	port/Import] Item list <access mode="" policy=""></access>	
Chapter 8	ared Settings] Item list <access mode="" policy=""></access>	161
		165
] Item List	
	neral settings	
	work settings pier settings	
•	settings	
	e as file settings	
	ail settings	
	rnetFax settings	
Prin	nter/e-Filing settings	258
	iter settings	
	t Service settings	
	Profile settings	
	nt Data Converter settings	
	bedded Web Browser settings	
	Device Customization Architecture settingssion	
] How to Set and How to Operate	
	ting up General settings	
	ting up Network settings	
	MP V3 settings	
	ting up Copier settings	
	ting up Fax settingsting up Save as file settings	
	ting up E-mail settingsting up E-mail settings	
	ting up InternetFax settings	
	ting up Printer/e-Filing settings	
	ting up Printer settings	
Sett	ting up Print Service settings	297
	ting up ICC Profile settings	
	ting up Print Data Converter settings	
	ifiguring the EWB function	
	ting up Off Device Customization Architecture settings	
Disp	olaying version information	305
[Securi	ity] Item List	307

	ount] Tab Page Overview	41
ter 9	[My Account] Tab Page	
	ate	
-	se List	
[License	Item List	41
	ngs	
	cation List	
•	tion] Item List	
Regis	tering Fax and Internet Fax received forward	39
[Registr	ation] ([Administration] tab) How to Set and How to Operate	39
Meta	Scan	39
	eceived Forward and InternetFAX Received Forward settings	
Hom	e Data List	38
-	e/Icon Management	
	le Screen Settings	
	ult Home Settings	
	ılt Home	
	c Theme Settingsc Home Settings	
	c Home	
- •	ation] ([Administration] tab) Item List	
	oting the equipment	
•	rting and exporting	
	ng up notification	
	ing the data from local folder	
	oving the client software	
	ading the client software	
	t the maintenance functions	
[Mainte	nance] How to Set and How to Operate	30
Pane	l View	3!
	ot settings	
	m Updates settings	
	Paper Type	
_	Backup	
	uages settings	
	e Files settingsication settings	
	rt settings	
•	rt settings	
	ll Clone File settings	
	e Clone File settings	
Rem	ove Software settings	33
Uplo	ad Software settings	33
[Mainte	nance] Item List	3:
Insta	lling CA certificate	33
	ing/Exporting a client certificate	
Insta	lling a device certificate	32
[Securit	y] How to Set and How to Operate	32
Secu	rity Stamp Setting	
	word Policy settings	
Certi	ficate management settings	
	entication settings	

Chapter 10 Functional Setups

Setting up Meta Scan Function	422
Procedure for using Meta Scan	422
Checking Meta Scan Enabler	423
Editing XML format file	
Registering XML format file	
Registering Extended Field Definition	
Registering templates for Meta Scan	
Meta Scan	
Checking logs of Meta Scan	434
Setting Multi Station Print	435
Procedure for Multi Station Print	435
Procedure for Multi Station Print (Only in One Equipment Unit)	436
Checking the Multi Station Print Enabler	436
Setting Home Data Synchronization	437
Procedure for Home Data Synchronization	437
Using the Attribute of the External Authentication as a Role of the MFP	438
Exporting the role information setting file	438
Defining the role information setting file	438
Importing the role information setting file	439
Enabling the role base access setting	439
Setting up Email	440
Procedure for Email Setting	440
Chapter 11 APPENDIX	
Installing Certificates for a Client PC	
Configuring the Microsoft Management Console	
Importing certificates to a client PC	444
INDEX	451
	······································

Overview

This section provides an overview of the TopAccess functions.

TopAccess Overview	10
TopAccess Conditions	11
Accessing TopAccess	12
Accessing TopAccess by entering URL	
TopAccess Screen Descriptions	14
Access Policy Mode	15

TopAccess Overview

TopAccess is a management utility that allows you to check device information of this equipment and job status, and to carry out device setting and maintenance through a web browser.

TopAccess has an "end-user mode" and a "access policy mode".

End-user mode

End users can:

- · Display general device information, including status, drawer/accessory configuration, and paper supply information.
- Display and manage the status of print jobs, fax/Internet Fax transmission jobs, and scan jobs submitted by the user. (The Fax Unit is required to display and manage the fax transmission jobs)
- Display the job logs for print, fax/Internet Fax transmission, fax/Internet Fax reception, and scan. (The Fax Unit is required to display the fax transmission and fax reception job logs.)
- Register and modify templates.
- Add or modify contacts and groups in the address book.
- Register and modify mailboxes. (The Fax Unit is required.)
- Display counter logs.
- · Download client software.

P.12 "Accessing TopAccess"

Access policy mode

Operation privileges and displayed items vary depending on the user account you used to log in to TopAccess. Details of operations and displays vary depending on the management on roles and departments to where the user account is assigned.

P.15 "Access Policy Mode"

TopAccess Conditions

Your equipment should be connected to the network and TCP/IP is correctly configured to operate TopAccess. When TCP/IP is correctly configured, you can access TopAccess via a web browser.

Supported browsers

- Windows
 - Internet Explorer 9.0 or later
 - Microsoft Edge
 - Firefox 38 or later
 - Chrome 45 or later
- Mac OS
 - Safari 4.0 or later
- UNIX
 - Firefox 38 or later

Note

- Because TopAccess uses cookies to store information on the user's system, these must be enabled in the browser.
- If TopAccess does not display the correct information in any page, delete the cookies and try again.
- If a proxy server is used, set the IP address of the equipment in use in "Exceptions" of the proxy server.
- Make sure you disable your web browser's pop-up blocker or allow pop-ups from TopAccess.

Tip

- TopAccess supports special letters of European languages. A note is described in each article if there are any restrictions in which letters can be entered.
- This equipment uses TLS1.2 as a communication protocol.

Accessing TopAccess

You can access TopAccess by entering its URL in the address box of the web browser.

P.12 "Accessing TopAccess by entering URL"

■ Accessing TopAccess by entering URL

Launch a web browser and enter the following URL in the address box.

http://<IP Address> or http://<Device Name>

\(\tag{http://10.10.70.120/}

For example

When the IP address of your equipment "10.10.70.120" (when IPv4 used):

http://10.10.70.120

When the IP address of your equipment is "3ffe:1:1:10:280:91ff:fe4c:4f54" (when IPv6 used):

3ffe-1-1-10-280-91ff-fe4c-4f54.ipv6-literal.net

or


http://[3ffe:1:1:10:280:91ff:fe4c:4f54]

When your device name is "mfp-04998820":

http://mfp-04998820


Note

When SSL/TLS for the HTTP network service is enabled, an alert message may appear when you enter the URL in the address box. In that case, click [Continue to this website (not recommended).] to proceed.

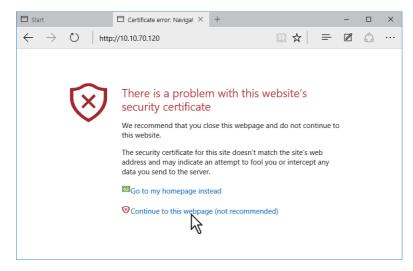

The TopAccess website appears. 2


The screen shows information, depending on the model and options you use.

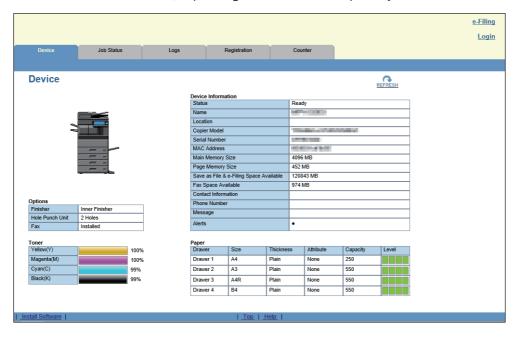

Tip

 $You \ can \ also \ access \ Top Access \ Using \ the \ Top Access Doc Mon \ link. For instructions \ on \ accessing \ Top Access \ from \ Access Access \$ TopAccessDocMon, refer to the **Help for TopAccessDocMon**.

TopAccess Screen Descriptions

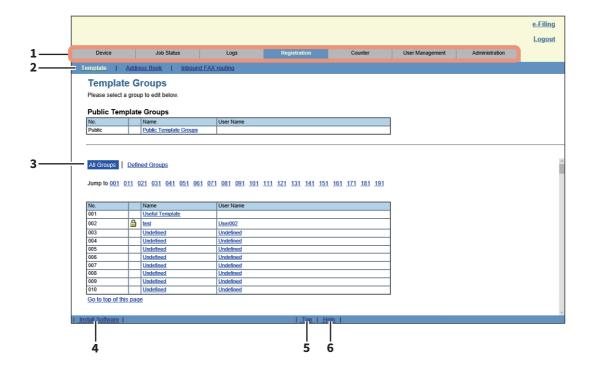

	Item name	Description
1	Function tab	Features are grouped under each tab. This provides access to the main pages of TopAccess for each function.
2	Menu bar	This provides access to each menu page under the selected function tab.
3	Submenu bar	This provides access to each submenu page under the selected menu and function tab.
4	Install Software link	Click this to open the Install Client Software page to download the client software from TopAccess.
5	Top link	Click this to display the top of the page currently displayed.
6	Help link	Click this to display Online Help.

Access Policy Mode

The access policy mode enables different operation privileges and displayed items to be applied depending on the user account you used to log in to TopAccess.

In the access policy mode, the details of operations and displays differ depending on the roles and department assigned to the given user account.

Access TopAccess.


P.12 "Accessing TopAccess by entering URL"

Click [Login].



The Login page is displayed.

Enter the user name and password and click [Login].

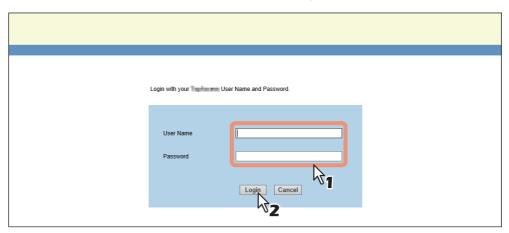

- Enter the user name and password that comply with TopAccess access policies.
- The Setup page is displayed.


Note

- The default log-in settings are "admin" for User Name and "123456" for Password. Depending on the model and destination, you are required to change the default administrator password for the first login. Follow the instructions on the screen.
- Failing to enter the correct password for a number of times at login will be considered unauthorized access and you may not be able to log in for a certain period of time. Contact the administrator if you see a message to inform you that your account is locked, or your user name or password is incorrect, and you are unable to continue the login operation.
- The input password is hidden with symbols.
- After login, you will be automatically logged out when the time specified in the [Session Timer] elapses.

Tip

- Lockout setting for user accounts can be set with [Administration] [Security] [Password Policy]. P.322 "Password Policy settings"
- The [Session Timer] can be set with [Administration] [Setup] [General] [WEB General Setting].

Click the menu and submenu to display the desired page. 4

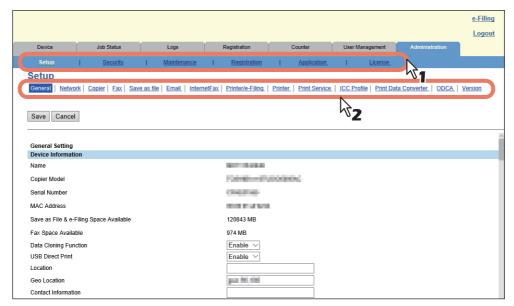

Tip

You can log out by clicking the [Logout] link at the top right of the page.

[Device] Tab Page


This section describes the	[Device] tab page in t	the TopAccess end-user m	ode.
This section describes the	[Device] tab page iii	tile i opi teeess ella asel ill	· ·

[Device] Item List	18
Displayed Icons	20

[Device] Item List

TopAccess opens the [Device] tab which includes a picture indicating the device status. At any time, the end user may click [REFRESH] to update the TopAccess status information.

This tab shows the following information about the device. The screen shows information, depending on the model and options you use.

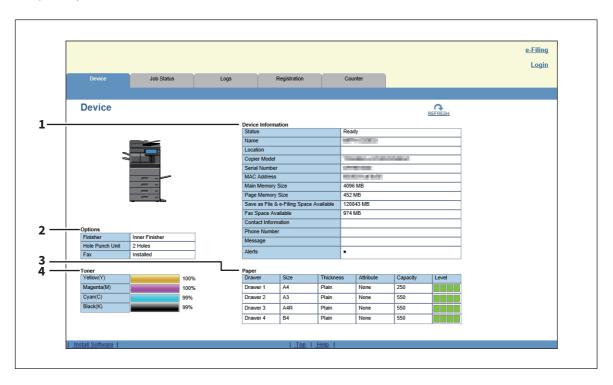

	Item name	Description
1	Device Information	The following information is displayed.
		• Status — Displays the device status.
		• Name — Displays the name of this equipment.
		• Location — Displays the equipment's location.
		• Copier Model — Displays the model name of this equipment.
		• Serial Number — Displays the serial number of this equipment.
		• MAC Address — Displays the MAC address of this equipment.
		Main Memory Size (for some models only) — Displays the main memory
		size.
		• Page Memory Size (for some models only) — Displays the page memory
		size.
		ullet Save as File & e-Filing Space Available (for some models only) $-$
		Displays the total available space in the local folder and e-Filing on your equipment.
		• Fax Space Available — Displays the available space for sending and receive fax data.
		Contact Information — Displays the contact name of the person
		responsible for managing this device.
		• Phone Number — Displays the phone number of the person responsible for
		managing this device.
		Message — Displays administrative messages.
		• Alerts — Displays alert messages.

	Item name	Description
2	Options	The following information is displayed.
		Finisher (for some models only)— Displays whether the Finisher is
		installed.
		Hole Punch Unit (for some models only) — Displays whether the Hole
		Punch Unit is installed.
		• Fax — Displays whether the Fax Unit is installed.
		Optional Function kit (for some models only) — Displays whether the
		optional function kit is installed.
3	Paper	The following information is displayed.
		• Drawer — Displays a list of the installed drawers.
		• Size — Displays the paper size set for each drawer.
		• Thickness — Displays the thickness of the paper set in each drawer.
		• Attribute — Displays the purpose of the paper set in each drawer.
		Capacity — Displays the maximum paper capacity that can be set for each
		drawer.
		• Level — Displays the remaining amount of paper for each drawer.
	Note	
	The paper size for each drav	ver cannot be set from TopAccess. Set it from the touch panel of the equipment.
	For instructions on how to s	et the paper size for each drawer, refer to the Paper Preparation Guide .
4	Toner	Displays the amount of toner remaining in the toner cartridges in the equipment.

Displayed Icons

When the equipment requires maintenance or when an error occurs with the equipment, icons indicating the status information appear near the graphic image of the equipment on the TopAccess [Device] tab. The following are the icons displayed and their descriptions.

×	Printer Error 1	This icon indicates that a non-recommended toner cartridge is being used, and that the equipment has stopped printing. For information on resolving the error, refer to "Replacing a Toner Cartridge" in the Hardware Troubleshooting Guide .
!!!	Printer Error 2	 This icon indicates one of the following: You need to remove paper from the receiving tray. You need to remove paper from the Finisher tray. You need to remove the staples jammed in the Finisher. For information on resolving the error, refer to "Staple Jam in the Finisher" in the Hardware Troubleshooting Guide.
		 You need to remove the staples jammed in the Saddle Stitch Unit. For information on resolving the error, refer to "Staple Jam in the Saddle Stitch Unit" in the Hardware Troubleshooting Guide. You need to clear chads from the Hole Punch Unit. For information on resolving
		 the error, refer to "Cleaning the Hole Punch Dust Bin" in the Hardware Troubleshooting Guide. A non-recommended toner cartridge is being used. For information on resolving the error, refer to "Replacing a Toner Cartridge" in the Hardware
		 Troubleshooting Guide. You performed saddle stitch printing with the paper of the different sizes. The equipment cannot load paper from the Large Capacity Feeder. The equipment cannot eject the paper to the output tray. Data in the internal storage device of this equipment is required to be backed up. Replacing of the internal storage device of this equipment is required.
P	Cover Open	This icon indicates a cover such as the front cover or Automatic Duplexing Unit Cover is open.
	Drawer Open	This icon indicates the drawer is open.
	Toner Empty	This icon indicates no toner is left. For information on resolving the error, refer to "Replacing a Toner Cartridge" in the Hardware Troubleshooting Guide .
	Waste Toner Full	This icon indicates the waste toner box is full and requires replacing. For information on resolving the error, refer to "Replacing the Waste Toner Box" in the Hardware Troubleshooting Guide .
	Paper Empty	This icon indicates no paper is left in a drawer. For information on resolving the error, refer to the Paper Preparation Guide .
8\	Paper Misfeed	This icon indicates a paper misfeed occurred. It also indicates the location of the paper misfeed. For information on resolving the error, refer to "Clearing a Paper Misfeed" in the Hardware Troubleshooting Guide .

C	Staples Empty	This icon indicates no staples are left in the Finisher. For information on resolving the error, refer to "Refilling the Staples" in the Hardware Troubleshooting Guide .
	Call for Service	Contact your service representative to have the equipment inspected.

[Job Status] Tab Page

Using TopAccess, end users can display and delete print jobs, fax/internetfax jobs, and scan jobs released by end users.

[Job Status] Tab Page Overview	24
[Print Job] Item list	
[Fax/InternetFax Job] Item list	27
[Scan Job] Item list	28
[Multi Station Print Job] Item list	
[Job Status] How to Set and How to Operate	30
Displaying print jobs	
Deleting jobs	
Deleting all jobs	31
	21
Releasing print jobs	

[Job Status] Tab Page Overview

You can display and delete print jobs, Fax/InternetFax jobs, and scan jobs. You can also print print jobs immediately.

- P.24 "[Print Job] Item list"
- P.27 "[Fax/InternetFax Job] Item list"
- P.28 "[Scan Job] Item list"
- P.29 "[Multi Station Print Job] Item list"


Tip

When user authentication is enabled, you can operate on jobs associated with the user account you used to log in. However, a user account with administrator privileges can operate on all jobs.


■ [Print Job] Item list

The Print Job page is divided into Print Job, Private Print Job, and Hold Print Job. You can select Private Print Job and Hold Print Job only when you are logged in with a user account with administrator privileges in the access policy mode.


[Print Job] screen

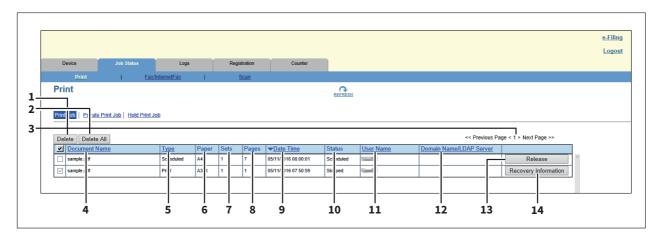

[Private Print Job] screen

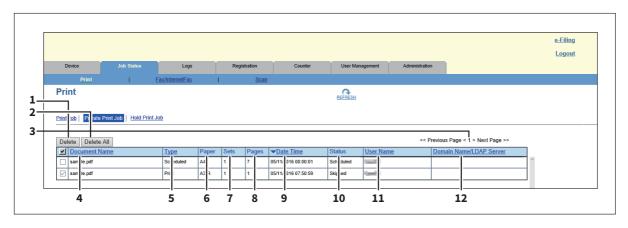

[Hold Print Job] screen

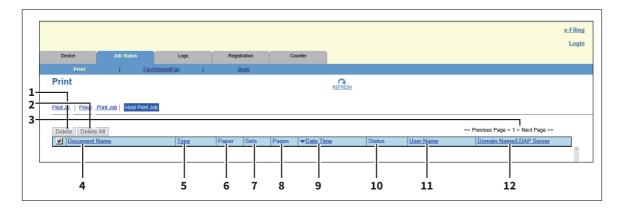


	Item name	Description
1	[Delete] button	The selected print job is deleted.
2	[Delete All] button	All print jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	Document Name	Displays the document name of the print job. Document names are displayed using 10 asterisks (*) when the Confidentiality Setting is enabled. P.169 "Setting up Confidentiality Setting"
5	Туре	Displays the print job set in the printer driver. Possible values of print job are: [Normal], [Scheduled], [Private], [Proof], [Hold], and [MultiStation].
6	Paper	Displays the paper size of the print jobs.
7	Sets	Displays the number of copies set for the print jobs.
8	Pages	Displays the number of pages of the print job.
9	Date Time	Displays the date and time when the print job was released from the client computers. They are displayed using "year, month, day, hour, minute, and second". For example: 2016/12/24 12:34:56
10	Status	Displays the status of the print job. Possible values of status are: [Paused], [Wait], [Suspend], [Skipped], [Process], [Printing], and [Scheduled].
11	User Name	Displays the user account name of the owner of the print job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the print job.
13	[Release] button	If the selected print job is in the print queue, the job is printed.
14	[Recovery Information] button	If the selected print job was skipped while the job skip feature was enabled, the recovery information screen is displayed. P.26 "[Recovery Information] screen" P.168 "Setting up Job Skip Control"

Tip

- Print jobs that have finished being printed are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.

☐ [Recovery Information] screen


The Recovery Information screen displays the conditions for resuming printing.

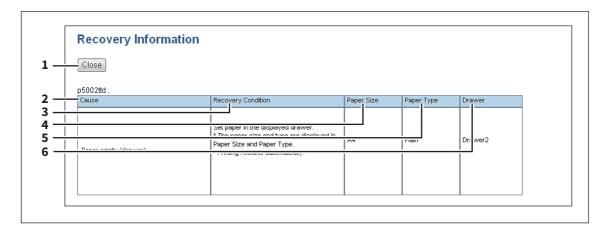

	Item name	Description
1	[Close] button	Closes the [Recovery Information] screen.
2	Cause	Displays the cause of the print interruption.
3	Recovery Condition	Displays the procedure for resuming printing.
4	Paper Size	Displays the paper size set for the interrupted print job.
5	Paper Type	Displays the paper type set for the interrupted print job.
6	Drawer	Displays the paper source set for the interrupted print job.

■ [Fax/InternetFax Job] Item list

The Fax/InternetFax Job page displays the following information for each fax transmission job.

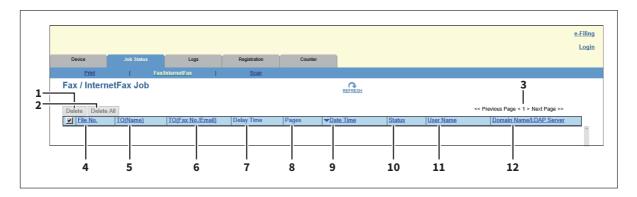


	Item name	Description
1	[Delete] button	The selected fax job is deleted.
2	[Delete All] button	All fax jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	File No.	Displays the file number (001 to 100) to identify the fax transmission job.
5	TO(Name)	Displays the destination name set for the fax transmission job.
6	TO(Fax No./Email)	Displays the fax number or E-mail address of the destination.
7	Delay Time	Displays the delayed time set for the fax transmission job.
8	Pages	Displays the number of pages of the fax transmission job.
9	Date Time	Displays the date and time when the fax transmission job is released from the touch panel or client computer using the N/W-Fax driver. They are displayed using "year, month, day, hour, minute, and second". For example: 2016/12/24 12:34:56
10	Status	Displays the status of the fax transmission job. Possible values of status are: [Delayed], [Wait], [Line1], [Line2], and [Network].
11	User Name	Displays the user account name of the owner of the fax transmission job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the fax transmission job.

Tip

- Transmission jobs that have finished their transmission are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.

■ [Scan Job] Item list

The Scan Job page displays the following information for each scan job.

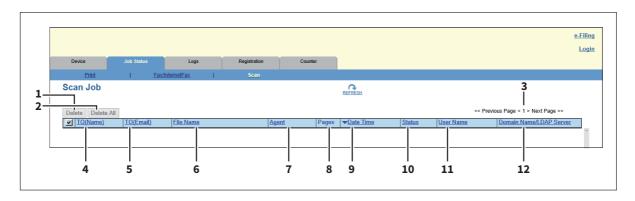

	Item name	Description
1	[Delete] button	The selected scan job is deleted.
2	[Delete All] button	All scan jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	TO(Name)	Displays the destination (name) to where the scanned document is sent via an E-mail.
5	TO(Email)	Displays the destination (E-mail address) to where the scanned document is sent via an E-mail.
6	File Name	When the job performs the Scan to File or USB or Scan to e-Filing, it displays the document name to be stored. File names are displayed using 10 asterisks (*) when the Confidentiality Setting is enabled. P.169 "Setting up Confidentiality Setting"
7	Agent	Displays the agent of the scan job. Possible values of agent are: [Email], [Save as file], [Store to e-Filing], and [Store to USB Media].
8	Pages	Displays the number of pages of the scan job.
9	Date Time	Displays the date and time when the scan job is released from the touch panel. They are displayed using "year, month, day, hour, minute, and second". For example: 2016/12/24 12:34:56
10	Status	Displays the status of the scan job. Possible values of status are: [Wait], [Suspended], [Processing], and [Scanning]
11	User Name	Displays the user account name who is the owner of the scan job.
12	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who is the owner of the scan job.

Tip

- Scan jobs that have finished being scanned are displayed in the [Logs] tab.
- Click a table heading item to refresh the page and reorder the print job list in the specified order.


■ [Multi Station Print Job] Item list

The Multi Station Print Job page is divided into Jobs and Printed Jobs.

The Multi Station Print Job page displays jobs that are printed with the [Multi Station Print] function. You can select this page only when you are logged in with a user account with administrator privileges in the access policy mode.

Note

You need the Multi Station Print Enabler option to use the [Multi Station Print] function. Contact your service technician for details.

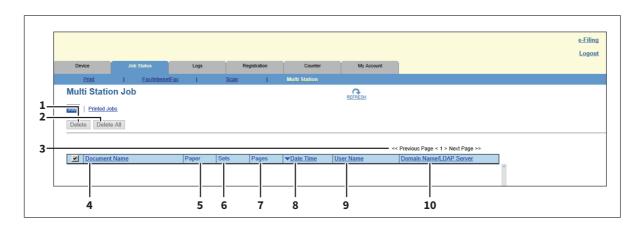

	Item name	Description
1	[Delete] button	The selected print job is deleted.
2	[Delete All] button	All print jobs are deleted.
3	Select Page	Allows you to select a page when there are 101 items or more.
4	Document Name	Displays the document name of the print job.
5	Paper	Displays the paper size specified on the print job.
6	Sets	Displays the number of copies specified on the print job.
7	Pages	Displays the total number of pages in the print job.
8	Date Time	Displays the date and time when the print job was received from the client computer. The date and time are displayed in "YYYY/MM/DD HH:MM:SS" format. Example: 2016/12/24 12:34:56
9	User Name	Displays the owner user account name of the print job.
10	Domain Name/LDAP Server	Displays the domain name or LDAP server of the owner user account of the print job.

[Job Status] How to Set and How to Operate


- P.30 "Displaying print jobs"
- P.30 "Deleting jobs"
- P.31 "Deleting all jobs"
- P.31 "Releasing print jobs"
- P.32 "Checking recovery information"

■ Displaying print jobs

Click the [Job Status] tab and click the [Print Job], [Fax/InternetFax Job], [Scan Job], or [Multi Station Print] menu.

The Job page is displayed.

- If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.
- If jobs are not displayed in the list, click the [REFRESH] icon at the upper right of the page.

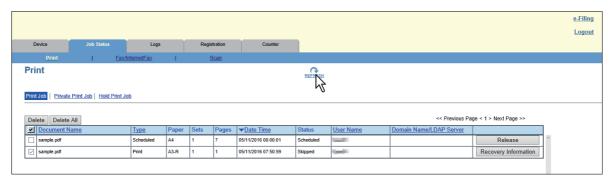

See the following for details on displayed items:

- P.24 "[Print Job] Item list"
- P.27 "[Fax/InternetFax Job] Item list"
- P.28 "[Scan Job] Item list"
- P.29 "[Multi Station Print Job] Item list"

Tip


Completed jobs are displayed in the [Logs] tab.

■ Deleting jobs

Click the [Job Status] tab and click the [Print], [Fax/InternetFax], [Scan], or [Multi Station Print] 1 menu.

The Job page is displayed.

- If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.
- Select the check box next to the job that you want to delete.

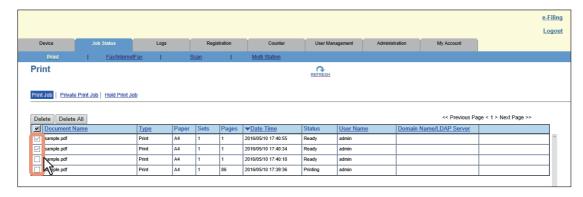

Click [Delete].

The confirmation dialog box appears.

Click [OK].

The selected job is deleted.



Click the [REFRESH] icon at the upper right of the page to confirm the deletion.



You cannot use the Print Job page to delete fax/Internet Fax jobs and E-mail reception print jobs.


■ Deleting all jobs

Click the [Job Status] tab and click the [Print], [Fax/InternetFax], [Scan], or [Multi Station Print]menu.

The Job page is displayed.

- If it is a [Print] job, click [Print Job], [Private Print Job], or [Hold Print Job] and select the job.
- Click [Delete All].

The confirmation dialog box appears.

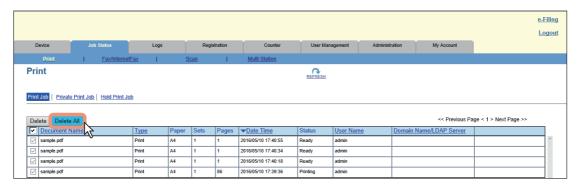

Click [OK].

Jobs are deleted.

Note

Click [REFRESH] at the top right of the page to check if jobs are deleted. It may take a while to delete all jobs.

■ Releasing print jobs

You can print jobs that are stored in the queue.


Note

Private print jobs and hold print jobs cannot be released from TopAccess.

- Click the [Job Status] tab and click the [Print] menu or [Multi Station Print] menu. The Job page is displayed.
- Click [Print Job]. The Print Job page is displayed.

3 Click [Release] on the right of the print job(s) you want to print.

The selected print job is immediately printed.

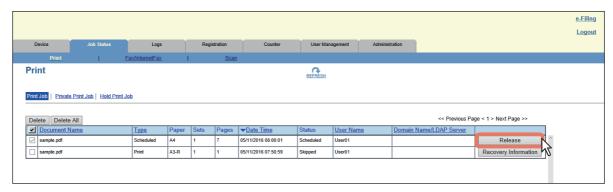

■ Checking recovery information

You can check the conditions to restart a print job which has been skipped while the job skip feature was enabled.


Tip

For the job skip feature, see the following:

P.168 "Setting up Job Skip Control"

- 1 Click the [Job Status] tab and click the [Print] menu or [Multi Station Print] menu. The Job page is displayed.
- 2 Click [Print Job].
 The Print Job page is displayed.
- Click [Recovery Information] on the right of the print job whose job status is displayed as "Skipped".

The conditions to restart the print job are displayed.

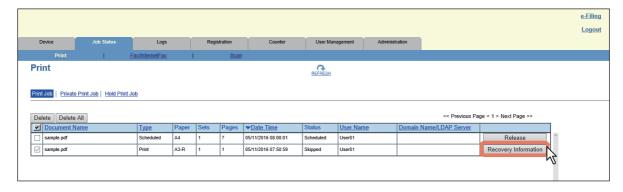

[Logs] Tab Page

Using TopAccess, end users can display print job logs, transmission journals, reception journals, and scan job logs.

[Logs] Tab Page Overview	
[View Logs] Item list	
[Export Logs] Item list <access mode="" policy=""></access>	
[Log Settings] Item list <access mode="" policy=""></access>	
[Logs] How to Set and How to Operate	45
Displaying job logs	
Exporting logs	

[Logs] Tab Page Overview

You can check the job history.

- P.34 "[View Logs] Item list"
- P.42 "[Export Logs] Item list <access policy mode>"
- P.44 "[Log Settings] Item list <access policy mode>"

Note

Check the logs periodically to ensure that there is no unauthorized access to the equipment as a result of spoofing.

Tip


- Logs are recorded from the moment the equipment is turned on until it is shut down. Log recording continues also after entering the Super Sleep mode.
- Up to 100 logs are displayed in chronological order with the most recent first. You can check up to 5,000 logs in Print Job Log Export, Fax Transmission Journal Export, Fax Reception Journal Export, and Scan Log Export, and up to 10,000 logs in Messages Log Export by exporting them. The oldest logs are deleted when the number of logs exceeds the maximum limit.
- The default Administrator and Auditor roles can check all logs. For more information on default roles and privileges, see the following:
 - P.148 "Default roles and privileges"
- When user authentication is enabled, you can check the logs associated with the user account you used to log in. Furthermore, a user account to which the default Administrator or Auditor role have been assigned can check all logs.

■ [View Logs] Item list

- P.34 "Print Log"
- P.26 "[Recovery Information] screen"
- P.36 "Reception Journal"
- P.37 "Scan Log"
- P.40 "Application Log"
- P.41 "Message Log <access policy mode>"

□ Print Log

The Print Log page displays the following information for each print job log.

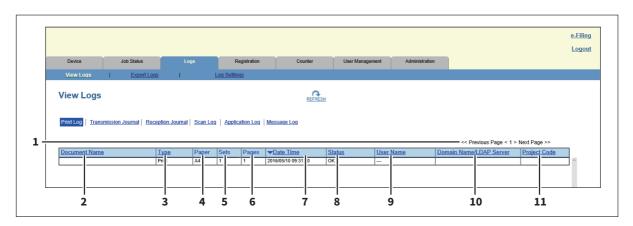

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	Document Name	Displays the document name of the print job.
3	Туре	Displays the print job type.
4	Paper	Displays the paper size of the print jobs.
5	Sets	Displays the number of copies set for print jobs.
6	Pages	Displays the number of pages of the print job.


	Item name	Description
7	Date Time	Displays the date and time that the print job was released from the client computers.
8	Status	Displays the status of the print log.
9	User Name	Displays the user account name of the owner of the print job.
10	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the print job.
11	Project Code	Displays the Project Code of the print job.

Tip

Click a table heading item to refresh the page and reorder the print log list in the specified order.

□ Transmission Journal

The Transmission Journal page displays the following information for each transmission journal.

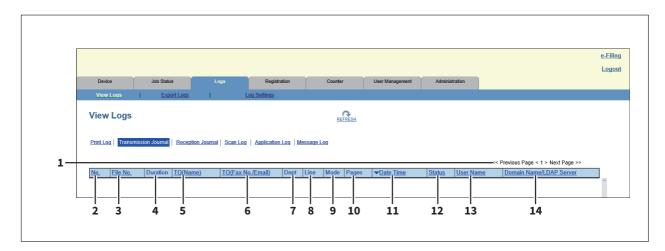

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	No.	Displays the serial number of the journals.
3	File No.	Displays the file number to identify the received job.
4	Duration	Displays the time length taken for the transmissions. If it takes more than 1 hour, "59:59" is indicated.
5	TO (Name)	Displays the destination name set for the transmission job.
6	TO (Fax No./Email)	Displays the fax number or E-mail address of the destination for the transmission job.
7	Dept	Displays the department code if department management is enabled.
8	Line	Displays the line used.
9	Mode	Displays the transmission mode*.
10	Pages	Displays the number of pages of the transmission job.
11	Date Time	Displays the date and time the transmission job was performed.
12	Status	Displays the result of the transmission.
13	User Name	Displays the user account name of the owner of the transmission job.

	Item name	Description
14	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the transmission job.

The transmission mode is displayed by a combination of a 2-digit letter code, a 3-digit numeric code, and up to a 4-digit supplemental code. For example: EC 603


2-digit letter code (Communication Mode)	1st numeric code (bps)	2nd numeric code (Resolution)	3rd numeric code (Mode)	Up to 4 digit supplemental code
EC: ECM	0: 2400	0: 8x3.85	0: MH	P: Polling
G3: G3	1: 4800	1: 8x7.7	1: MR	SB: Mailbox
ML: E-mail	2: 7200	2: 8x15.4	2: MMR	SR/R: Relay mailbox
	3: 9600	4: 16x15.4	3: JBIG	SF/F: Forward mailbox
	4: 12000	8: 300 dpi		ML: Internet Fax
	5: 14400	B: 600 dpi		I: N/W-Fax
	6: V.34	D: 150 dpi		O: Offramp Gateway

Tip

Click a table heading item to refresh the page and reorder the transmission journal list in the specified order.

■ Reception Journal

The Reception Journal page displays the following information for each reception journal.

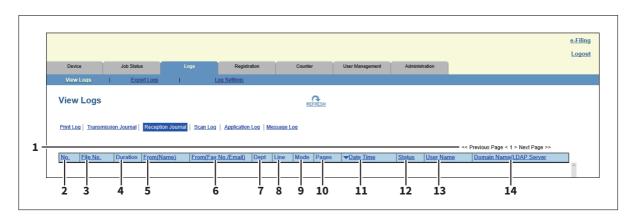

	Item name	Description	
1	Select Page	Allows you to select a page when there are 101 items or more.	
2	No.	Displays the serial number of the journals.	
3	File No.	Displays the file number to identify the received job.	
4	Duration	Displays the time taken for the receptions. If it takes more than 1 hour, "59:59" is indicated.	
5	From (Name)	Displays the sender's name of the received job.	
6	From (Fax No./Email)	Displays the fax number or E-mail address of the sender for the received job.	
7	Dept	Displays the department code if the department management is enabled.	
8	Line	Displays the line used.	
9	Mode	Displays the reception mode*.	
10	Pages	Displays the number of pages of the received job.	
11	Date Time	Displays the date and time of receiving the job.	

		Item name	Description
1	L2	Status	Displays the result of the reception.
1	L3	User Name	Displays the user account name of the owner of the received job.
1	L4	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the received job.

The reception mode is displayed by a combination of a 2-digit letter code, a 3-digit numeric code, and up to a 4-digit supplemental code. For example: EC 603


2-digit letter code (Communication Mode)	1st numeric code (bps)	2nd numeric code (Resolution)	3rd numeric code (Mode)	Up to 4 digit supplemental code
EC: ECM	0: 2400	0: 8x3.85	0: MH	P: Polling
G3: G3	1: 4800	1: 8x7.7	1: MR	SB: Mailbox
ML: E-mail	2: 7200	2: 8x15.4	2: MMR	SR/R: Relay mailbox
	3: 9600	4: 16x15.4	3: JBIG	SF/F: Forward mailbox
	4: 12000	8: 300 dpi		ML: Internet Fax
	5: 14400	B: 600 dpi		I: N/W-Fax
	6: V.34	D: 150 dpi		O: Onramp Gateway

Tip

Click a table heading item to refresh the page and reorder the reception journal list in the specified order.

☐ Scan Log

The Scan Log page displays the following information for each scan job log.

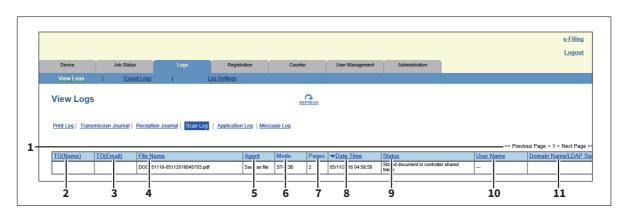

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	TO (Name)	Displays the destination (name) to where the scanned document was sent via an E-mail.
3	TO (Email)	Displays the destination (E-mail address) to where the scanned document was sent via an E-mail.
4	File Name	Displays the file name stored in a shared folder or e-Filing. This item may not be displayed depending on the access policies.
5	Agent	Displays the agent of the scan job.
6	Mode	Displays the transmission mode using 6-letter codes*.
7	Pages	Displays the number of pages of the scan job.

	Item name	Description
8	Date Time	Displays the date and time when the scan job was released from the touch panel.
9	Status	Displays the detailed result status of the scan job.
10	User Name	Displays the user account name of the owner of the scan job.
11	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account who was the owner of the scan job.

^{*} Codes are displayed in the following format. Code format: <u>AA B C D E</u>

AA: T	AA: This describes the job type.		
CA	Copy and File Copy and Store to e-Filing		
СТ	Copy to e-Filing (without printing)		
FS	Relay Mailbox Transmission		
FF	Fax Received Forward		
FE	Internet Fax Received Forward		
ST	Scan to File or USB Scan to e-Filing Scan to Email		
FA	Fax and Save as File		
PA	Print and e-Filing		
PT	Print to e-Filing		
IA	N/W-Fax and Save as File		
BE	e-Filing to Email		
RS	Remote Scan or Web Services Scan		
MS	Meta Scan		
EN	E-mail notification		
WS	WS Scan		
RI	Save Result Report as File Email Result Report		
AT	Save in Storage for Applications		

B: Th	B : This describes the transmission type.		
0	e-Filing		
1	Email (SMTP)		
2	FTP		
3	SMB		
4	Save in a local folder		
5	NetWare IPX/SPX		
6	USB		
7	NetWare TCP/IP		
8	FTPS		
9	Remote Scan or Web Services Scan		

C: This	C: This describes the resolution.		
0	100 dpi		
1	150 dpi		
2	200 dpi		
3	300 dpi		
4	400 dpi		
5	600 dpi		
А	8 x 3.85 (line/mm) (203 x 98)		
В	8 x 7.7 (line/mm) (203 x 196)		
С	8 x 15.4 (line/mm) (203 x 391)		
D	16 x 15.4 (line/mm) (400 x 391)		

D: Th	D : This describes the file format.		
0	e-Filing		
1	TIFF (Multi)		
2	TIFF (Single)		
3	PDF (Multi) or Encrypted PDF (Multi)		
4	JPEG		
5	PDF (Single) or Encrypted PDF (Single)		
6	Slim PDF (Multi)		
7	Slim PDF (Single)		
8	XPS (Multi)		
9	XPS (Single)		
Α	DIB		
В	PDF/A (Multi)		
С	PDF/A (Single)		
D	Searchable PDF(Multi) or Searchable Encrypted PDF (Multi)		
Е	Searchable PDF(Single) or Searchable Encrypted PDF (Single)		
F	Searchable Slim PDF (Multi)		
G	Searchable Slim PDF (Single)		
Н	Searchable PDF/A (Multi)		
I	Searchable PDF/A (Single)		
J	DOCX (Multi)		
K	DOCX (Single)		
L	XLSX (Multi)		
М	XLSX (Single)		
N	PPTX (Multi)		
0	PPTX (Single)		

E: This describes the file color mode.		
В	Black	
G	Gray Scale	
С	Color	
М	Mix	

Note


The file format is recorded as DIB in the scan log if the data are scanned in BMP, JPEG, TIFF, or PNG format using the WIA (Windows Image Acquisition) driver.

Tip

Click a table heading item to refresh the page and reorder the scan log list in the specified order.

□ Application Log

The Application Log page displays the following information for each application log item.

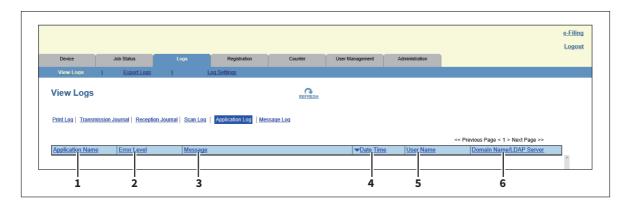


	Item name	Description
1	Application Name	Displays the application name where the error occurred.
2	Error Level	Displays the error level. Error — Errors that may not be cleared by some users. Warning — Errors that may be cleared by the administrator. Information — Errors that may be cleared by general users, or not errors.
3	Message	Displays the message if there is any.
4	Date Time	Displays the date and time of the error.
5	User Name	Displays the user account name that is related to the message.
6	Domain Name / LDAP Server	Displays the domain name or LDAP server of the user account that is related to the message.

■ Message Log <access policy mode>

The Message Log page displays errors which have occurred on your model.

Tip

- Displays only when you are logged in with a user account which is granted administrator privileges or display privilege in the access policy mode.
- The default Administrator and Auditor roles can check all message logs. For more information on default roles and privileges, see the following:
 - P.148 "Default roles and privileges"

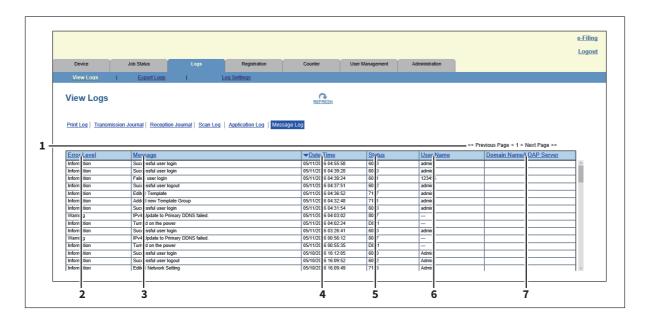

	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	Error Level	Displays the error level. Error — Error that user and administrator may not be recoverable. Warning — Error that administrator is recoverable. Information — Error that end user is recoverable or that event is not error.
3	Message	Displays the message if available.
4	Date Time	Displays the date and time of the error.
5	Status	Displays the error code.
6	User Name	Displays the user account name related to the message.
7	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account related to the message.


For details on error codes and error messages, refer to "Checking the Equipment Status with TopAccess" in the Software Troubleshooting Guide.

■ [Export Logs] Item list <access policy mode>

You can erase logs or export them in a file.

Tip

- Displays only when you are logged in with a user account which is granted administrator or display privileges in the access policy mode.
- The exported data file can be either CSV format or XML format. [CSV] is set as the default.
- You can export up to 5,000 logs in Print Job Log Export, Fax Transmission Journal Export, Fax Reception Journal Export, and Scan Log Export, and up to 10,000 logs in Messages Log Export. The oldest logs are deleted when the number of logs exceeds the maximum limit.

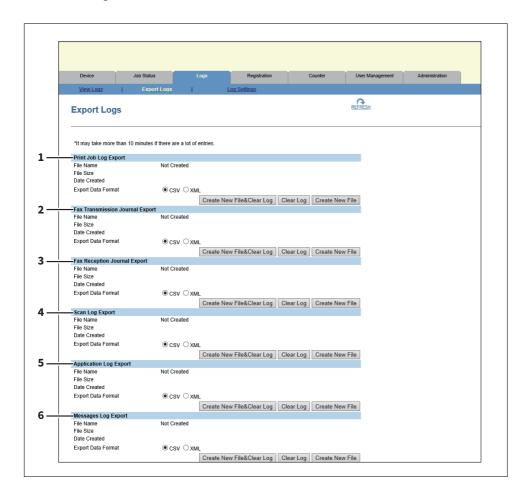

	Item name	Description
1	Print Job Log Export	You can erase print logs or export (download) them in a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.
2	Fax Transmission Journal Export	You can erase the transmission journal or export (download) it to a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.

	Item name	Description	
3	Fax Reception Journal Export	You can erase the reception journal or export (download) it to a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.	
4	Scan Log Export	You can erase scan logs or export (download) them in a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.	
5	Application Log Export	You can erase application logs or export (download) them in a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.	
6	Messages Log Export	You can erase message logs or export (download) them in a file. Create New File & Clear Log — Creates a file according to the file format of the export data. Erases logs after a file has been created. You can display or download by clicking the created file. Clear Log — Erases logs. Create New File — Creates a file according to the file format of the export data. You can display or download by clicking the created file.	

■ [Log Settings] Item list <access policy mode>

P.44 "Log Authentication"


P.44 "Log size"

Tip

Displays only when you are logged in with a user account which is granted administrator or display privileges in the access policy mode.

□ Log Authentication

You can specify whether or not to use log authentication.

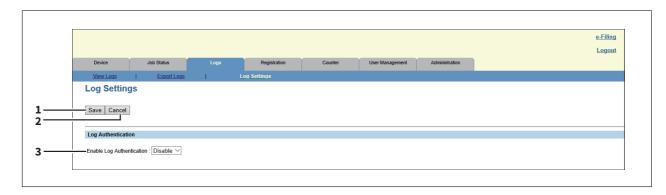

	Item name	Description
1	[Save] button	Saves log authentication settings.
2	[Cancel] button	Cancels the settings.
3	Enable Log Authentication	Enables log authentication. When log authentication is enabled, the log display for users will be restricted according to access policies.
		 Enable — Enables log authentication. Display will be restricted according to access policies. Disable — Disables log authentication. Logs for all users will be displayed.

□ Log size

Log size displays the log size.



	Item name	Description
1	Print Log	Displays the log size of print jobs.
2	Transmission Journal	Displays the log size of transmission journals.
3	Reception Journal	Displays the log size of reception journals.
4	Scan Log	Displays the log size of scan jobs.
5	Message Log	Displays the log size of message logs.
6	Application Log	Displays the log size of Application Logs.

[Logs] How to Set and How to Operate

- P.45 "Displaying job logs"
- P.46 "Exporting logs"

■ Displaying job logs


Tip

You can display logs for jobs which are performed on this equipment. Up to 100 logs are displayed in chronological order with the most recent first. When the number of logs exceeds 101, select the page you want to view.

- Click the [Logs] tab and click the [View Logs] menu. 1
- Click [Print Log], [Transmission Journal], [Reception Journal], [Scan Log], [Application Log], or [Message Log].

The log page is displayed.

Click the [REFRESH] icon at the upper right of the page to update the information.

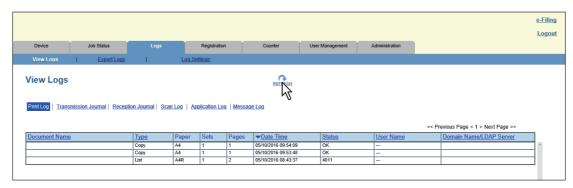


Tip

Click a table heading item to refresh the page and reorder the list in the specified order.

Exporting logs

You must be logged in to the access policy mode to export logs. For information on logs that can be exported, see the following: P.42 "[Export Logs] Item list <access policy mode>"

- Log in to TopAccess in access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Logs] tab and then click the [Export Logs] menu.

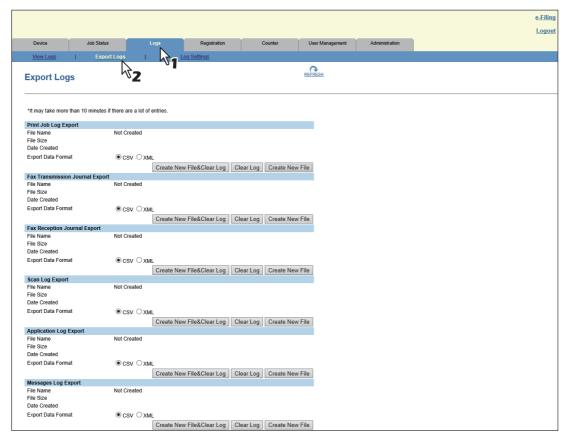

Tip

File sizes are displayed in bytes.

- Select the file format (CSV/XML) for the log you want to export.
- Create the file by clicking the [Create New File] button for the log you want to export.
- Click the file name.
- Save the log file.

Your browser will display a confirmation dialog box. Select the process for saving the log as a file and follow the displayed instructions.

[Registration] Tab Page

This section contains instructions on how to register templates, the address book, and mailboxes.

[Registration] Tab Page Overview	48
[Template] Item list	
Template settings	
[Address Book] Item list	
[Inbound FAX routing] Item list	
[Registration] How to Set and How to Operate	98
Managing templates	
Managing address book	
Managing mailboxes	

[Registration] Tab Page Overview

	You can register templates, the address book, and inbound fax routing
	P.48 "[Template] Item list" P.56 "Template settings" P.83 "[Address Book] Item list" P.92 "[Inbound FAX routing] Item list"
 [Template] Item list
	P.48 "[Template Groups] screen" P.51 "[Group Properties] screen"

☐ [Template Groups] screen

P.52 "[Private Templates] screen" P.53 "[Public Templates] screen" P.55 "[Change Group Password] screen" P.55 "[Template Properties] screen"

You can check the template registration status.


You can save agent settings for copy, fax/Internet Fax, and scan operated from the touch panel on your equipment into a template. Users can select the template when they copy, fax/Internet Fax, or scan from the touch panel, for easy operation.

Templates are managed in groups and up to 60 templates can be saved in a group.

There can be one public template group, and up to 200 private template groups.

Group type	Description	Max. number of groups	Max. templates saved
Public Template Groups	The public template group can be created and maintained only by users who are granted administrator privileges in the access policy mode. Registered templates are available for all users.	1	60
Private Template Groups	Users can create templates in private template groups. Users can also set passwords on groups and registered templates to restrict the use of them. Groups and templates without a password are available to all users.	200	60

Public Template Groups

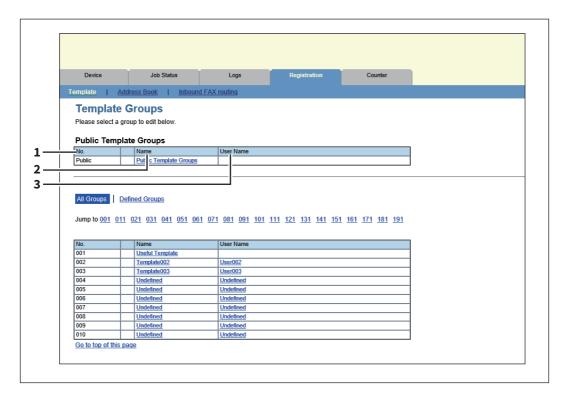


	Item name	Description
1	No.	Displays "Public" for the public template group.
2	Name	Displays "Public Template Groups" for the public template group. You can click to check and edit the registered templates. P.105 "Displaying public templates"
3	User Name	-

Tip

Templates in the public template group are created and managed by users who are granted administrator privileges in the access policy mode. See the following description for registering public template:

P.100 "Registering or editing templates"

Private Template Groups

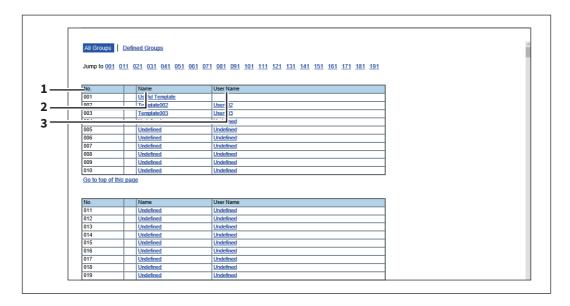


	Item name	Description
1	No.	Displays the group number.
2	Name	Displays the group name. Click the name of a registered template to check and edit the registered templates. P.98 "Registering and editing private template groups" Click [Undefined] to register templates. P.51 "[Group Properties] screen"
3	User Name	Displays the group owner name. Click the name of a registered user name to check and edit the registered templates. P.98 "Registering and editing private template groups" Click [Undefined] to register templates. P.51 "[Group Properties] screen"

Tip

- Click [All Groups] or [Defined Groups] to change how private template groups are displayed.
- See the following descriptions for how to register private template groups and how to create templates:
 - P.98 "Registering and editing private template groups"
 - P.100 "Registering or editing templates"

☐ [Group Properties] screen


You can register a new private template group.

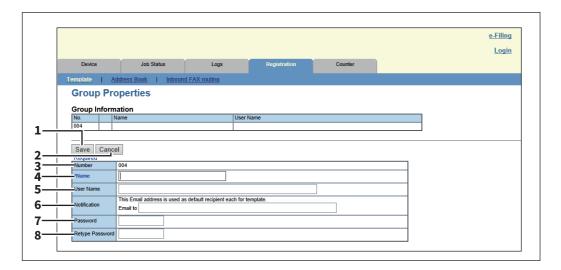

	Item name	Description
1	[Save] button	Creates a private template group with the entered data. The [Private Templates] screen is displayed and you can edit the template you are registering. P.52 "[Private Templates] screen"
2	[Cancel] button	Cancels the settings.
3	Number	Displays the private group number.
4	Name	Enter the name of the private group.
5	User Name	Enter the owner name of the private group.
6	Notification	Enter the E-mail address to be displayed as the default recipient when notification is enabled in any template. You can select whether notification will be sent or not for each template.
7	Password	Enter the password if setting a password to the private group. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*).
8	Retype Password	Enter the same password again for a confirmation.

☐ [Private Templates] screen

You can edit the template you are registering.

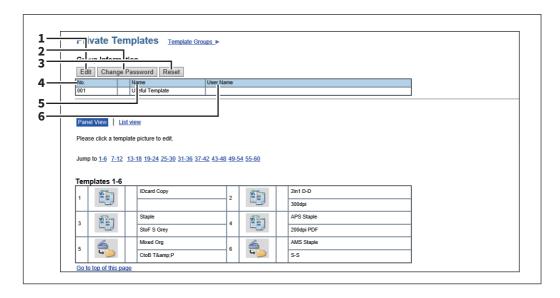


Group Information

	Item name	Description
1	[Edit] button	Allows you to edit the private template group information. P.51 "[Group Properties] screen"
2	[Change Password] button	Allows you to change the password for the private template group. P.55 "[Change Group Password] screen"
3	[Reset] button	Resets registration of the private template group.
4	No.	Displays the number of the private template group.
5	Name	Displays the name of the private group.
6	User Name	Displays the owner of the private template group.

Template list

You can display the template list. You can change the view by clicking [Panel View] or [List View].


Panel View

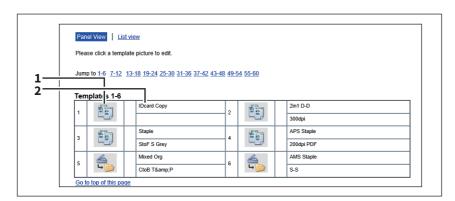

	Item name	Description
1	Image	Displays icons of the templates. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"

	Item name	Description
2	Name 1/Name 2	Displays the names registered on the touch panel. P.56 "Panel Setting"


List View

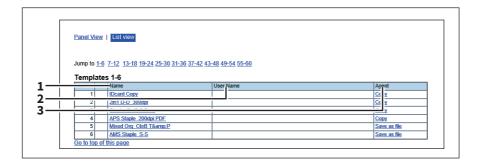

	Item name	Description
1	Name	Displays the names registered on the touch panel. P.56 "Panel Setting" Click [Undefined] to register a new template. P.51 "[Group Properties] screen"
2	User Name	Displays the user name registered on the panel setting. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"
3	Agent	Displays the agent registered to the template. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"

☐ [Public Templates] screen

Templates you are registering can be edited by users who are granted administrator privileges in the access policy mode.

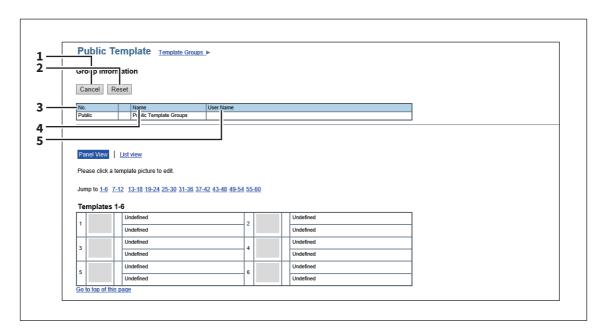


Group Information

	Item name	Description
1	[Cancel] button	Returns to the [Template Groups] screen without updating public template group information.
2	[Reset] button	Resets registration of the public template group.
3	No.	Displays the number of the public template group.
4	Name	Displays the name of the public group.
5	User Name	Displays the owner of the public template group.

Template list


You can display the template list. You can change the view by clicking [Panel View] or [List View].

Panel View

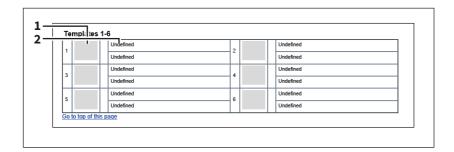

	Item name	Description
1	Image	Displays icons of the templates. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"
2	Name 1/Name 2	Displays the names registered on the touch panel. □ P.56 "Panel Setting"

List View

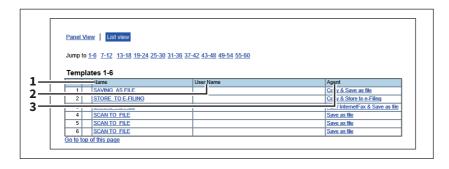


	Item name	Description
1	Name	Displays the names registered on the touch panel. P.56 "Panel Setting" Click [Undefined] to register a new template. P.51 "[Group Properties] screen"
2	User Name	Displays the user name registered on the panel setting. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"

	Item name	Description
3	Agent	Displays the agent registered to the template. Click [Undefined] to register a new template. P.51 "[Group Properties] screen"

☐ [Change Group Password] screen

You can change the password of a private template group.

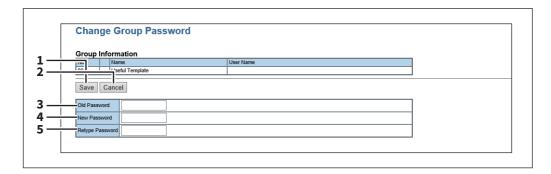


	Item name	Description
1	[Save] button	Saves the new password.
2	[Cancel] button	Cancels the password change.
3	Old Password	Enter the current password.
4	New Password	Enter the new password.
5	Retype Password	Enter the same password again for a confirmation.

☐ [Template Properties] screen

You can set the template you are registering.

When you select a function, the setting status of each function and the button to open the edit screen appear at the bottom of the screen.

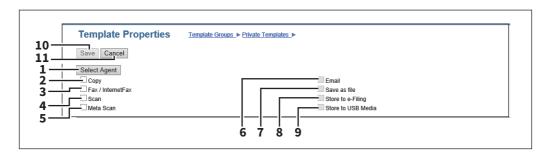

	Item name	Description
1	[Select Agent] button	Allows you to set the selected agent. You can set the template details when creating a new agent. P.56 "Template settings"
2	Сору	You can create a template which copies the document. Select this agent if you want to print a copy when you are sending a document to another destination. You can also specify the [Save as file] agent or [Store to e-Filing] agent at the same time.
3	Fax / InternetFax	You can create a template for fax or Internet Fax transmission. You can also specify the [Save as file] agent at the same time.

	Item name	Description
4	Scan	You can create a template for a scan. You need to select either the [Email] agent, [Save as file] agent, [Store to e-Filing] agent, or [Save to USB Media] agent at the same time. You can specify up to two agents for a scan template.
5	Meta Scan	This agent is enabled when the meta scan option is installed. You can create a template for the meta scan option. Refer to the document provided by the vendor of the application which supports meta scan option for details.
6	Email	You can transmit the document as an E-mail attachment.
7	Save as file	You can save the document in a shared folder.
8	Store to e-Filing	You can store the document in the e-Filing.
9	Save to USB Media	You can save the document in USB media.
10	[Save] button	Saves the template contents.
11	[Cancel] button	Cancels the operation.

■ Template settings


You can specify details to register in private templates and public template.

Use these buttons that are displayed as you select a function to create a template.

- P.56 "Panel Setting"
- P.58 "Destination Setting"
- P.63 "InternetFax Setting"
- P.64 "Fax Setting"
- P.66 "Email Setting"
- P.70 "Save as file Setting"
- P.75 "Box Setting"
- P.75 "Store to USB Device Setting"
- P.78 "Scan Setting"
- P.81 "Extended Field settings"
- P.81 "Extended Field Properties"
- P.82 "Password Setting"

□ Panel Setting

In the Panel Setting page, specify how the icon for the template is displayed in the touch panel, and the notification settings for the template.

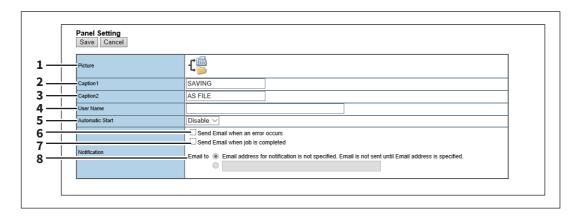

	Item name	Description
1	Picture	This indicates the icon that will be displayed in the touch panel. The icon is automatically designated according to the agent that you select.

	Item name	Description
2	Caption1	Enter the text that will be displayed next to the icon in the touch panel. You can enter up to 11 alphanumerical characters.
3	Caption2	Enter the text that will be displayed next to the icon in the touch panel. You can enter up to 11 alphanumerical characters.
4	User Name	Enter the owner name of the template. You can enter up to 30 alphanumerical characters.
5	Automatic Start	Select whether the automatic start function is enabled or disabled. When this is enabled, the operation will be automatically started when you press the template button from the TEMPLATE menu on the touch panel without pressing the [START] button or [Scan].
	Setting are different, or only th	of the User Authentication for Scan to E-mail and the User Management e User Authentication for Scan to E-mail is enabled, you need to enter the user r Authentication for Scan to E-mail also when recalling the template with the ed.
6	Notification — Send Email when an error occurs	Select this to send a notification message to the specified E-mail address when an error occurs.
7	Notification — Send Email when job is completed	Select this to send a notification message to the specified E-mail address when a job is completed.
8	Notification — Email to	Enter a recipient E-mail address for the notification message. You can either select an option to send it to the E-mail address set in a private group or specify an E-mail address.

Note

When you enable the Notification setting, make sure to set up the E-mail settings in the [Email] submenu of the [Setup] menu in the TopAccess access policy mode. For instructions on how to set up the E-mail settings, see the following section:

P.292 "Setting the E-mail settings"

Destination Setting

In the Recipient List page, you can specify the destinations to which the Fax, Internet Fax, or Scan to E-mail document

 
When you are setting up the destinations for the Scan to Email agent, you can only specify the E-mail addresses for the destinations.

When you are setting up the destinations for the Fax/InternetFax agent, you can specify both fax numbers and E-mail addresses for the destinations.

When Creating a Fax/Internet Fax agent:



When Creating an Email agent:



Note

The Fax Unit must be installed in this equipment to specify the fax numbers of the destinations.

You can specify the destinations by entering their E-mail addresses or fax numbers manually, selecting destinations from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP

- P.58 "Entering the destinations manually"
- P.59 "Selecting the destinations from the address book"
- P.60 "Selecting the groups from the address book"
- P.61 "Searching for destinations in the LDAP server"
- P.63 "Removing the contacts from the Recipient List"

Entering the destinations manually

You can add a destination manually to the Recipient List.

Note

You cannot enter destinations if [Restriction of Destination Selection Method]-[Prohibit Direct Entry] is enabled. P.169 "Restriction of Destination Selection Method"

- Click [Destination Setting] (when creating a Fax/Internet Fax agent) or [TO: Destination Setting] / 1 [CC: Destination Setting] / [BCC: Destination Setting] (when creating an Email agent) to open the Recipient List page.
- Click [New]. 2



The Contact Property page is displayed.

Enter the E-mail address or fax number of the destination, in the [Destination] box.



Note

You can specify the fax number for the destination only when the Fax Unit is installed.

Tip

When the fax number is entered, select [G3 Fax] in the [Fax Type] box. When the E-mail address is entered, select [InternetFax] in the [Fax Type] box.

Click [OK].

The destination is added to the Recipient List page.

Repeat steps 2 to 4 to add all additional destinations that you require.

Tip

You can remove the destinations you added to the Recipient List before saving the destination settings. P.63 "Removing the contacts from the Recipient List"

Click [Save].



The contacts are added as destinations.

Selecting the destinations from the address book

You can select destinations from the address book in this equipment.

Note

You cannot select destinations from the address book if [Restriction of Destination Selection Method]-[Prohibit Use Of Local Address Book] is enabled.


P.169 "Restriction of Destination Selection Method"

- Click [Destination Setting] to open the Recipient List page.
- Click [Address Book].



The Address Book page is displayed.

Select the [Email] check boxes of users you want to add as the E-mail recipients or Internet Fax recipients, and select the [Fax] check boxes of users you want to add as the Fax recipients.

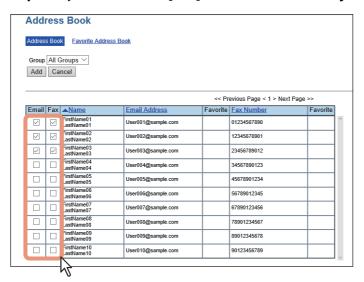

Note

- When you are creating a Scan to E-mail template, only the [Email] check boxes are displayed in the Address
- You can specify the fax number for the destination only when the Fax Unit is installed.

Tip

If you want to sort the Recipient List by a specific group, select the desired group name in the [Group] box.

Click [Add].

The selected destinations are added to the Recipient List page.

You can remove the destinations you added to the Recipient List before saving the destination settings. P.63 "Removing the contacts from the Recipient List"

Click [Save]. 5



The contacts are added as destinations.

Selecting the groups from the address book

You can select groups from the address book.

Note

You cannot select destinations from the address group if [Restriction of Destination Selection Method]-[Prohibit Use Of Local Address Book] is enabled.

P.169 "Restriction of Destination Selection Method"


Click [Destination Setting] to open the Recipient List page. 1

Click [Address Group]. 2



The Address Group page is displayed.

Select the [Group] check boxes that contain the desired destinations.

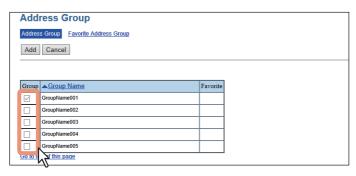

Click [Add].

All recipients in the selected groups are added to the Recipient List page.

You can remove the destinations you added to the Recipient List before saving the destination settings. P.63 "Removing the contacts from the Recipient List"

Click [Save].



The contacts are added as destinations.

Searching for destinations in the LDAP server

 
You can search for destinations in the registered LDAP server and in the address book.

Note

The LDAP server used for the search must be registered by a user who is granted administrator privileges in access policy mode.


P.210 "LDAP Client settings"

- Click [Destination Setting] to open the Recipient List page.
- Click [Search]. 2



The Search Contact page is displayed.

Select the directory service name that you want to search for in the [Directory Service Name] box, and enter the search terms in the boxes that you want to search.

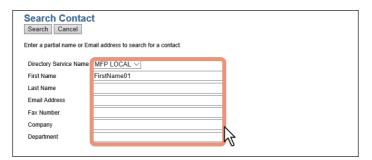

Tip

- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations who match the entries.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

Click [Search].

TopAccess will start searching for destinations in the LDAP server and the Search Address List page will display the results.

Select the [Email] check boxes of users you want to add as the E-mail recipients or Internet Fax recipients, and select the [Fax] check boxes of users you want to add as Fax recipients.

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.



Note

- You can specify the fax number for the destination only when the Fax Unit is installed.
- The value of [company] and [department] will depend on the settings made by the user who is granted administrator privileges in the access policy mode.

Click [Add].

The selected destinations are added to the Recipient List page.

Tip

You can remove the destinations you added to the Recipient List before saving the destination settings. P.63 "Removing the contacts from the Recipient List"

Click [Save].



The contacts are added as destinations.

Removing the contacts from the Recipient List


- Click [Destination Setting] to open the Recipient List page.
- Select the check boxes of the destinations that you want to remove from the Recipient List, and click [Delete].



The selected destinations are removed from the Recipient List.

☐ InternetFax Setting


In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent.

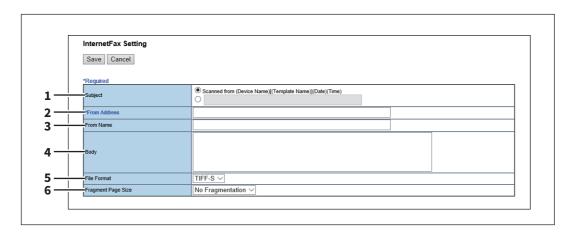

	Item name	Description
1	Subject	This sets the subject of the Internet Faxes. Select [Scanned from (Device Name) [(Template Name)] (Date) (Time)] to automatically apply the subject, or enter the desired subject in the box. If you enter manually, the subject will be [(Subject) (Date) (Time)].
2	From Address	Enter the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address. You can enter up to 140 alphanumerical characters.
3	From Name	Enter the sender name of the Internet Fax. You can enter up to 64 characters.
4	Body	Enter the body message of the Internet Fax. You can enter up to 1000 characters (including spaces).
5	File Format	Select the file format of the scanned image. Only [TIFF-S] (TIFF-FX (Profile S)) format can be selected.
6	Fragment Page Size	Select the size of the message fragmentation. [No Fragmentation] is set as the default.

☐ Fax Setting

In the Fax Setting page, you can specify how the fax will be sent.

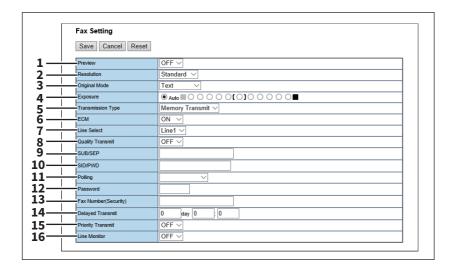

	Item name	Description
1	Preview	 Select whether or not to preview before sending a fax. ON — Select this to preview. OFF — Select this not to preview.
2	Resolution	 Select the resolution for sending faxes. Standard — Select the Standard mode as the normal resolution. This mode is suitable when you are frequently transmitting text documents with normal size characters. Fine — Select the Fine mode as the normal resolution. This mode is suitable when you are transmitting documents with small size characters or fine drawings. Ultra Fine — Select the Ultra Fine mode as the normal resolution. This mode is suitable when you are transmitting documents with very small size characters or detailed drawings.
3	Original Mode	 Select the image quality mode for sending faxes. Text — Select the Text mode as the normal image quality mode. This mode is suitable when you are transmitting text documents. Text/Photo — Select the Text/Photo mode as the normal image quality mode. This mode is suitable when you are transmitting documents which contain both texts and photos. Photo — Select the Photo mode as the normal image quality mode. This mode is suitable when you are transmitting photo documents.
4	Exposure	Select the exposure for sending faxes. Select [Auto] to automatically apply the ideal contrast, or adjust the contrast manually in 11 stages.


	Item name	Description
5	Transmission Type	 Memory Transmit — Select the Memory TX mode to automatically send the document after it has been temporarily stored to memory. This mode is useful if you want to return original files immediately. You can also send the same originals to two or more remote faxes. Direct Transmit — Select the Direct TX mode to send the original as it is being scanned. This mode is useful if you want confirmation from the remote party. Originals are not stored to memory, and you can specify only one remote fax at a time.
	You can select [Direct Transmit	when you have created a template for Fax/InternetFax (not for Saved as file). We as file setting] are combined, this item will be unselectable and will not be
6	ECM	Enable or disable the ECM (Error Correction Mode) to automatically resend any portion of the document affected by phone line noise or distortion.
7	Line Select *1	Select whether specifying the line to be used. • Auto — Select not to specify the line to be used. • Line1 — Select to use Line 1 for this Fax agent. • Line2 — Select to use Line 2 for this Fax agent if installed.
8	Quality Transmit	Select this to send a document in the Quality TX mode. This feature sends a document at a slower speed than normal so the transmission will be less affected by line conditions.
9	SUB/SEP	Enter the SUB number or SEP number if you want to set the mailbox transmission.
10	SID/PWD	Enter the password for SUB or SEP if required.
11	Polling	 Select this to set Polling communications. (Blank) — Select the blank box when you do not want to perform polling. Transmission — Select this to perform Polling Reservation that allows users to store the document in the memory. Received — Select this to perform Turnaround Polling that allows users to poll another fax after transmitting documents to the remote fax on the same phone call.
		when you have created a template for Fax/InternetFax (not to be Saved as file). ye as file setting] are combined, this item will be unselectable and will not be
12	Password	Enter the 4-digit security code for the document to be stored or received.
13	Fax Number(Security)	When you select [Transmission] at the [Polling] box, enter the security fax number that allows polling of stored document. When you select [Received] at the [Polling] box, enter the security fax number to poll the documents from remote faxes.
14	Delayed Transmit	If you enable the delayed communications for this agent, enter the day and time to send a document. Delayed transmission is disabled when the date is set to "0".
15	Priority Transmit	Select whether the document will be sent prior to other jobs.

	Item name	Description
16	Line Monitor	Select this to check the connection with the remote fax by confirming Line Monitor.

^{*1} This function is not available for some models.

☐ Email Setting

In the Email Setting page, you can specify the content of the Scan to Email document to be sent.

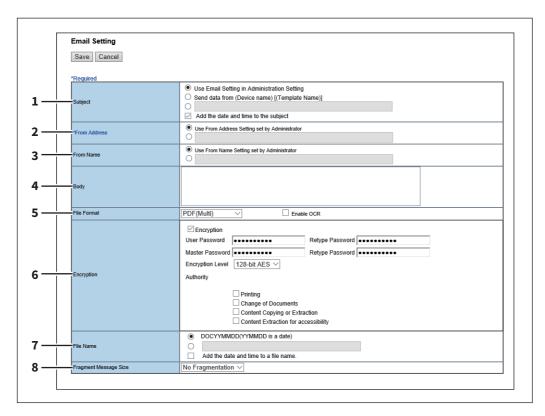

	Item name	Description
1	Subject	This sets the subject of the E-mail. Use Email Setting in Administration Setting — Select this to set the subject specified in [Administration] - [Setup] - [Email] as subject. Send data from (Device Name)[(Template Name)] — Select this to set the [(Template Name)] data sent from (Device Name) as subject. <entry box=""> — Enter the text to set as subject. Add the date and time to the Subject — Select this to append date and time to the subject selected above.</entry>
	When [Meta Scan] is selected, you can use a variable as the subject. For more information on variables, see the following: P.423 "Variables of XML format files"	

	Item name	Description
2	From Address	This sets the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address. Use From Address Setting set by Administrator — Select this to use the E-mail address specified in [Administration] - [Setup] - [Email]. When User Authentication or Email Authentication is enabled, select this to use the E-mail address specified in [Administration] - [Security] - [Authentication] - [Email Address Setting]. <entry box=""> — Specify the sender address using up to 140 alphanumeric characters.</entry>
3	From Name	This sets the sender name of the E-mail document. Use From Name Setting set by Administrator — Select this to use the sender name specified in [Administration] - [Setup] - [Email]. When User Authentication or Email Authentication is enabled, select this to use the sender name specified in [Administration] - [Security] - [Authentication] - [Email Address Setting]. <entry box=""> — Specify the sender name using up to 64 characters.</entry>
4	Body	Enter the body message of the Scan to Email documents. You can enter up to 1000 characters (including spaces).

	Item name	Description
5	File Format	Select the file format of the scanned image.
		• TIFF(Multi) — Select this to save scanned images as a Multi-page TIFF file.
		• TIFF(Single) — Select this to save scanned images separately as Single-
		page TIFF files.
		• PDF(Multi) — Select this to save scanned images as a Multi-page PDF file.
		• PDF(Single) — Select this to save scanned images separately as Single-
		page PDF files.
		• Slim PDF(Multi) — Select this to save scanned images as Multi-page slim
		PDF files. Select this when you give priority to minimizing the file size over
		the quality of the image.
		• Slim PDF(Single) — Select this to save scanned images separately as
		Single-page slim PDF files. Select this when you give priority to minimizing
		the file size over the quality of the image.
		• XPS(Multi) — Select this to save scanned images as a Multi-page XPS file.
		• XPS(Single) — Select this to save scanned images separately as Single-
		page XPS files.
		• JPEG — Select this to save scanned images as JPEG files.
		• PDF/A(Multi) — Select this to save scanned images as a Multi-page PDF/A
		file.
		 PDF/A(Single) — Select this to save scanned images separately as Single- page PDF/A files.
		• DOCX(Multi) — Select this to save scanned images as a Multi-page Word file
		(DOCX) after OCR processing.
		• DOCX(Single) — Select this to save scanned images as a Single-page Word
		file (DOCX) after OCR processing.
		• XLSX(Multi) — Select this to save scanned images as a Multi-page Excel file
		(XLSX) after OCR processing.
		• XLSX(Single) — Select this to save scanned images as a Single-page Excel
		file (XLSX) after OCR processing.
		• PPTX(Multi) — Select this to save scanned images as a Multi-page
		PowerPoint file (PPTX) after OCR processing.
		• PPTX(Single) — Select this to save scanned images as a Single-page
		PowerPoint file (PPTX) after OCR processing.
		You can select whether to enable OCR by [Enable OCR].

Tip

- If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the MFP Management Guide.
- Files saved in an XPS format can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
- OCR processing is available only when the OCR Enabler is installed.

	Item name	Description
6	Encryption	Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting. Encryption — Select this if you want to encrypt PDF files. User Password — Enter a password for opening encrypted PDF files. Master Password — Enter a password for changing PDF encryption settings. Encryption Level — Select an encryption level.
		• 40-bit RC4 — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1.
		• 128-bit RC4 — Select this to set an encryption level to the one compatible with Acrobat 5.0, PDF V1.4.
		• 128-bit AES — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.
		 Authority — Select the desired authority items on encrypted PDF files. Printing — Select this to authorize users to print documents.
		• Change of Documents — Select this to authorize users to change documents.
		 Content Copying or Extraction — Select this to authorize users to copy and extract the contents of documents.
		 Content Extraction for accessibility — Select this to enable the accessibility feature.

Tip

- If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the MFP Management Guide.
- The user password and the master password are not set at the factory shipment.
- Passwords must be from 1 to 32 one-byte alphanumerical characters.
- The user password must differ from the master password.


Note

These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the MFP Management Guide. Ask the administrator for resetting these passwords.

7	File Name	Select how the scanned file will be named. Select [DocYYMMDD] to name it as described, or enter the desired file name in the box. When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.	
	When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.		
8	Fragment Message Size	Select the size of the message fragmentation. [No Fragmentation] is set as the default.	

☐ Save as file Setting

In the Save as file Setting page, you can specify how and where a scanned file will be stored.

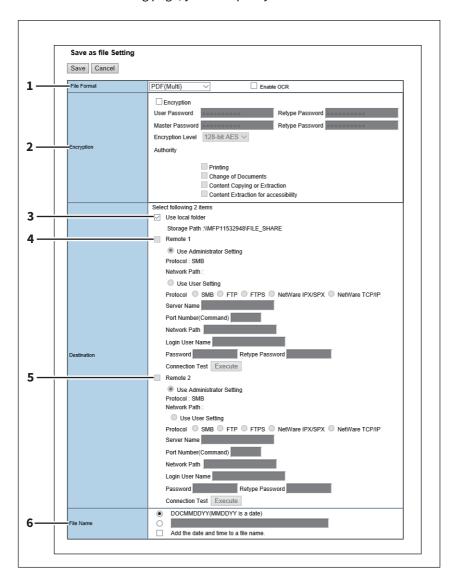

	Item name	Description
1	File Format	Select the file format for the scanned file to be stored.
		• TIFF(Multi) — Select this to save scanned images as a Multi-page TIFF file.
		• TIFF(Single) — Select this to save scanned images separately as Single-
		page TIFF files.
		• PDF(Multi) — Select this to save scanned images as a Multi-page PDF file.
		• PDF(Single) — Select this to save scanned images separately as Single-page PDF files.
		• Slim PDF(Multi) — Select this to save scanned images as Multi-page slim
		PDF files. Select this when you give priority to minimizing the file size over
		the quality of the image.
		Slim PDF(Single) — Select this to save scanned images separately as
		Single-page slim PDF files. Select this when you give priority to minimizing
		the file size over the quality of the image.
		• XPS(Multi)— Select this to save scanned images as a Multi-page XPS file.
		• XPS(Single) — Select this to save scanned images separately as Single-
		page XPS files.
		 JPEG — Select this to save scanned images as JPEG files.
		• PDF/A(Multi) — Select this to save scanned images as a Multi-page PDF/A
		file.
		• PDF/A(Single) — Select this to save scanned images separately as Single-
		page PDF/A files.
		• DOCX(Multi) — Select this to save scanned images as a Multi-page Word file
		(DOCX) after OCR processing.
		• DOCX(Single) — Select this to save scanned images as a Single-page Word
		file (DOCX) after OCR processing.
		• XLSX(Multi) — Select this to save scanned images as a Multi-page Excel file
		(XLSX) after OCR processing.
		• XLSX(Single) — Select this to save scanned images as a Single-page Excel
		file (XLSX) after OCR processing.
		• PPTX(Multi) — Select this to save scanned images as a Multi-page
		PowerPoint file (PPTX) after OCR processing.
		• PPTX(Single) — Select this to save scanned images as a Single-page
		PowerPoint file (PPTX) after OCR processing.
		You can select whether to enable OCR by [Enable OCR].

Tip

- If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the **MFP Management Guide**.
- Files saved in an XPS format can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
- \bullet OCR processing is available only when the OCR Enabler is installed.

	Item name	Description
2	Encryption	Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting. Encryption — Select this if you want to encrypt PDF files. User Password — Enter a password for opening encrypted PDF files. Master Password — Enter a password for changing PDF encryption settings. Encryption Level — Select an encryption level.
		 40-bit RC4 — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1. 128-bit RC4 — Select this to set an encryption level to the one compatible
		 with Acrobat 5.0, PDF V1.4. 128-bit AES — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.
		 Authority — Select the desired authority items on encrypted PDF files. Printing — Select this to authorize users to print documents. Change of Documents — Select this to authorize users to change documents. Content Copying or Extraction — Select this to authorize users to copy and extract the contents of documents. Content Extraction for accessibility — Select this to enable the accessibility feature.

Tip

- If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the MFP Management Guide.
- The user password and the master password are not set at the factory shipment.
- Passwords must be from 1 to 32 one-byte alphanumerical characters.
- The user password must differ from the master password.

Note

These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the MFP Management Guide. Ask the administrator for resetting these passwords.

Destination — Use local folder | Select this to save a scanned file to the "FILE_SHARE" folder.

Tip


When [Meta Scan] is selected, you can only specify one destination.

	Item name	Description
4	Destination — Remote 1	Select this check box to save the scanned file to a network folder. How you can set this item depends on how the user with administrator privileges configured Remote 1 in the [Save as file] submenu under the [Setup] menu. When you select [Allow the following network folder to be used as a destination], you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. When you select [Allow user to select network folder to be used as a destination], you can select [Use User Setting] and enter the following items to specify where to save the file. If you are allowed to specify a network folder, select [Use User Setting] and enter the following items to specify where to save the file. Protocol Select the protocol to be used for uploading a scanned file to the network folder. • SMB — Select this to send a scanned file to the network folder using the SMB protocol. • FTP — Select this to send a scanned file to the FTP server. • FTPS — Select this to send a scanned file to the FTP server using FTP over SSL/TLS. • NetWare IPX/SPX — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.
		 NetWare TCP/IP — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.
		Server Name When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "192.168.1.1" in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumerical characters and symbols.
		Port Number (Command) Enter the port number to be used for controls if you select [FTP] as the protocol. Generally "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and hyphens (-). Hyphen (-) is set as the default. Network Path
		When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the "users\scanned" folder in the computer named "Client01", enter "\\Client01\users\scanned\". When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "user/scanned". When you select "NetWare IPX/SPX" or "NetWare TCP/IP" as the protocol, enter the folder path in the NetWare file server. For example, to specify the "sys\scan" folder in the NetWare file server, enter "\sys\scan". You can enter up to 128 alphanumerical characters and symbols.

	Item name	Description
4	Destination — Remote 1	Enter the login user name to access an SMB server, FTP server, or NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log in is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and; (semicolon). A user name with only a single space is not possible. Password Enter the password to access an SMB server, FTP server, or NetWare file server, if required. You can enter up to 32 alphanumerical characters, symbols, and spaces. A single space only can also be entered. Retype Password Enter the same password again for a confirmation. [Execute] button Tests the connection using the specified network settings to check if the communications can be established.
	Tip When [Meta Scan] is selected, you can only specify one destination.	
5	Destination — Remote 2	Select this check box to save the scanned file to a network folder. How you can set this item depends on how the user with administrator privileges configured Remote 2 in the [Save as file] submenu under the [Setup] menu. If the user with administrator privileges specified Remote 2 to use only the specified network folder, you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. If the Remote 2 allows you to specify a network folder, you can specify the network folder settings. See the description of the Remote 1 option for each item.
	Tip When [Meta Scan] is selected, you can only specify one destination.	
6	File Name	Select how the scanned file will be named. Select [DocYYMMDD] to name it as described, or enter the desired file name in the box. When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.
	Tip When [Meta Scan] is selected applied to the meta data file	d, if you select [Add the date and time to a file name] in [File Name], it is also name.

■ Box Setting


In the Box Setting page, you can specify how scanned images will be stored in the Box.

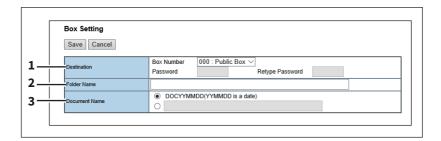

	Item name	Description
1	Destination	Specify the destination box number for e-Filing. Box Number — Select the box number to store the scanned image. Password — Enter the password if the specified box is set with a password. Retype Password — Enter the same password again for a confirmation.
2	Folder Name	Enter the name of the folder where scanned images will be stored. If the specified named folder does not exit, the folder will be created automatically. You can enter up to 64 characters.
3	Document Name	Select how the scanned file will be named. Select [DocYYMMDD] to name it as described, or enter the desired file name in the box.

■ Store to USB Device Setting

On the Store to USB Setting page, you can set the method for saving templates in USB media.

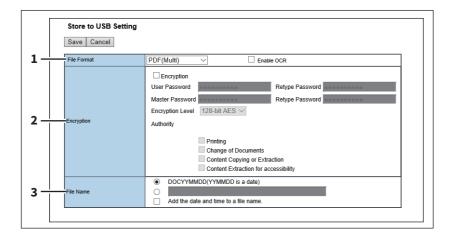

	Item name	Description
1	File Format	Select the file format of the scanned image.
		• TIFF(Multi) — Select this to save scanned images as a Multi-page TIFF file.
		• TIFF(Single) — Select this to save scanned images separately as Single-
		page TIFF files.
		• PDF(Multi) — Select this to save scanned images as a Multi-page PDF file.
		• PDF(Single) — Select this to save scanned images separately as Single-page
		PDF files.
		• Slim PDF(Multi) — Select this to save scanned images as Multi-page slim
		PDF files. Select this when you give priority to minimizing the file size over
		the quality of the image.
		• Slim PDF(Single) — Select this to save scanned images separately as
		Single-page slim PDF files. Select this when you give priority to minimizing
		the file size over the quality of the image.
		• XPS(Multi)— Select this to save scanned images as a Multi-page XPS file.
		• XPS(Single) — Select this to save scanned images separately as Single-page
		XPS files.
		• JPEG — Select this to save scanned images as JPEG files.
		• PDF/A(Multi) — Select this to save scanned images as a Multi-page PDF/A
		file.
		• PDF/A(Single) — Select this to save scanned images separately as Single-
		page PDF/A files.
		• DOCX(Multi) — Select this to save scanned images as a Multi-page Word file
		(DOCX) after OCR processing.
		• DOCX(Single) — Select this to save scanned images as a Single-page Word
		file (DOCX) after OCR processing.
		• XLSX(Multi) — Select this to save scanned images as a Multi-page Excel file
		(XLSX) after OCR processing.
		• XLSX(Single) — Select this to save scanned images as a Single-page Excel
		file (XLSX) after OCR processing.
		• PPTX(Multi) — Select this to save scanned images as a Multi-page
		PowerPoint file (PPTX) after OCR processing.
		PPTX(Single) — Select this to save scanned images as a Single-page
		PowerPoint file (PPTX) after OCR processing.
		You can select whether to enable OCR by [Enable OCR].

Tip

- If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the **MFP Management Guide**.
- Files saved in an XPS format can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
- OCR processing is available only when the OCR Enabler is installed.

	Item name	Description
2	Encryption	Set this for encrypting PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting. Encryption — Select this if you want to encrypt PDF files. User Password — Enter a password for opening encrypted PDF files. Master Password — Enter a password for changing PDF encryption settings. Encryption Level — Select an encryption level.
		• 40-bit RC4 — Select this to set an encryption level to the one compatible with Acrobat 3.0, PDF V1.1.
		• 128-bit RC4 — Select this to set an encryption level to the one compatible with Acrobat 5.0, PDF V1.4.
		• 128-bit AES — Select this to set an encryption level to the one compatible with Acrobat 7.0, PDF V1.6.
		 Authority — Select the desired authority items on encrypted PDF files. Printing — Select this to authorize users to print documents.
		Change of Documents — Select this to authorize users to change documents.
		• Content Copying or Extraction — Select this to authorize users to copy and extract the contents of documents.
		 Content Extraction for accessibility — Select this to enable the accessibility feature.

Tip

- If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the **MFP Management Guide**.
- The user password and the master password are not set at the factory shipment.
- Passwords must be from 1 to 32 one-byte alphanumerical characters.
- The user password must differ from the master password.

Note


These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box noted below if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the MFP Management Guide. Ask the administrator for resetting these passwords.

	Select how the scanned file will be named. Select [DocYYMMDD] to name it as described, or enter the desired file name in the box. When you want to add the date and time in the file name, select the [Add the date and time to a file name] check box.
il	

When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name.

□ Scan Setting

In the Scan Setting page, you can specify how originals are scanned for the Scan to File, Scan to Email, and Scan to e-Filing agent.

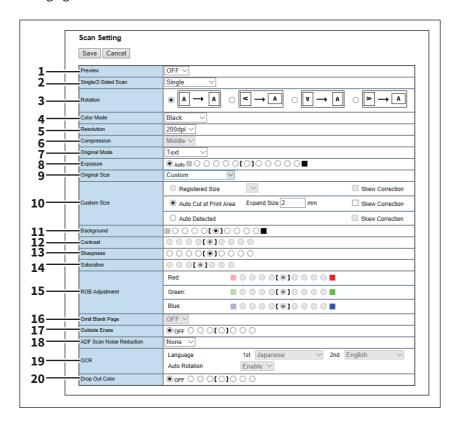

	Item name	Description
1	Preview	Select whether to display the scanned image on the touch panel after the scanning an original.
		• OFF — Select this not to display the scanned image.
		• ON — Select this to display the scanned image.
2	Single/2-Sided Scan	Select whether to scan one side or both sides of an original. Available only when the Reversing Automatic Document Feeder is installed.
		• Single — Select this to scan one side of an original.
		• Duplex Book — Select this to scan both sides of originals when the pages
		are printed vertically in the same direction and bound along the vertical
		side of the paper.
		• Duplex Tablet — Select this to scan both sides of originals with a vertical
		reversal to be bound along the horizontal side of the paper.
3	Rotation	Select how the scanned images will be rotated.

	Item name	Description
4	Color Mode	Select the color mode for scanning.
		Black — Select this to scan in the black mode.
		• Gray — Select this to scan in the gray scale mode.
		• Full Color — Select this to scan in the full color mode.
		• Auto Color — Select this to scan in the auto color mode.
	Format] option in the Save a	not be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File s File Settings and that in the Email Setting. d, you cannot select JPEG or TIFF (Multi) for the file format. Also when [Black] is d.
5	Resolution	Select the resolution for scanning.
	•	t be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File File Settings and that in the Email Setting.
6	Compression	Select the compression for scanning.
7	• The [Compression] option ca Format] option in the Save a	ack] is selected at the [Color Mode] box. annot be set when [Slim PDF (Multi)] or [Slim PDF (Single)] is selected in the [File s File Settings and that in the Email Setting.
7	Original Mode	Select the document type of the originals.
		 Text — Select this to set the Text mode as the default original mode. Text/Photo — Select this to set the Text/Photo mode as the default original
		mode. Depending on the model, this can be selected only when [Black] is
		selected in the [Color Mode] box.*1
		Photo — Select this to set the Photo mode as the default original mode.
	Note This cannot be set when [Gray	is selected in the [Color Mode] box.
8	Exposure	Select the exposure for scanning. Select [Auto] to automatically apply the best contrast for the document. You can also manually adjust the exposure in 11 stages. The farther to the right that you set the value, the darker the density of the scanned image will become.
	Note	ray] [Full Color] or [Auto Color] is salected at the [Color Mode] boy. In that
	[Auto] is not available when [Gray], [Full Color], or [Auto Color] is selected at the [Color Mode] box. In that case, set the exposure manually.	
9	Original Size	Select the original size. If this is set to [Auto], the size is automatically detected. Select [Mixed Original Sizes] to scan a document with mixed sizes. You can also specify the original size. If this is set to [Custom], you can specify the custom original size for scanning.

	Item name	Description		
10	Custom Size	Select the custom original size for scanning. You can set [Skew Correction] for the following settings.		
		• Registered Size — Select this to select the custom original size that has		
		been registered on the control panel.		
		• Auto Cut of Print Area — Select this to set the custom size by cutting the		
		print area of the original. You can enter a value in [Expand Size] to expand the area.		
		• Auto Detected — Select this to set the custom size by detecting the original		
		size automatically. This function is available only when the Dual Scan		
		Document Feeder (DSDF) has been installed.		
11	Background	Select the density level of the background of the scanned image. Density can be adjusted in 9 levels. The farther to the right that you set the value, the darker the density of the background will become.		
12	Contrast	Select the contrast level of the scanned image. Contrast can be adjusted in 9 levels. The farther to the right that you set the value, the higher the contrast level will become.		
	Note			
		[Black] or [Gray] is selected at the [Color Mode] box.		
13	Sharpness	Select the sharpness level of the scanned image. Sharpness can be adjusted in 9 levels. The farther to the right that you set the value, the sharper the scanned image will become.		
14	Saturation	Select the saturation level of the scanned image. Saturation can be adjusted in 7 levels. The farther to the right you set the value, the more vivid the scanned image will become.		
	Note			
	This is not available when [Black] or [Gray] is selected at the [Color Mode] box.			
15	RGB Adjustment	Select the RGB density level of the scanned image. RGB density can be adjusted in 9 levels for each color. The farther to the right you set the value, the darker the density of the selected color will become.		
	Note			
		[Black] or [Gray] is selected at the [Color Mode] box.		
16	Omit Blank Page	Select whether to automatically omit a blank page in the scanned image if it is included in originals.		
		OFF — The blank page is not omitted.		
		• ON — The blank page is omitted.		
17	Outside Erase	Select whether to erase a shade that appears outside of the scanned image when an original is placed on the original glass while the Original Cover is left open. The erased shade will be whitened. If you want to erase it, you can select the criteria in 7 levels for judging if it is an area to be erased. The farther to the right you select, the larger the area		
		that will be erased. [OFF] is selected by default.		


	Item name	Description
18	ADF Scan Noise Reduction	Use this setting if streaks are conspicuous on images when originals are scanned with the Reversing Automatic Document Feeder.
		• None — Select this not to perform noise reduction.
		• Low/Middle/High — Select this to specify the noise reduction level. [High]
		is the most effective.
	Note	
	Colored characters become fa	aint if the noise reduction level is set to [High].
19	OCR	You can specify the prioritized language and auto rotation for OCR processing. This item is available only when the OCR Enabler is installed.
		Language: Select the primary and secondary languages.
		Auto Rotation: Specify whether or not to automatically rotate.
20	Drop Out Color	Select the drop out level of colors eliminated from the scanned original. Drop out can be adjusted in 7 levels. Select [OFF] to disable this function.

^{*1} Available only for models that support color printing.

■ Extended Field settings

You can set extended fields for meta data.

Set the field you have registered in [Administration] - [Registration] - [Extended Field Definition].

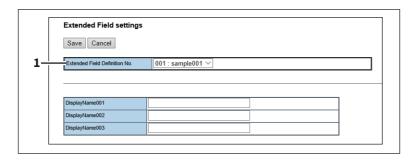

	Item name	Description
1	Extended Field Definition No.	Allows you to select a registered extended field definition.

■ Extended Field Properties

[Extended Field Properties] set under the selected extended field definition are displayed.

Values set in this screen are used as the default values for [Extended Field Properties] displayed on the touch panel when using Meta Scan.

Items with an asterisk (*) attached at the beginning of the [Extended Field Properties] name are mandatory entry fields.

■ Password Setting

In the Password Setting page, you can set a password for the private template.



	Item name	Description
1	Password	Enter a password.
2	Retype Password	Enter the same password again for a confirmation.

■ [Address Book] Item list


- P.83 "[Address Book] screen"
- P.88 "[Create Destination information]/[Edit Destination information] screen"
- P.89 "[Fax Setting] screen"
- P.90 "[Search Contact] screen"
- P.90 "[Search Address List] screen"
- P.91 "[Create Group information]/[Edit Group information] screen"

☐ [Address Book] screen

You can manage a contact list to be used in E-mail, Internet Fax, and fax transmissions.

- Click [Contacts], [Favorite Contact], [Groups], or [Favorite Groups] to switch the display between the list of addresses and the list of groups where contacts are assigned.
- Address Book can be also managed using the touch panel. Refer to the MFP Management Guide.


Contacts

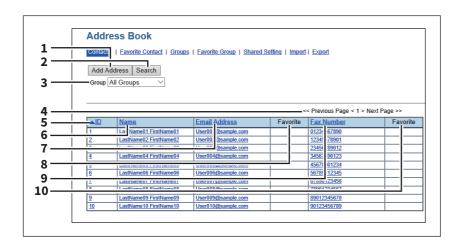

	Item name	Description
1	[Add Address] button	Allows you to add a new contact in the address book. P.88 "[Create Destination information]/[Edit Destination information] screen"
2	[Search] button	Allows you to search a contact from the address book. P.90 "[Search Contact] screen"
3	Group	 Select a group to display in the following options or from the group name. All Groups — Displays all the groups. Local — Displays the local address book. Shared — Displays the shared address book.
4	Select Page	Allows you to select a page when there are 101 items or more.
5	ID	Displays the registered ID of the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
6	Name	Displays the name registered to the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
7	Email Address	Displays the E-mail address registered to the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"


	Item name	Description
8	Favorite	This check box is selected when Email Address is set as Favorite.
9	Fax Number	Displays the fax number registered to the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
10	Favorite	This check box is selected when Fax Number is set as Favorite.

Favorite Contact

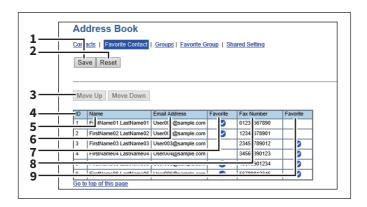


	Item name	Description
1	[Save] button	Saves the specified information.
2	[Reset] button	Erases the specified information.
3	[Move Up]/[Move Down] button	Changes the priority order in the list.
4	ID	Displays the registered ID of the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
5	Name	Displays the name registered to the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
6	Email Address	Displays the E-mail address registered to the contact. P.88 "[Create Destination information]/[Edit Destination information] screen"
7	Favorite	This check box is selected when Email Address is set as Favorite.
8	Fax Number	Displays the fax number registered to the contact.
9	Favorite	This check box is selected when Fax Number is set as Favorite.

Group

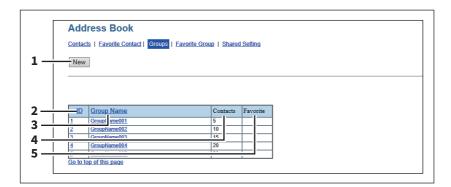


	Item name	Description
1	[New] button	Allows you to add a new group. □ P.91 "[Create Group information]/[Edit Group information] screen"
2	ID	Displays the registered ID of the group. □ P.91 "[Create Group information]/[Edit Group information] screen"
3	Group Name	Displays the registered name of the group. □ P.91 "[Create Group information]/[Edit Group information] screen"
4	Contacts	Displays how many address books are registered in the group.
5	Favorite	This check box is selected when Group is set as Favorite.

Favorite Groups

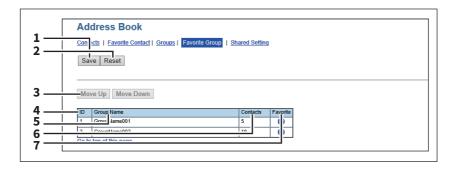

	Item name	Description
1	[Save] button	Saves the specified information.
2	[Reset] button	Erases the specified information.
3	[Move Up]/[Move Down] button	Changes the priority order in the list.
4	ID	Displays the registered ID of the group. P.91 "[Create Group information]/[Edit Group information] screen"
5	Group Name	Displays the registered name of the group. P.91 "[Create Group information]/[Edit Group information] screen"
6	Contacts	Displays how many address books are registered in the group.
7	Favorite	This check box is selected when Group is set as Favorite.

Shared Setting

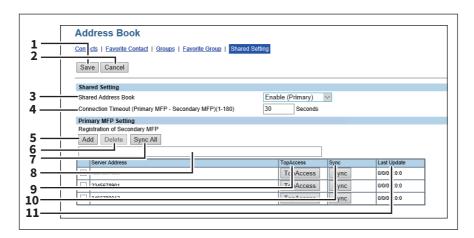

	Item name	Description
1	[Save] button	Saves the specified information.
2	[Cancel] button	Cancels settings.
3	Shared Address Book	When managing other MFPs and Shared Address Books to the distribution destination, set this printer to Primary or Secondary.
		• Disable — Does not synchronize.
		• Enable (Primary) — Synchronizes as a primary.
		• Enable (Secondary) — Synchronizes as a secondary.
	Note	
	MFPs, which are registered as s	secondary in a Primary MFP (in which [Enable (Primary)] is set), can synchronize
	its Shared Address Book only w	when [Enable (Secondary)] is set in [Shared Address Book] in them respectively.
4	Connection Timeout	Enter the timeout time to stop communicating if you cannot connect to the primary or secondary MFP. You can set 1 to 180 seconds.
5	[Add] button	Adds a new secondary MFP. Enter the IP address or host name for the secondary MFP for the distribution destination in the input box below, and then click the [Add] button to register. You can register up to 10 MFPs.
6	[Delete] button	Deletes the selected MFP from the list of secondary MFPs.
7	[Sync All] button	Synchronizes the Shared Address Book for all secondary MFPs with the information on the printer.
8	Input box	Enter the IP address or host name when registering a secondary MFP.
9	[TopAccess] button	Starts TopAccess.
10	[Sync] button	Synchronizes the Shared Address Book for the relevant secondary MFPs with the information on the printer.
11	Last Update	Displays the previous update time.

Import




	Item name	Description
1	Import Method	Specify the import method of the address book. Addition — Select this to append the imported information to the existing data. Overwrite — Select this to replace the existing data with the imported information.
2	Address Book Type	Specify "Local" or "Shared" as the import target when using the Shared Address Book function.
3	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
4	File Name	Select the address book file to be imported. [Browse] button — Allows you to select the address book file. [Import] button — Imports the selected address book file.

Export



	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	Export Data Format	Select the file format of the export file. • <u>CSV</u> — Select this to create the file in the CSV format. • XML — Select this to create the file in the XML format.
5	Address Book Type	Specify "Local" or "Shared" as the export source when using the Shared Address Book function.
6	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
7	[Create New File] button	Creates the export file.

lacktriangledown [Create Destination information]/[Edit Destination information] screen

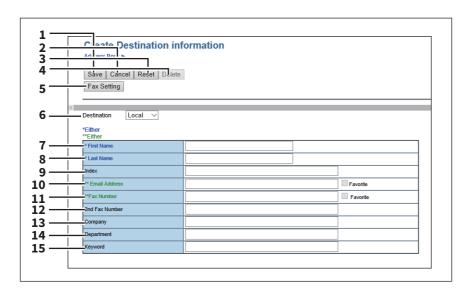


	Item name	Description
1	[Save] button	Saves the entered information.
2	[Cancel] button	Cancels adding or editing a contract.
3	[Reset] button	Erases information entered in the given box.
4	[Delete] button	Deletes the displayed contact.
5	[Fax Setting] button	Registers the contact for fax transmission. P.89 "[Fax Setting] screen"
6	Destination	Select Local Address Book or Shared Address Book as the registration target for contact information.
	(Secondary)].	Shared Setting] - [Shared Address Book] is set to [Enable (Primary)] or [Enable
7	First Name	Enter the first name of the contact. You can enter up to 32 characters. Invalid characters are replaced with "!".
8	Last Name	Enter the last name of the contact. You can enter up to 32 characters. Invalid characters are replaced with "!".
9	Index	Enter the characters to be used as the index. You can enter up to 64 characters.
10	Email Address	Enter the E-mail address of the contact. You can enter up to 192 characters. Select [Favorite] to specify the contact as Favorite.
11	Fax Number	Enter the fax number of the contact. You can enter up to 128 characters. Select [Favorite] to specify the contact as Favorite.
12	2nd Fax Number	Enter the second fax number of the contact. You can enter up to 128 characters.
13	Company	Enter the company name of the contact. You can enter up to 64 characters. Invalid characters are replaced with "!".
14	Department	Enter the department name of the contact. You can enter up to 64 characters. Invalid characters are replaced with "!".
15	Keyword	Enter the comments on the contact. You can enter up to 256 characters. Invalid characters are replaced with "!".

Note

- You must specify either the [First Name] or [Last Name] box and either the [Email Address] or [Fax Number] box to register the contact.
- If you enter "-" in the [Fax Number] and [2nd Fax Number], a three-second pause is added for dialing the fax number.
- To perform fax transmission, the Fax Unit is required. If the Fax Unit is not installed, you cannot perform the fax transmission even if you specify the fax number.

☐ [Fax Setting] screen

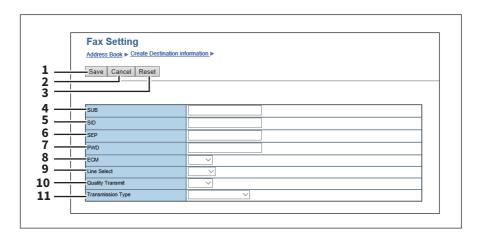

	Item name	Description
1	[Save] button	Saves the entered information.
2	[Cancel] button	Cancels the fax settings.
3	[Reset] button	Restores fax settings set for the contact to the default status.
4	SUB	Enter the mailbox number if you want to send a fax to the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
5	SID	Enter the password to send a fax to the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
6	SEP	Enter the mailbox number if you want to retrieve a document from the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
7	PWD	Enter the password to retrieve a document from the contact's fax mailbox. You can enter up to 20 characters using numbers, #, and *.
8	ЕСМ	Select whether to enable or disable ECM (Error Correction Mode). If [ON] is selected, it facilitates error free communications by automatically resending any portion of the document affected by phone line noise or distortion.
9	Line Select	Select whether specifying the line to be used. If this is set to [Auto], this equipment automatically selects the line to be used. However, [Line 2] can be applicable only when the 2nd Line for Fax Unit is installed.
10	Quality Transmit	Select whether to send a document in the Quality TX mode. If [ON] is selected, this equipment sends documents at a slower speed than normal so that the transmission will be less affected by line condition.
11	Transmission Type	Select whether the document will be sent in [Memory Transmit] mode or [Direct Transmit] mode.

☐ [Search Contact] screen

You can search for contacts in the LDAP server and add them to the address book.

Tip

In order to use the LDAP search, the directory service must be set up by a user who has been granted administrator privileges in the access policy mode. Before operating the LDAP search, ask your administrator if the Directory Service has been configured.




	Item name	Description
1	[Search] button	Searches contacts with the entered conditions. □ P.90 "[Search Address List] screen"
2	[Cancel] button	Cancels the contact search.
3	Directory Service Name	Select the LDAP server for the search.
4	First Name	Enter the search condition.
5	Last Name	
6	Email Address	
7	Fax Number	
8	Company	
9	Department	

- If you select [MFP LOCAL] at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations that contain the text entered in each item.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

☐ [Search Address List] screen

Select from the search address list and add to the address book.

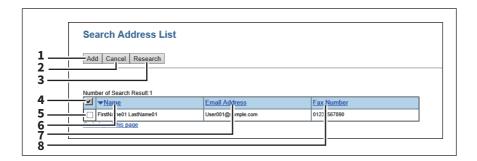


	Item name	Description
1	[Add] button	Adds the contact selected in the search address list into the address book.
2	[Cancel] button	Cancels the search address list display.
3	[Research] button	Returns to the [Search Contact] screen to change the search criteria and execute the search again.
4	Number of Search Result	Displays the number of found contacts.
5	Check box	Select contacts to be registered to the address book.
6	Name	Displays the search result.
7	Email Address	
8	Fax Number	

☐ [Create Group information]/[Edit Group information] screen

You can create groups that contain multiple recipients.

This enables you to specify a group as the destination when sending an E-mail, Internet Fax, or fax to multiple recipients.

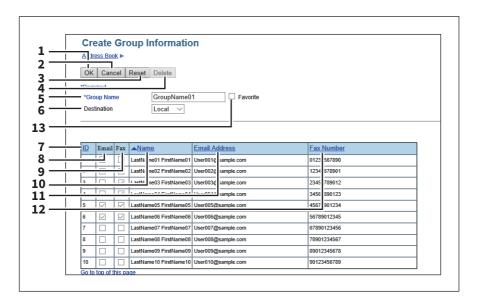

	Item name	Description
1	[OK] button	Registers the selected contacts as a group.
2	[Cancel] button	Cancels the group registration.
3	[Reset] button	Resets the contents.
4	[Delete] button	Deletes the displayed group.
5	Group Name	Enter the group name. You can enter up to 20 characters.
6	Destination	Select Local Address Book or Shared Address Book as the registration target for Group information.
	Note This is only available when [Sh (Secondary)].	ared Setting] - [Shared Address Book] is set to [Enable (Primary)] or [Enable
7	ID	Displays the registered ID of the contact.
8	Email	Select the check box to register E-mail address into the group when the contact has E-mail information.

	Item name	Description
9	Fax	Select the check box to register fax number into the group when the contact has fax number information.
10	Name	Displays the last name and first name registered to the contact.
11	Email Address	Displays the E-mail address registered to the contact.
12	Fax Number	Displays the fax number registered to the contact.
13	Favorite	Select to set the group as your favorite.

■ [Inbound FAX routing] Item list

ITU-T communications function between fax devices with ITU-T support and enable fax transmission to and retrieval from mailboxes.

The type of mailboxes for ITU-T communications must be set in advance to either confidential, bulletin board, or forward. You can specify a password on any mailbox to secure confidentiality.

- P.92 "[Inbound FAX routing] screen"
- P.93 "[MailBoxes Properties] screen"
- P.94 "MailBox Setting (Mailbox)"
- P.95 "Destination Setting (Mailbox)"
- P.95 "InternetFax Setting (Mailbox)"
- P.96 "Relay End Terminal Report (Mailbox)"
- P.96 "Save as file Setting (Mailbox)"
- P.97 "Email Setting (Mailbox)"
- P.97 "Box Setting (Mailbox)"

Note


- Mailboxes can be managed only when the Fax Unit is installed.
- The Internet/Fax (Relay) agent cannot be used to forward an inbound fax routed via Inbound FAX Routing.

Tip

Mailboxes can be managed using the touch panel.

☐ [Inbound FAX routing] screen

You can manage mailboxes used for ITU-T communications.

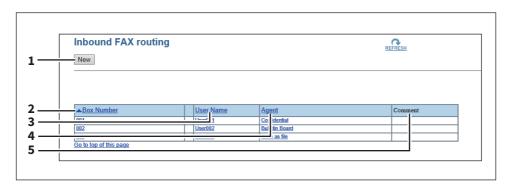


	Item name	Description
1	[New] button	Creates a mailbox for F-code communications. P.93 "[MailBoxes Properties] screen"
2	Box Number	Displays the registered mailbox number.
3	User Name	Displays the user name of the registered mailbox.
4	Agent	Displays the agent assigned to the mailbox.

	Item name	Description
5	Comment	Displays the registered comment.

☐ [MailBoxes Properties] screen

You can set a mailbox.

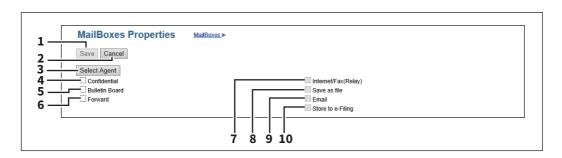

	Item name	Description
1	[Save] button	Saves the mailbox.
2	[Cancel] button	Cancels the mailbox settings.
3	[Select Agent] button	Set the agent to apply to the forward mailbox.
4	Confidential	Creates a confident mailbox. The Confidential Box allows a one-time document retrieval from the mailbox. Once a document is retrieved, it is cleared. If a new document is sent to the same box number where another document is stored, it is added to the existing box. P.94 "MailBox Setting (Mailbox)"
5	Bulletin Board	Creates a bulletin board mailbox. The Bulletin Board Box allows multiple document retrievals from the same mailbox. Once a document is retrieved, it is not cleared. If a new document is sent to the same Box, it replaces the existing one. P.94 "MailBox Setting (Mailbox)"
6	Forward	Creates a multiple transmission relay mailbox. When you select this, select the agent from [Internet/Fax(Relay)], [Save as file], [Email], or [Store to e-Filing]. Use the forward mailbox when you want to forward a fax document to specified destinations automatically.
7	Internet/Fax(Relay)	Creates a multiple transmission relay mailbox for the Internet Fax or fax. This agent can be combined with the Save as file agent or Store to e-Filing agent. P.94 "MailBox Setting (Mailbox)" P.95 "Destination Setting (Mailbox)" P.95 "InternetFax Setting (Mailbox)" P.96 "Relay End Terminal Report (Mailbox)"
	Note The Internet/Fax (Relay) ag	ent cannot be used to forward an inbound fax routed via Inbound FAX Routing.
8	Save as file	Creates a shared folder forwarding mailbox. This agent can be combined with the Internet/Fax(Relay), Email, or Store to e-Filing agent. P.94 "MailBox Setting (Mailbox)" P.96 "Save as file Setting (Mailbox)"
9	Email	Creates an E-mail forwarding mailbox. This agent can be combined with the Save as file agent or Store to e-Filing agent. P.94 "MailBox Setting (Mailbox)" P.97 "Email Setting (Mailbox)"


	Item name	Description
10	Store to e-Filing	Creates an e-Filing forwarding mailbox. This agent can be combined with the Internet/Fax(Relay) agent, Save as file agent, or Email agent. P.94 "MailBox Setting (Mailbox)" P.97 "Box Setting (Mailbox)"

■ MailBox Setting (Mailbox)

In the MailBox Setting page, specify the general information of the mailbox such as the box number, password, owner, comment, and notification.

Note

- The [Notification] and [Document Print] options are not available when creating the Confidential mailbox or Bulletin Board mailbox.
- Mailbox communication is disabled if the settings on this equipment and information registered for the destination do not match. Check how the box number and the fax number of the destination are registered on the journal before entering the box number.

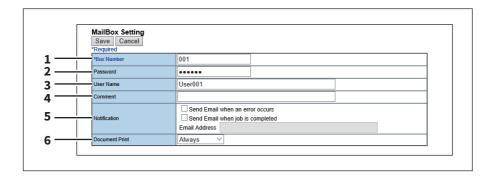

	Item name	Description
1	Box Number	Enter the box number of the mailbox. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*). You can also specify the sender's fax number to enable the Inbound Fax routing when registering a Forward mailbox. If you specify the sender's fax number here, the faxes that are received from the specified fax number will be routed according to the mailbox settings.

Note

- The Inbound Fax routing is available only for a Forward mailbox. If you select [Confidential] or [Bulletin Board] as an agent, you cannot specify the fax number.
- When a fax is sent from the specified fax number with a box number (or sub address), the Inbound Fax routing will not apply to the transmission and it is processed according to the specified box number (or sub address) settings.

Tip

If you create a forward mailbox whose number is the fax number of the sender, you can use the TSI function. Using this function, this equipment forwards the original sent from the sender whose fax number is set to the mailbox number, based on the pre-set agent (Save as File / Email / Store to e-Filing).

	· · · · · · · · · · · · · · · · · · ·	1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1, 1
2	Password	Enter the box password if you want to protect the mailbox by the password. You can enter up to 20 characters including numbers, sharp marks (#), and asterisks (*).
3	User Name	Enter the user name of this mailbox. You can enter up to 30 characters.
4	Comment	Enter the comment. You can enter up to 30 characters.

	Item name	Description
5	Notification	This specifies how the notification message will be sent if an error occurs. Send Email when an error occurs — Transmits a notification message to the specified E-mail address when an error occurs. Send Email when job is completed — Transmits a notification message to the specified E-mail address when a job is completed. Email Address — Enter the E-mail address for the notification messages. You can enter up to 192 alphanumerical characters.
		on setting, make sure to set up the E-mail settings in the [Email] submenu of the access policy mode. For instructions on how to set up the E-mail settings, see tings"
6	Document Print	Select whether to print a document sent to this mailbox. • Always — Always prints documents sent to this mailbox. • ON ERROR — Prints the document if all specified forwarding has failed.

☐ Destination Setting (Mailbox)

In the Recipient List page, you can specify the destinations of the Internet/Fax (Relay), or Email agent. When you are setting up the destinations for the Email agent, you can only specify the E-mail addresses for the destinations.

When you are setting up the destinations for the Internet/Fax (Relay) agent, you can specify both fax numbers and Email addresses for the destinations.

You can specify the destinations by entering their E-mail addresses or fax numbers manually, selecting recipients from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP server.

Note

The methods of entering the destinations manually and searching for the destinations in the LDAP server are not available if you are setting the destination for the Internet/Fax (Relay) agent.

Operations are the same as the following procedure.

P.58 "Destination Setting"


☐ InternetFax Setting (Mailbox)

In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent. Operations are the same as the following procedure.

P.63 "InternetFax Setting"

☐ Relay End Terminal Report (Mailbox)

On the Relay End Terminal Report page, you can specify a destination to which the transmission result list will be sent.

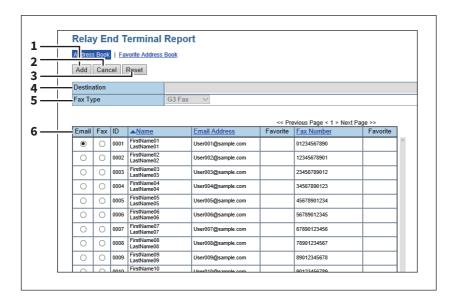

	Item name	Description
1	[Add] button	Adds settings to transmit the relay end terminal report.
2	[Cancel] button	Cancels the settings.
3	[Reset] button	Resets the settings.
4	Destination	Enter the E-mail address or fax number of the recipient.
5	Fax Туре	When the fax number is entered, select [G3 Fax] in the [Fax Type] box. When the E-mail address is entered, select [InternetFax] in the [Fax Type] box.
6	Recipient list	Displays the registered destinations. Select the E-mail address or fax number of the destination.

Note

You cannot specify more than 1 destination for the destination of the Relay End Terminal Report.

☐ Save as file Setting (Mailbox)

In the Save as file Setting page, you can specify how and where a received fax will be stored.

Instructions on how to do the Save as file setting for the mailbox are the same as for the Save as file setting for a private template.

Operations are the same as the following procedure.

P.70 "Save as file Setting"

Note

You cannot specify USB media as the storage in the Save as file Setting Page.

☐ Email Setting (Mailbox)

In the Email Settings page, you can specify the content of E-mail document to be sent. Instructions on how to do the E-mail setting for the mailbox are the same as for the E-mail setting for a private template.

Operations are the same as the following procedure.

P.66 "Email Setting"

□ Box Setting (Mailbox)

In the Box Setting page, you can specify how a received fax will be stored in the Box. Operations are the same as the following procedure.

P.75 "Box Setting"

[Registration] How to Set and How to Operate

- P.98 "Managing templates"
- P.106 "Managing address book"
- P.115 "Managing mailboxes"

■ Managing templates


- P.98 "Registering and editing private template groups"
- P.100 "Registering or editing templates"
- P.105 "Displaying public templates"

☐ Registering and editing private template groups

Before registering private templates, you have to register the private template group. You can classify the private templates according to every department, every user, and use by registering the private template groups. Also each private template group can be protected by a password.

Tip

- You can define up to 200 private template groups. To define the private template groups, you can specify the group name, owner, and E-mail notification setting.
- The required template may have already been created by a user who is granted administrator privileges in access policy mode, or other user. Check the existing templates to see if they can be used before creating a new template or group.
- Click the [Registration] tab and the [Template] menu. The Template Groups page is displayed.
- Click the [Undefined] group link to create a new private group. Click the defined group name link to edit the group information.

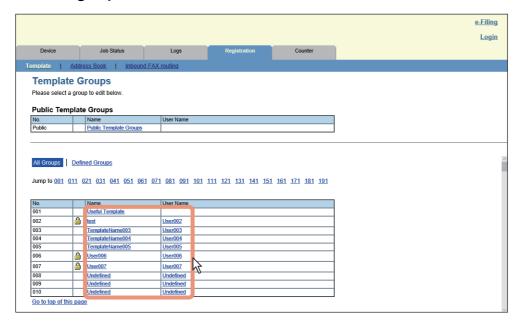


- If you select the private template group that has not been defined, the Group Properties page is displayed. Skip to step 5.
- If you select the defined private template group that is not protected by a password, the Private Templates page is displayed. Skip to step 4.
- If you select the defined private template group that is protected by a password, the Input Group Password page is displayed. Go to the next step.

Tip


- The page displays all 200 private template groups in default page view. You can display only defined private template groups by clicking on the [Defined Groups] link.
- · If you know which private template group you want to define or edit, click the number of the private template group in the [Jump to] links.

When the Input Group Password page is displayed, enter the password for the selected private template group and click [OK].

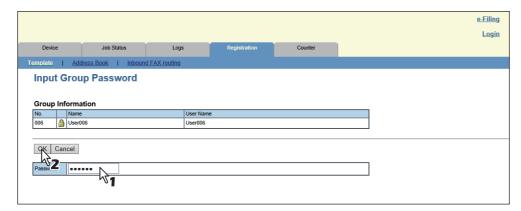

The Group Properties page is displayed.

Click [Edit], [Change Password], or [Reset].

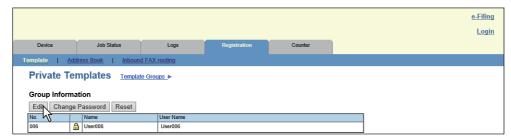


If you select [Reset], you can reset the unnecessary private group and restore it to an undefined private group. Skip to step 7.


Note

If you reset the group information, all private templates registered in the group will be deleted.

Enter the items below as required.

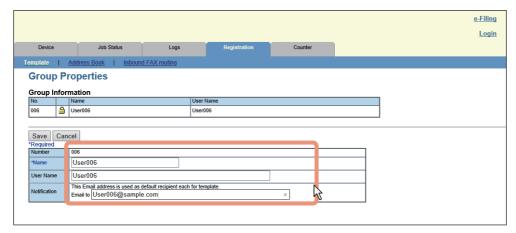

P.51 "[Group Properties] screen"

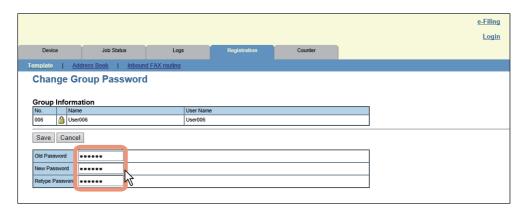

P.55 "[Change Group Password] screen"

Click [Save] to apply changes.

Click [OK].

This step is not required if you have selected [Edit] in step 4.

■ Registering or editing templates

You can create up to 60 templates for each private group or shared group. To define the template, specify the panel settings that will be displayed in the touch panel and agent settings. Each template can also be protected by a password.

Private templates can be created by users; however, public templates can only be created and edited in access policy mode by users with administrator privileges.

Tip


Each template can be created in combination of the following agents:

- Copy template can be combined with the Save as file or Store to e-Filing agent.
- Fax/Internet Fax template can be combined with the Save as file agent.
- Scan template can be created with up to two agents in a combination of the Save as file, Email, and Store to e-Filing agents.

Click the [Registration] tab and the [Template] menu. 1

The Template Groups page is displayed.

Click the group name link where you want to register or edit the template. 2

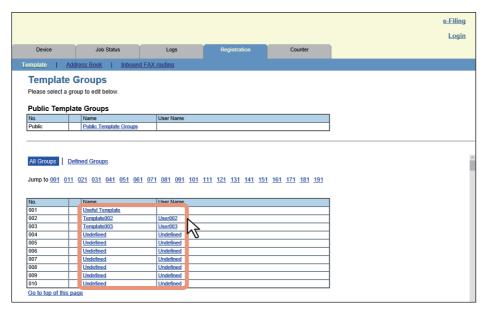


- If you select the defined private template group that is not protected by a password, the Templates page is displayed. Skip to step 4.
- If you select the defined private template group that is protected by a password, the Input Group Password page is displayed. Go to the next step.

Tip


- The page displays all 200 private template groups in default page view. You can display only defined private template groups by clicking on the [Defined Groups] link.
- · If you know which private template group you want to define or edit, click the number of the private template group in the [Jump to] links.

When the Input Group Password page is displayed, enter the password for the selected template group and click [OK].

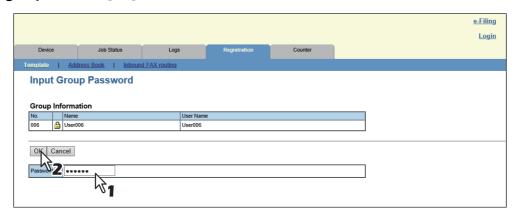

The Templates page is displayed.

From the templates list, click the [Undefined] icon to register a new template, or click defined icon to edit the template.

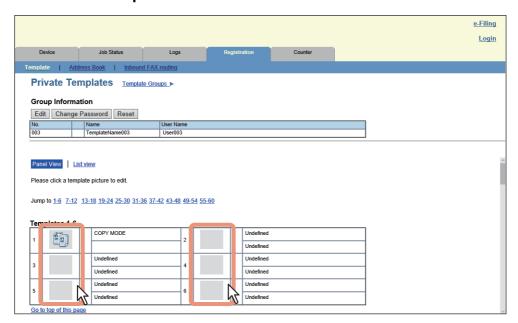


- If the templates list is displayed in the List view, click the [Undefined] template name to register new template, or click the defined template name to edit the template.
- If you select the private template that has not been defined, the Template Properties page to select agents is displayed. Skip to step 7.
- If you select the defined private template that is not protected by a password, the Template Properties page is displayed. Skip to step 6.
- If you select the defined private template that is protected by a password, the Input Template Password page is displayed. Go to the next step.

Tip


- You can change the template list view by clicking on either [Panel View] or [List View].
- If you know which private template you want to define or edit, click the number of the template in the [Jump to] links.

When the Input Template Password page is displayed, enter the password for the selected template and click [OK].

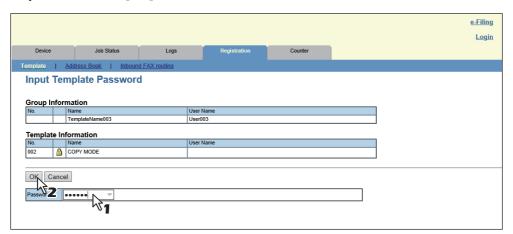

The Template Information page is displayed.

On the [Template Information] page, click either [Edit], [Change Password], or [Reset Template]. 6

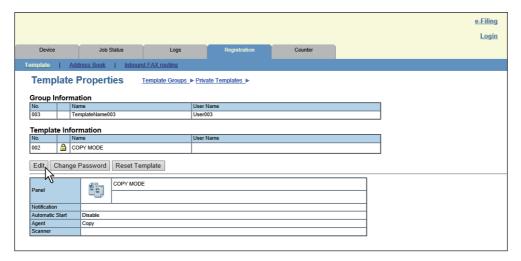

If you select [Reset Template], you can reset an unnecessary template and restore it to an undefined template. Skip to step 10.


Enter the items below as required.

• If you have selected [Edit] in step 6, select the agent and click [Select Agent].



P.55 "[Template Properties] screen"

• If you have selected [Change Password] in step 6, enter the following items and skip to step 9.

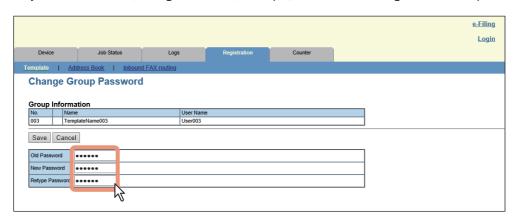

P.55 "[Change Group Password] screen"

Click each button displayed in the page to specify or edit the associated template properties.

[Panel Setting]	Specify icon settings of the template. □ P.56 "Panel Setting"
[Destination Setting]	Specify the destination to be sent. This can be set only when creating the Fax/Internet Fax agent or Scan to Email agent. P.58 "Destination Setting"
[InternetFax Setting]	Specify how the Internet Fax is transmitted. This can be set only when creating a Fax/Internet Fax agent. P.63 "InternetFax Setting"
[Fax Setting]	Specify how the documents are faxed. This can be set only when creating a Fax/Internet Fax agent. P.64 "Fax Setting"
[Email Setting]	Specify how the documents are transmitted as E-mail messages. This can be set only when creating a Scan to Email agent. P.66 "Email Setting"
[Save as file Setting]	Specify how the documents are saved in a shared folder on this equipment, USB media, or a network folder. This can be set only when creating a Save as file agent. P.70 "Save as file Setting"
[Box Setting]	Specify how the documents are saved in e-Filing. This can be set only when creating a Scan to e-Filing agent. P.75 "Box Setting"
[Store to USB Setting]	Specify how the document is saved in USB media. P.75 "Store to USB Device Setting"
[Scan Setting]	Specify how the documents are scanned. This can be set only when creating the Save as file agent, Scan to Email agent, and Scan to e-Filing agent. P.78 "Scan Setting"
[Extended Field settings]	Set extended field definition information and extended field settings. P.81 "Extended Field settings"
[Password Setting]	Set a password for the private template. P.82 "Password Setting"

Click [Save].


 $\textbf{10} \overset{\textbf{Click [OK].}}{\textbf{This step is not required if you have selected [Edit] in step 6.}$

■ Displaying public templates


End users can also display the templates list in the public group so that users can see what templates are available.

Displaying templates in the public group

- Click the [Registration] tab and the [Template] menu. The Template Groups page is displayed.
- Click the group name link for the Public Template Groups list.

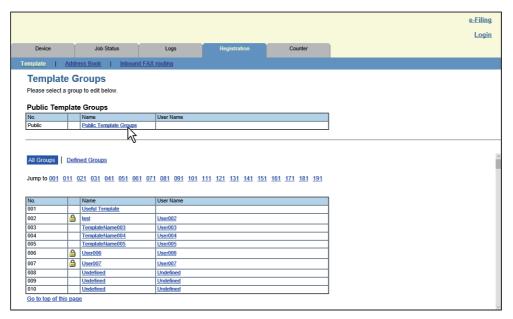

The templates list in the public group is displayed.

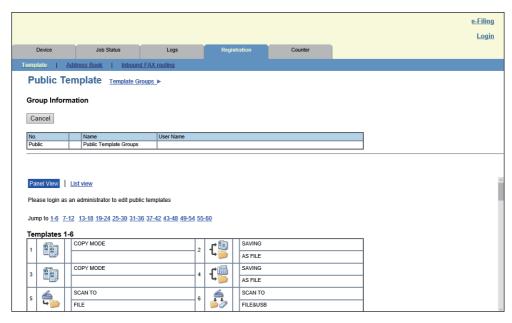

Tip

- You can change the template list view by clicking on either [Panel View] or [List View].
- If you know which public template you want to view, click the number of the public template in the [Jump to] links.

■ Managing address book

- P.106 "Managing contacts in the Address Book"
- P.109 "Managing groups in the Address Book"
- P.111 "Importing the address book data"
- P.113 "Exporting the address book data"

■ Managing contacts in the Address Book


There are two ways to manage contacts in the Address Book:

- · Adding, editing, and deleting contacts manually P.106 "Adding, editing, and deleting contacts manually"
- Add new contact searching for a recipient from the LDAP server.
 - P.108 "Adding new contacts from the LDAP server"

Adding, editing, and deleting contacts manually

You can add or edit a contact by entering recipient information manually. You can also delete the contact from the Address Book.


- Click the [Registration] tab and the [Address Book] menu. The Address Book page is displayed.
- Click [Add Address] and add a new contact. Or click the corresponding link to the contact which you want to edit or delete in the contact list.

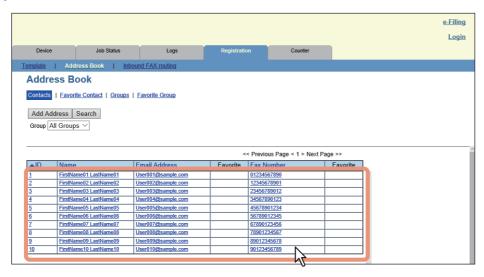

The [Create Destination information]/[Edit Destination information] page is displayed.

Enter the following items to specify the contact property. Click [Delete] to delete the contact 3 from the address book.


Select "Local" or "Shared" when using the Shared Address Book function.

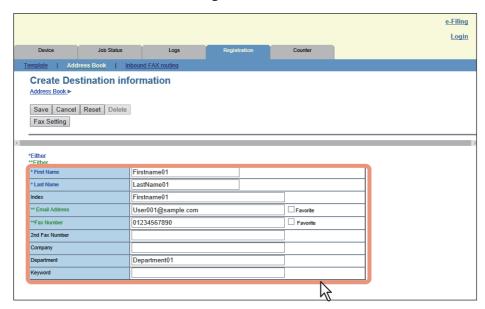

You can configure the following settings in this page:

P.88 "[Create Destination information]/[Edit Destination information] screen"


- When registering a fax contact, click [Fax Setting]. Otherwise, skip to Step 6. The Fax Settings page is displayed.
- Enter the following items according to the capabilities of destination facsimile, and click [Save].

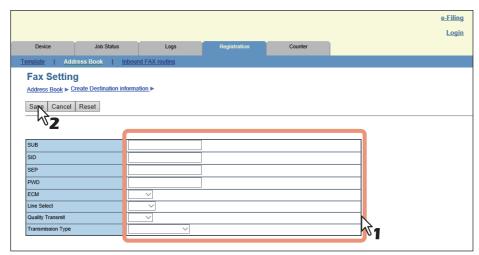

You can configure the following settings in this page:

P.89 "[Fax Setting] screen"


In the [Create Destination information]/[Edit Destination information] page, click [Save] to add a new contact.

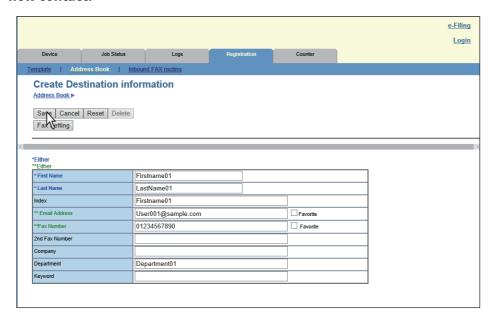

Adding new contacts from the LDAP server


You can search for contacts in the LDAP server and add them to the Address Book. In order to use the LDAP search, the directory service must be set up by a user who is granted administrator privileges in the access policy mode. Before operating the LDAP search, ask your administrator if the Directory Service has been configured.

- Click the [Registration] tab and the [Address Book] menu. The Address Book page is displayed.
- Click [Search].

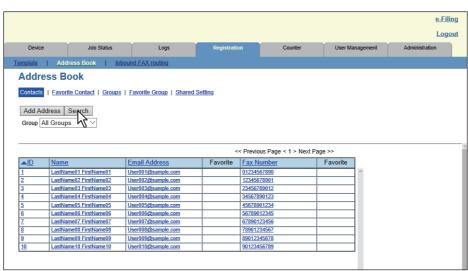

The Search Contact page is displayed.

Select the directory service name that you want to search for in the [Directory Service Name] 3 box, and enter the search terms in the boxes that you want to search.

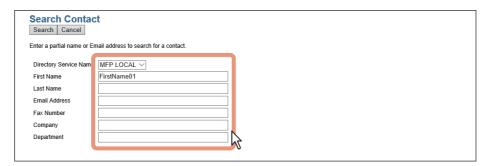

Tip

- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations that contain the text entered in each item.
- Leaving the box blank allows wild-card searching. However, you must specify at least one.

Click [Search].

TopAccess will start searching for recipients in the LDAP server and the Search Address List page will display the results.

Select the check boxes of contacts that you want to add to the Address Book.

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.



You can select all users in the list by clicking on the <u>u</u> button.

Note

The value of [company] and [department] will depend on the settings made by the user who is granted administrator privileges in access policy mode.

Click [Add].

Selected contacts are added to the Address Book.

■ Managing groups in the Address Book

You can create groups that contain the multiple recipients. This enables you to specify the groups for the destinations instead of specifying each recipient separately when operating Scan to Email, or Fax or Internet Fax transmission. You can also delete groups.


Click the [Registration] tab and the [Address Book] menu. 1

The Address Book page is displayed.

Click the [Groups] submenu.


The groups list is displayed.

Click [New] to add a new group. Or, click the corresponding link to the group which you want to 3 edit or delete in the group list.

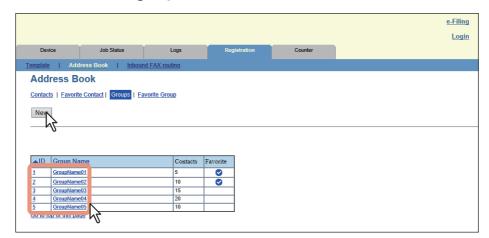

The [Create Group information]/[Edit Group information] page is displayed.

Enter the group name in the [Group Name] column. Click [Delete] to delete the selected group. Select "Local" or "Shared" when using the Shared Address Book function.

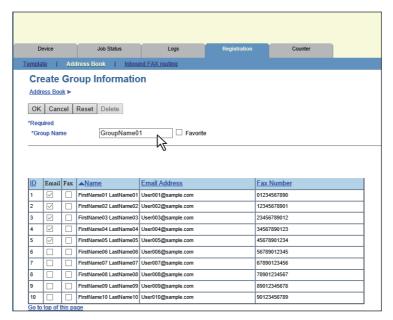

Tip

- You can clear the entered values in each field by clicking [Reset].
- You can cancel adding or editing a group by clicking [Cancel].
- Select the [Email] check boxes of users to add Internet Fax recipients, and select the [Fax] check boxes of users to add Fax recipients.

Note

To perform fax transmission, the Fax Unit is required. If the Fax Unit is not installed, you cannot perform the fax transmission even if you specify the fax number.

Click [OK].

The group is created.

☐ Importing the address book data

You can import address information exported from an address book on another equipment or a different address book program in the CSV or XML format.

The importing method of address book data is either adding imported data to the address book already registered in this equipment or deleting all the address book data already registered and replacing them with the imported data. It is recommended that you export an address book in the CSV or XML format and edit it when creating address book data.

Note

You cannot import an address book when it exceeds the number of characters specified for each item or it includes invalid characters.

- · Last Name: 32 characters · First Name: 32 characters
- Index: 64 characters
- Email Address: 192 alphanumerical characters
- Phone Number: 128 numbers • Tel Number 2: 128 numbers Company: 128 characters • Department: 128 characters • Keyword: 256 characters
- · SUB: 20 characters
- SID: 20 characters
- SEP: 20 characters
- · PWD: 20 characters

Tip

The group data may not be included depending on the imported address book data.

- Click the [Registration] tab and the [Address Book] menu. The Address Book page is displayed.
- Click the [Import] submenu. 2



The Import submenu page is displayed.

Select the import method in the Address Book area. 3




Addition — Select this to add the imported address book data into the address book already registered in this equipment.


Overwrite — Select this to delete all the address book data registered in this equipment and replace them with the imported address book data.

The Import Method page is closed.


Specify "Local" or "Shared" for [Address Book Type] as the import target when using the Shared Address Book function.

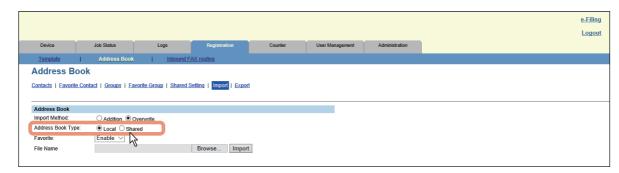


Specify whether or not to enable Favorite information of the Address Book.

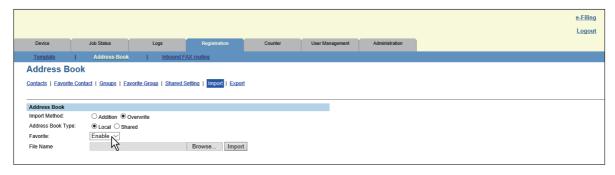


Click [Browse] in the Address Book area.

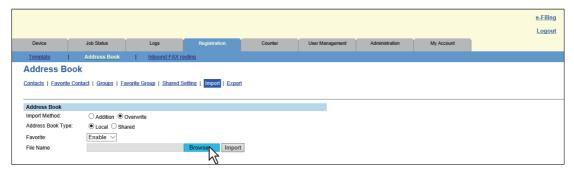

Select the CSV/XML file that contains address book data and click [Open].

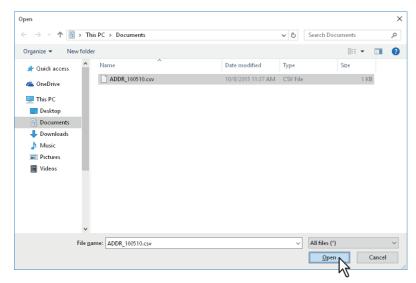

Click [Import]. 8

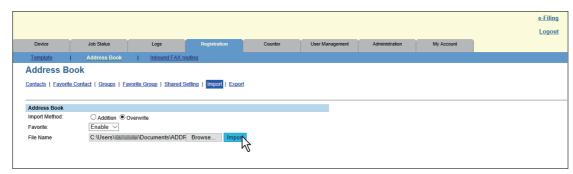

The data are imported to the address book.

 
■ Exporting the address book data

You can export address information for use in another TopAccess address book or another address book program.

Tip


The group data may not be included depending on the exported address book data.

- Click the [Registration] tab and the [Address Book] menu. The Address Book page is displayed.
- Click the [Export] submenu.



The Export submenu page is displayed.

Select the file format of the address book.

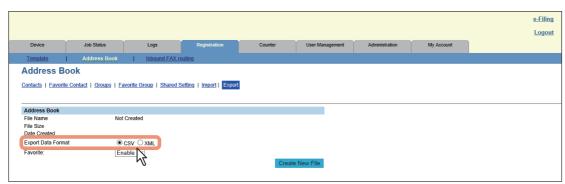


CSV — Select this to create the file in the CSV format.

XML — Select this to create the file in the XML format.


Specify "Local" or "Shared" for [Address Book Type] as the export source when using the Shared 4 Address Book function.



Specify whether or not to enable Favorite information of the Address Book.

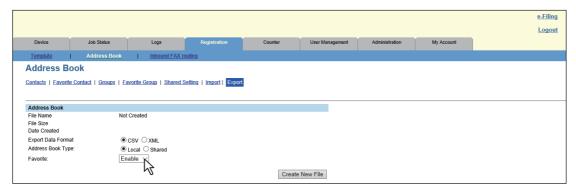

Click [Create New File] in the Address Book area.

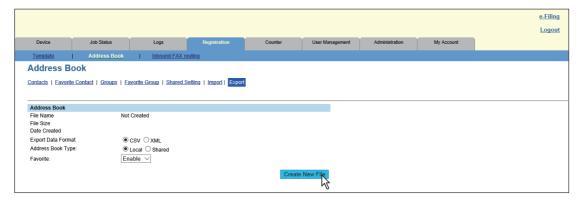

The exported file information is displayed.

Tip

If you previously exported address book data, the exported file link and information are displayed in the Address Book area. You can click the link to save the previously exported file.

Click the [File Name] link. 7



The file is downloaded.

■ Managing mailboxes

Note

Mailboxes can be managed only when the Fax Unit is installed.

Mailboxes can be managed using the touch panel. Refer to the **Fax Guide**.

This equipment supports ITU-T communications and allows documents to be transmitted and retrieved from mailboxes created by the mailbox hub in advance.

■ Setting up mailboxes.


To carry out ITU-T communications, you must first set up an Open Mailbox in the mailbox hub. You can set up a maximum of 300 mailboxes.

You can also delete mailboxes.

Note

If you want to delete an Open Mailbox, the document must first be retrieved, printed, or canceled from the Open Mailbox.

- Click the [Registration] tab and the [Inbound FAX routing] menu. 1 The Inbound FAX routing page is displayed.
- Click [New] to set up a new mailbox. Or, click the box number link which you want to edit or delete in the mailbox list.

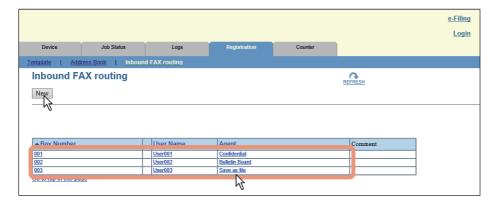


- If you click [New], skip to step 5.
- If you click the box number link that is not protected by a password, skip to step 4.
- If you click the box number link that is protected by a password, go to the next step.

3 Enter the password for the mailbox and click [OK].




▲ Click [Edit] or [Delete].

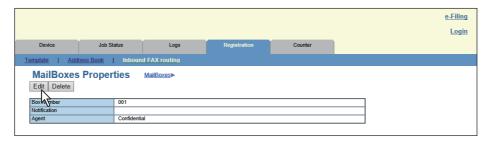

If you have clicked [Delete], the delete confirmation dialog box is displayed. Click [OK].

5 Select agents.

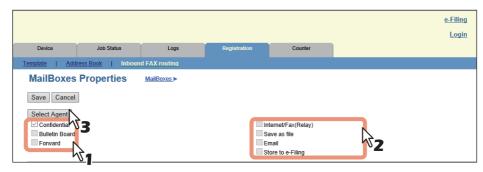

You can configure the following settings in this page:
P.93 "[MailBoxes Properties] screen"

Click each button displayed in the page to set the template properties.

MailBox Setting	Specify mailbox settings. P.94 "MailBox Setting (Mailbox)"
	P.34 Mailbox Selling (Mailbox)
[Destination Setting]	Specify the destination to be sent. This can be set only when creating an Internet/Fax(Relay) agent or Email agent. P.95 "Destination Setting (Mailbox)"
[InternetFax Setting]	Specify how the document is transmitted as an Internet Fax. This can be set only when creating an Internet/Fax(Relay) agent. P.95 "InternetFax Setting (Mailbox)" Note
	The Internet/Fax (Relay) agent cannot be used to forward an inbound fax routed via Inbound FAX Routing.
[Relay End Terminal Report]	Specify the destination for the relay end terminal report when forwarding has been performed. This can be set only when creating an Internet/Fax(Relay) agent. P.96 "Relay End Terminal Report (Mailbox)"
[Email Setting]	Specify how the document is transmitted as an E-mail message. This can be set only when creating an Email agent. P.97 "Email Setting (Mailbox)"
[Save as file Setting]	Specify how the document is saved on your computer storage device or a network folder. This can be set only when creating a Save as file agent. P.96 "Save as file Setting (Mailbox)"
[Box Setting]	Specify how the document is saved in a mailbox. This can be set only when creating a Store to e-Filing agent. P.97 "Box Setting (Mailbox)"

${\bf After\ configuring\ the\ desired\ mailbox\ properties,\ click\ [Save].}$

The mailbox properties are registered.

[Counter] Tab Page

This section explains the [Counter] tab page in TopAccess.

[Counter] Tab Page Overview	120
[Counter] Item list	
[Counter] How to Set and How to Operate	
Viewing counters	

[Counter] Tab Page Overview

You can check the number of pages printed, copied, and scanned in the [Counter] tab page.

P.120 "[Counter] Item list"

■ [Counter] Item list

- P.120 "[Total Counter] screen"
- P.122 "[Department Management] screen"
- P.123 "[Department Counter] screen <access policy mode>"
- P.124 "[Department Information] screen"
- P.127 "[User Counter] screen <access policy mode>"
- P.128 "[User Information] screen <access policy mode>"
- P.130 "[Quota Setting] screen <access policy mode>"


☐ [Total Counter] screen

You can display total counters of the print counter and scan counter, and total counters for small size and large size paper.


Note

- Because of paper jam and job cancellation, the total counter value might not be equal to the total number of pages in the print log.
- The total counter value might not be equal to the total values of other counters, depending on the counter settings.

Color models

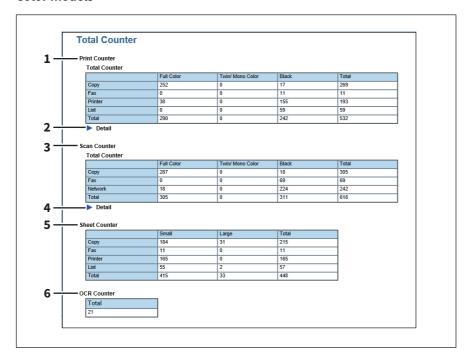


Monochromatic models

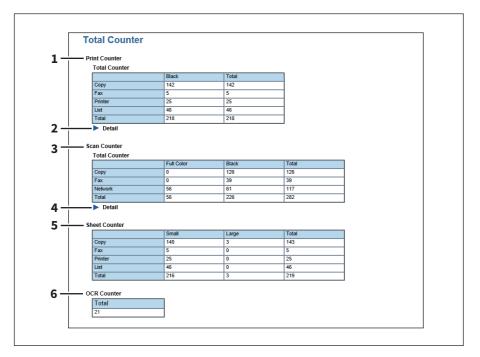


	Counter type	Description	
1	Print Counter	Displays the total output count value.	
2	Detail	Displays details of the total output count value when you click [].	
3	Scan Counter	Displays the total scanned count value.	
4	Detail	Displays details of the total count value of scanned documents when you click [].	
5	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.	
6	OCR Counter	Displays the number of images to which an OCR process has been performed.	
	Tip	'	
	This OCR Counter appears only when an OCR Enabler is installed.		

Print Counter/Print Counter (Detail)

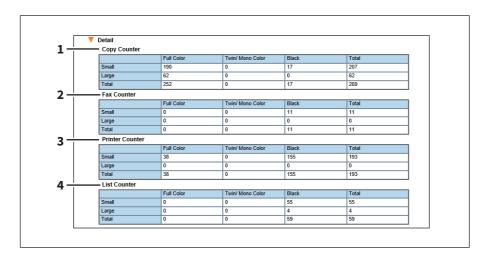

	Counter	Description
1	Copy Counter	Displays the number of pages printed by copy operations for paper sizes set on your equipment.
2	Fax Counter	Displays the number of pages printed by fax reception for paper sizes set on your equipment.
3	Printer Counter	Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment.
4	List Counter	Displays the number of pages printed by system page print operations for paper sizes set on your equipment.


Scan Counter/Scan Counter (Detail)

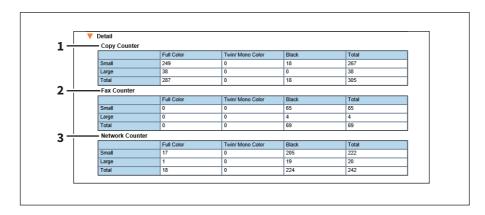

	Counter	Description
1	Copy Counter	Displays the number of pages printed by copy operations for paper sizes set on your equipment.
2	Fax Counter	Displays the number of pages printed by fax reception for paper sizes set on your equipment.
3	Network Counter	Displays the number of pages scanned by scan operations for paper sizes set on your equipment.

☐ [Department Management] screen


Displays 20 items of total counter information for each department per page.

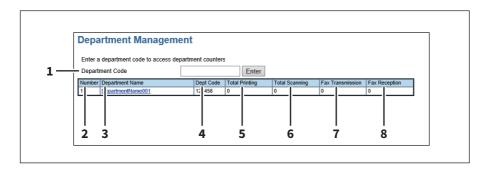

	Item name	Description
1	Department Code	Enter the department code which you want to check and click the [Enter] button.

	Item name	Description
2	Number	Displays the registered department number.
3	Department Name	Displays the department name. Click a department name link to check the information. P.124 "[Department Information] screen"
4	Dept Code	Displays the department code.
5	Total Printing	Displays the total output count value of the department.
6	Total Scanning	Displays the total scanned count value of the department.
7	Fax Transmission	Displays the total number of transmitted fax pages of the department.
8	Fax Reception	Displays the total number of received fax pages of the department.


☐ [Department Counter] screen <access policy mode>

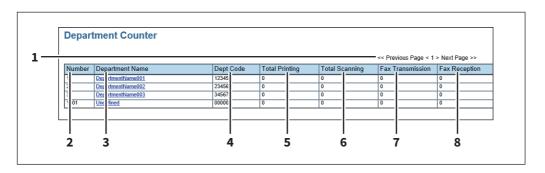


	Item name	Description
1	Select Page	Allows you to select a page when there are 101 items or more.
2	Number	Displays the registered department number.
3	Department Name	Displays the department name. Click a department name link to check the information. P.124 "[Department Information] screen"
4	Dept Code	Displays the department code.
5	Total Printing	Displays the total output count value of the department.
6	Total Scanning	Displays the total scanned count value of the department.
7	Fax Transmission	Displays the number of pages transmitted via fax.
8	Fax Reception	Displays the number of pages received via fax.

☐ [Department Information] screen

Color models

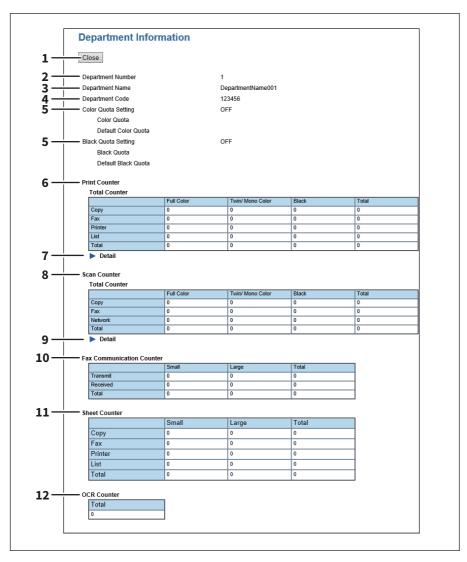

Monochromatic models

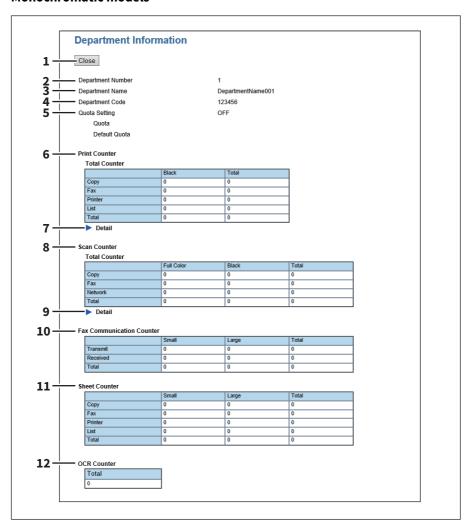

		Item name	Description
1	[C	Close] button	Closes the [Department Information] screen.
2	De	epartment Number	Displays the registered department number.
3	De	epartment Name	Displays the department name.
4	De	epartment Code	Displays the department code.
5	Q	uota Setting	OFF — No output restriction.
			ON — Restricts output.
		Quota	Displays the remaining number for output.
		Default Quota	Displays the default number assigned for the user.
6	Pr	rint Counter	Displays the output total count value.
7	De	etail	Displays details of the total output count value when you click []. Copy Counter: Displays the number of pages printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of pages printed by system page print operations for paper sizes set on your equipment.


	Item name	Description
8	Scan Counter	Displays the total count value of scanned documents.
9	Detail	Displays details of the total count value of scanned documents when you click []. Copy Counter: Displays the number of pages scanned by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages scanned by fax reception for paper sizes set on your equipment. Network Counter: Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
10	Fax Communication Counter	Displays the communication record.
11	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.
12	OCR Counter Tip This OCR Counter appears only	Displays the number of images to which an OCR process has been performed. when an OCR Enabler is installed.

☐ [User Counter] screen <access policy mode>

This screen displays total counter information for each user who is logged in to TopAccess.

Tip


Total counters for all users are displayed when you are logged in as the Administrator.

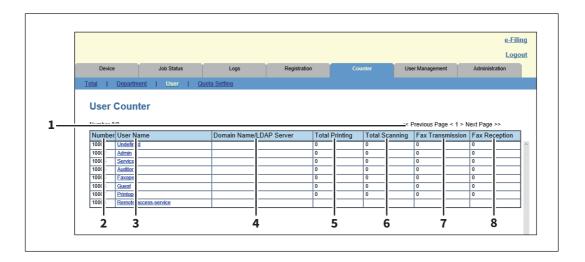


	Item name	Description
1	Select Page	Allows you to select a page when there are 20 items or more.
2	Number	Displays the registered user number.
3	User Name	Displays the user name. Click a user name to check the information. P.128 "[User Information] screen <access mode="" policy="">"</access>
4	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user account.
5	Total Printing	Displays the total output count value.
6	Total Scanning	Displays the total scanned count value.
7	Fax Transmission	Displays the number of pages transmitted via fax.
8	Fax Reception	Displays the number of pages received via fax.

☐ [User Information] screen <access policy mode>

Color models

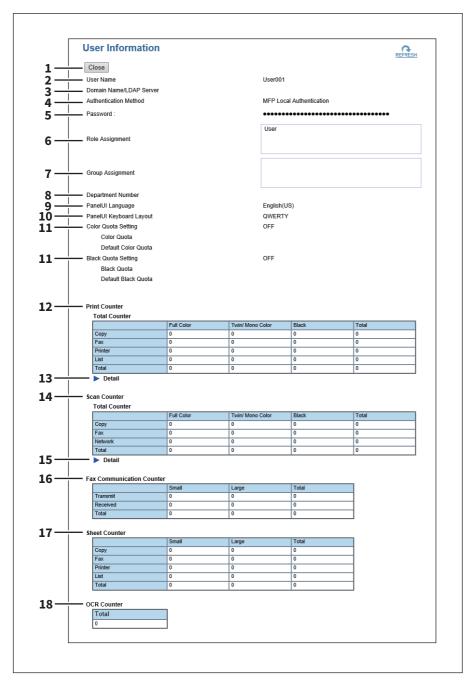

Monochromatic models

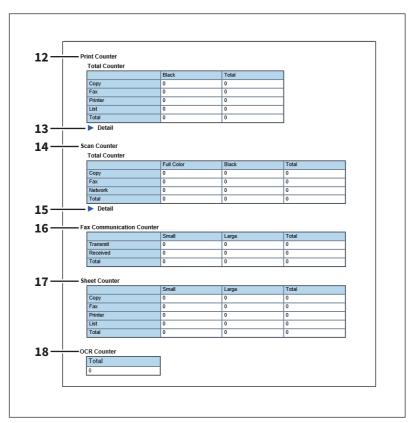


	Item name	Description
1	[Close] button	Closes the [User Information] screen.
2	User Name	Displays the user name.
3	Domain Name/LDAP Server	Displays the registered domain name or LDAP server.
4	Authentication Method	Displays the user authentication method.
5	Password	You cannot display the password. Reset the password in the [User Accounts] item when changing the password. P.140 "[Enter Password] screen"
6	Role Assignment	Displays the registered roles.
7	Group Assignment	Displays the registered groups.
8	Department Number	Displays the registered departments.
9	PanelUI Language	Displays the registered display languages of the touch panel.
10	PanelUI Keyboard Layout	Displays the registered keyboard patterns for the touch panel.
11	Quota Setting	 OFF — No output restriction. ON — Restricts output.
	Quota	Displays the remaining number for output.
	Default Quota	Displays the default number assigned for the user.
12	Print Counter	Displays the output total count value.

	Item name	Description
13	Detail	Displays details of the total output count value when you click []. Copy Counter: Displays the number of pages printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of pages printed by system page print operations for paper sizes set on your equipment.
14	Scan Counter	Displays the total count value of scanned documents.
15	Detail	Displays details of the total count value of scanned documents when you click []. Copy Counter: Displays the number of pages scanned by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages scanned by fax reception for paper sizes set on your equipment. Network Counter: Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
16	Fax Communication Counter	Displays the communication record.
17	Sheet Counter	Displays the number of printed sheets according to the function being used. Values are displayed according to the paper size set on your equipment. This counter increments by 1 for either single or dual-sided copying.
18	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip This OCR Counter appears only	y when an OCR Enabler is installed.

☐ [Quota Setting] screen <access policy mode>

You can make the quota management settings based on either a print count or a job. In job-based quota management, different weights can be assigned to each job when the number of outputs is counted.

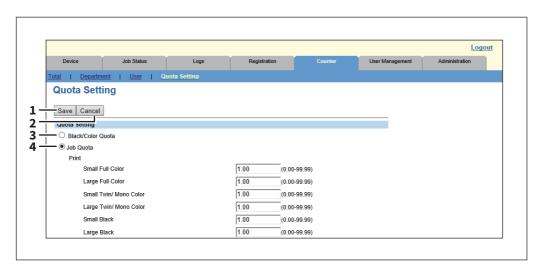

	Item name	Description
1	[Save] button	Saves the quota settings.
2	[Cancel] button	Cancels the settings.

	Item name	Description
3	Black/Color Quota	Performs quota management based on the number of black and color outputs.
	Tip	
	• [Black Quota] is displayed in black outputs.	monochrome models, which performs quota management with the number of
4	Job Quota	Assigns weights to each job and calculates the sum total quotas of the print jobs and scan jobs for quota management. Different weights can be assigned to each of the jobs listed below. • Print
		- Small Full Color - Large Full Color - Small Twin/Mono Color - Large Twin/Mono Color - Small Black - Large Black • Scan
		- Color - Black

Tip

- In monochrome models, only the weight assigned to Small Black or Large Black can be changed.
- When assigning the weight to a job, you can enter a value in the range from 0.00 to 99.99. The default value of the print is "1.00" and that of the scan is "0.00". For example, assuming that the weight assigned to Small Black in print is 0.50, if the user makes 2 outputs in Small Black, the quota value assigned to the user is decremented by 1.00.

[Counter] How to Set and How to Operate

P.132 "Viewing counters"

■ Viewing counters

This equipment maintains a set of counters that keep track of the number of pages printed, copied and scanned. These statistics can be displayed in totals or broken down by department. This section explains how to display the statistics and manage the department counters.

- P.132 "Displaying the total counter"
- P.133 "Displaying the department counter"


Note

Neither an end user nor an administrator can reset counters from TopAccess. However, users who are granted administrator privileges in the access policy mode can reset the counter from the touch panel. Refer to the MFP Management Guide.

Displaying the total counter

Total counter information is displayed in the [Total] menu in addition to the print counter and scan counter. You can check small and large size counters of operations such as copy and fax in each [Detail].


- Click the [Counter] tab and the [Total] menu. The Total Count page is displayed.
- You can check the total counter in this page. You can display details of each count value by clicking [] of [Detail].

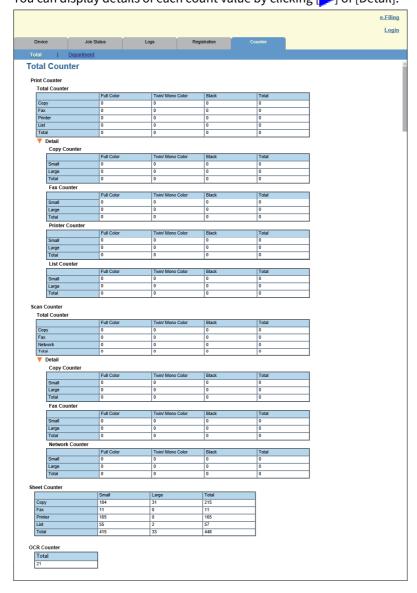

☐ Displaying the department counter


In the [Department] menu, you can display the counter information of a specific department. If you want to display the department counter, you must enter the department code.

- Click the [Counter] tab and the [Department] menu. The Department management page is displayed.
- Enter the code for the department you want to check in [Department Code] and click [Enter].

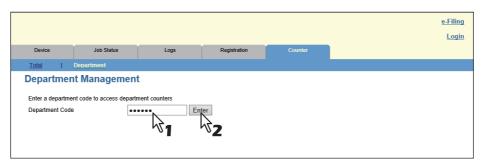


The department counter for the specified department is displayed.

Click the department name link to display the detailed counters for the department.

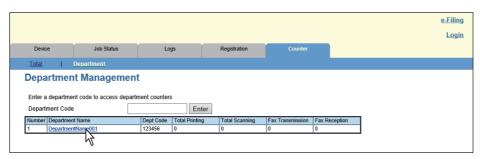

The Department Information page opens. 4

You can display details of each count value by clicking [] of [Detail].

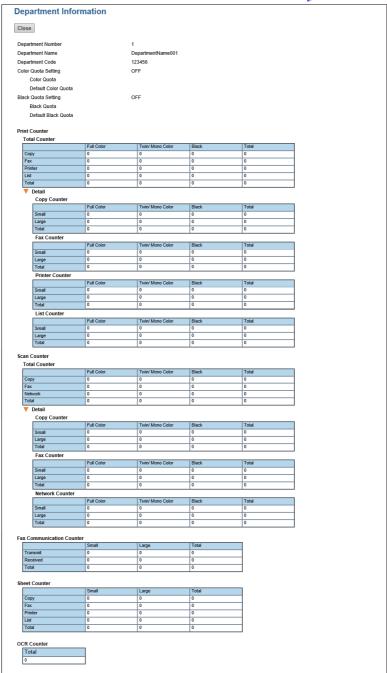

[User Management] Tab Page

This section describes how to manage users in TopAccess. This section is intended for persons who are in charge of this equipment. There is no need for general users to read.

[User Management] Tab Page Overview	136
[User Accounts] Item list <access mode="" policy=""></access>	
[Group Management] Item list <access mode="" policy=""></access>	
[Role Management] Item list <access mode="" policy=""></access>	
[Department Management] Item list <access mode="" policy=""></access>	153
[Project Management] Item list <access mode="" policy=""></access>	
[Export/Import] Item list <access mode="" policy=""></access>	
[Shared Settings] Item list <access mode="" policy=""></access>	


[User Management] Tab Page Overview

- P.136 "[User Accounts] Item list <access policy mode>"
- P.145 "[Group Management] Item list <access policy mode>"
- P.147 "[Role Management] Item list <access policy mode>"
- P.153 "[Department Management] Item list <access policy mode>"
- P.158 "[Project Management] Item list <access policy mode>"
- P.159 "[Export/Import] Item list <access policy mode>"
- P.161 "[Shared Settings] Item list <access policy mode>"

■ [User Accounts] Item list <access policy mode>

You can search and set user accounts if you are logged in to the access policy mode.

- P.137 "[Search User Account] screen"
- P.138 "[Create User Information] screen"
- P.140 "[Enter Password] screen"
- P.141 "[Edit User Information] screen"
- P.144 "[Role Assignment] screen"
- P.145 "[Group Assignment] screen"

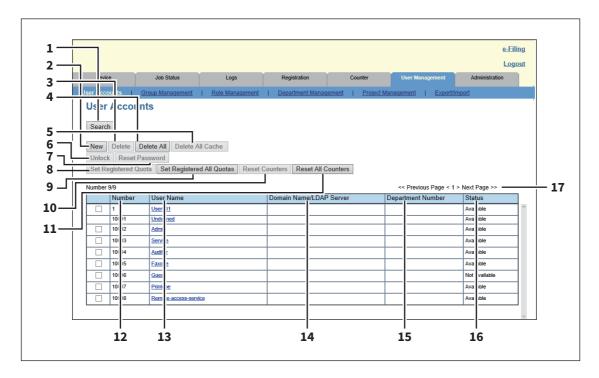

	Item name	Description
1	[Search] button	Searches registered users. □ P.137 "[Search User Account] screen"
2	[New] button	Registers new users. P.138 "[Create User Information] screen"
3	[Delete] button	Deletes the user selected in the user account list. However, you cannot delete the default users.
4	[Delete All] button	Deletes all registered users. (Except default users)
5	[Delete All Cache] button	Select this to delete all the authentication information to be used when an authentication server failure occurs.
6	[Unlock] button	Unlocks a locked user selected in the user account list.
7	[Reset Password] button	Resets the password of the user selected in the user account list. □ P.140 "[Enter Password] screen"
8	[Set Registered Quota] button	Initializes the registered quota for the user selected in the user account list.

	Item name	Description
9	[Set Registered All Quotas] button	Initializes quotas for all users.
10	[Reset Counters] button	Resets counters for the user selected in the user account list.
11	[Reset All Counters] button	Resets counters for all departments.
12	Number	Displays the registration number of the user. 10001 to 10008 are assigned to default users.
13	User Name	Displays the user name. Undefined, Admin, Service, Auditor, Faxope, Guest, and Printope, Remote-access-service are default users. You can check the user information by clicking the user name. P.141 "[Edit User Information] screen"
14	Domain Name/LDAP Server	Displays the domain name or LDAP server registered in the user information.
15	Department Number	Displays the department number registered in the user information.
16	Status	Displays the user status.
17	Select Page	Allows you to select a page when there are 101 items or more.

☐ [Search User Account] screen

You can search registered users.


Select items to be searched and enter or select the search conditions.



	Item name	Description
1	Number	Enter the user number you want to search. The search condition should be in the range from 1 to 10000.
2	Department Number	Select the department number you want to search.
3	User Name	Enter the user name you want to search. A prefix search is performed with the entered character string.
4	Domain Name/LDAP Server	Enter the domain name or LDAP server you want to search.
5	[Search] button	Searches contacts with the entered and selected conditions.

☐ [Create User Information] screen

You can register new user information.

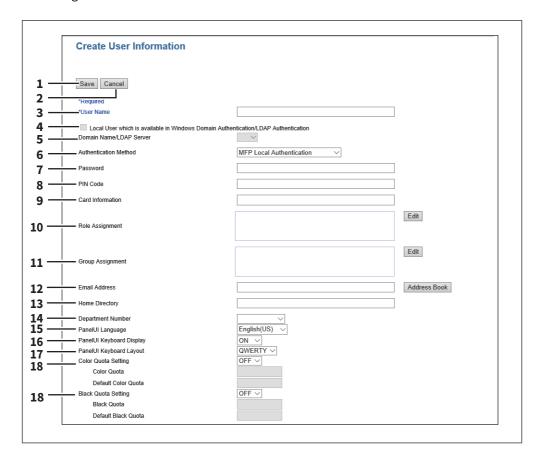

	Item name	Description
1	[Save] button	Saves the entered user information.
2	[Cancel] button	Cancels creating user information.
3	User Name	Enter the user name. You can enter up to 128 alphanumerical characters and symbols (except the following: " * + , / : ; < = >? [\] space).
4	Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register as a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.
	Tip The above setting is available of Authentication/LDAP Authentication P.312 "Windows Domain Au P.314 "LDAP Authentication	uthentication"
5	Domain Name/LDAP Server	Select the domain name or LDAP server.
6	Authentication Method	 Select the user authentication method. MFP Local Authentication — Use MFP local authentication on your equipment. Windows Domain Authentication — Use network authentication managed by the Windows domain. LDAP Authentication — Use network authentication managed by LDAP.

	Item name	Description
7	Password	Enter the password. You can enter up to 64 alphanumerical characters and symbols (! # () * + , / : ; = ? @ \$ ^ _ ` { } ~ \ space).
8	PIN Code	Enter the PIN code for the user authentication.

Note


- The PIN code is up to 32 figures (0 9) long. The minimum length is specified on [User Authentication Setting].
 - P.309 "Setting up User Authentication Setting"
- If you change any settings, the changes will be reflected from the next time you log in.
- When you use the PIN code for the Windows domain authentication or LDAP authentication, the unique PIN code should be assigned for all users.

	code should be assigned for all disers.	
9	Card Information	Enter the information necessary for card authentication.
10	Role Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Select from the registered roles. Click the [Edit] button and select roles from the displayed screen. P.144 "[Role Assignment] screen"
11	Group Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Select from the registered groups. Click the [Edit] button and select groups from the displayed screen. P.145 "[Group Assignment] screen"
12	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
13	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 halfwidth alphanumerical characters and symbols. For example, enter "\192.168.1.1\users\name" to specify the folder called "users\name" on the computer whose server address is "192.168.1.1".
14	Department Number	Select from the registered departments. P.153 "[Department Management] Item list <access mode="" policy="">"</access>
15	PanelUI Language	Select the display language for the touch panel.
16	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
17	PanelUI Keyboard Layout	Select the keyboard pattern displayed on the touch panel.

	Item name	Description
18	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab.
		OFF — Not performed
		• ON — Performed
		P.130 "[Quota Setting] screen <access mode="" policy="">"</access>
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.

☐ [Enter Password] screen

 
You can display the [Enter Password] screen by selecting the check box of the user whose password you want to change in the [User Accounts] item list and clicking the [Reset Password] button.



	Item name	Description
1	[OK] button	Saves the entered password.
2	[Cancel] button	Cancels the password change.
3	Password	Enter the new password.

☐ [Edit User Information] screen

You can update registered user information.

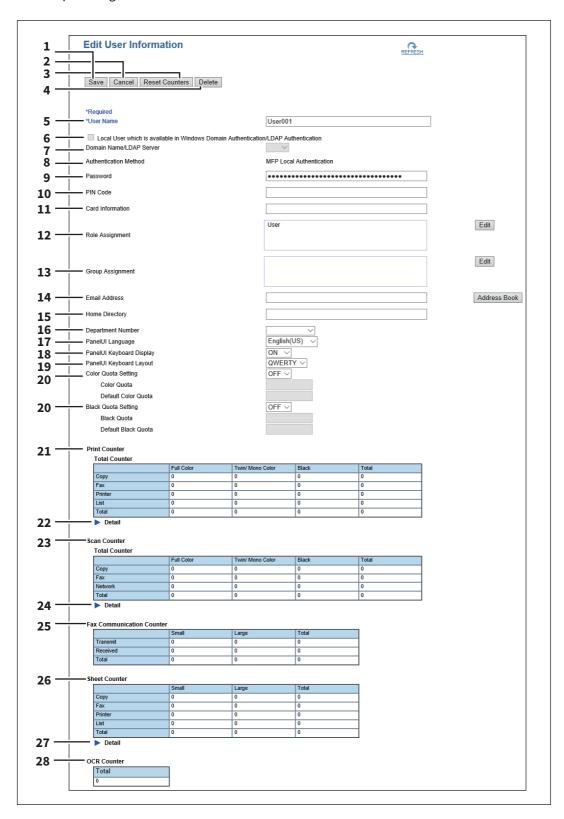

	Item name	Description
1	[Save] button	Saves the entered user information.
2	[Cancel] button	Cancels changing user information.
3	[Reset Counters] button	Resets counters.


	Item name	Description	
4	[Delete] button	Deletes the displayed user from the user account.	
5	User Name	Displays the user name.	
	Note		
	If you change any settings, the changes will be reflected from the next time you log in.		
6	Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register as a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.	
	The above setting is available only when the [Local User which is available in Windows Domain Authentication/LDAP Authentication] checkbox is selected. P.312 "Windows Domain Authentication" P.314 "LDAP Authentication"		
7	Domain Name/LDAP Server	Displays the registered domain name or LDAP server. Select this item if you want to change. You can select this item only when the authentication method is [Windows Domain Authentication] or [LDAP Authentication].	
8	Authentication Method	Displays the user authentication method.	
		MFP Local Authentication — Use MFP local authentication on your	
		equipment.	
		Windows Domain Authentication — Use network authentication managed by the Windows domain.	
		• LDAP Authentication — Use network authentication managed by LDAP.	
9	Password	You can change the password only when the authentication method is [MFP Local Authentication].	
	Note		
	If you change any settings, the changes will be reflected from the next time you log in.		
10	PIN Code	Displays the PIN code for the user authentication. You can set this item only when the authentication method is [MFP Local Authentication].	
	Note		
	• The PIN code is up to 32 figures (0 - 9) long. The minimum length is specified on [User Authentication Setting]. P.309 "Setting up User Authentication Setting" If you change any settings, the changes will be reflected from the peyt time you log in		
	 If you change any settings, the changes will be reflected from the next time you log in. When you use the PIN code for the Windows domain authentication or LDAP authentication, the unique PIN code should be assigned for all users. 		
11	Card Information	Enter the information necessary for card authentication.	
12	Role Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Displays the registered roles. Click the [Edit] button and select roles from the displayed screen. P.144 "[Role Assignment] screen"	
	Note If you change any settings, the changes will be reflected from the next time you log in.		

	Item name	Description
13	Group Assignment	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Displays the registered groups. Click the [Edit] button and select groups from the displayed screen. P.145 "[Group Assignment] screen"
	Note If you change any settings, the	changes will be reflected from the next time you log in.
14	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
15	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 halfwidth alphanumerical characters and symbols. For example, enter "\192.168.1.1\users\name" to specify the folder called "users\name" on the computer whose server address is "192.168.1.1".
16	Department Number	Displays the registered departments. Select this item if you want to change. P.153 "[Department Management] Item list <access mode="" policy="">"</access>
17	PanelUI Language	Displays the registered display languages of the touch panel. Select this item if you want to change.
18	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
19	PanelUI Keyboard Layout	Displays the registered keyboard patterns for the touch panel. Select this item if you want to change.
20	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. • OFF — Not performed • ON — Performed □ P.130 "[Quota Setting] screen <access mode="" policy="">"</access>
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.
21	Print Counter	Displays the output total count value.
22	Detail	Displays details of the total output count value when you click []. Copy Counter: Displays the number of pages printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of pages printed by system page print operations for paper sizes set on your equipment.

	Item name	Description
23	Scan Counter	Displays the total count value of scanned documents.
24	Detail	Displays details of the total count value of scanned documents when you click []. Copy Counter: Displays the number of pages scanned by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages scanned by fax reception for paper sizes set on your equipment. Network Counter: Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
25	Fax Communication Counter	Displays the communication record.
26	Sheet Counter	Displays the number of printed sheets according to the function being used. Values for the small size and large size are displayed according to the paper size specified on your equipment. This counter increments by 1 for either single or dual-sided copying.
27	Detail	Displays details of the number of printed sheets when you click []. Copy Counter: Displays the number of sheets printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of sheets printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of sheets printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of sheets printed by system page print operations for paper sizes set on your equipment.
	Note This item is available only for s	ome models.
28	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip This OCR Counter appears only	when an OCR Enabler is installed.

\square [Role Assignment] screen

You can select roles to be assigned.

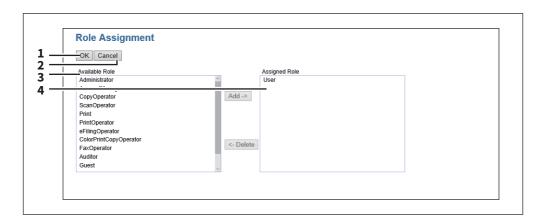


	Item name	Description
1	[OK] button	Saves the assigned roles.
2	[Cancel] button	Cancels assigning roles.

	Item name	Description
3	Available Role	Displays a list of registered roles. Select the role to be assigned and click the [Add] button.
4	Assigned Role	Displays a list of the assigned roles. Select the role to be removed from the assignment and click the [Delete] button.

☐ [Group Assignment] screen

You can select groups to be assigned.

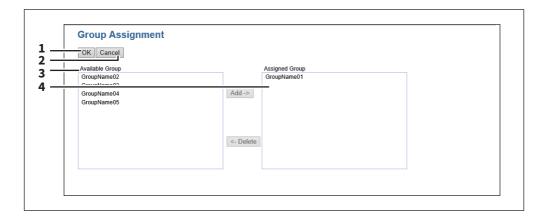


	Item name	Description
1	[OK] button	Saves the assigned groups.
2	[Cancel] button	Cancels assigning groups.
3	Available Group	Displays a list of registered groups. Select the group to be assigned and click the [Add] button.
4	Assigned Group	Displays a list of the assigned groups. Select the group to be removed from the assignment and click the [Delete] button.

■ [Group Management] Item list <access policy mode>

You can manage the registered roles as groups if you are logged in to the access policy mode.


- P.146 "[Create Group Information] screen"
- P.146 "[Edit Group Information] screen"

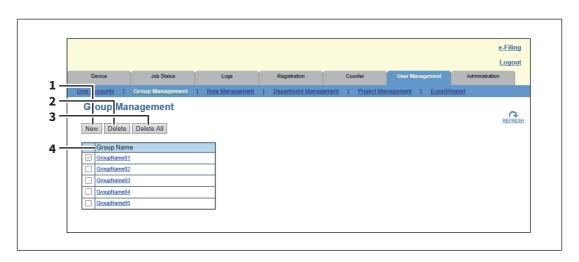

	Item name	Description
1	[New] button	Allows you to add a new group. □ P.146 "[Create Group Information] screen"
2	[Delete] button	Deletes the group selected in the group list.
3	[Delete All] button	Deletes all groups.
4	Group Name	Displays the group name. You check group information by clicking the group name. P.146 "[Edit Group Information] screen"

$f \square$ [Create Group Information] screen


You can register new groups.

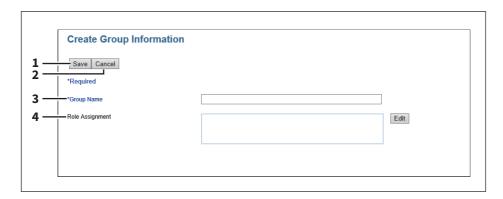

	Item name	Description
1	[Save] button	Saves the entered group information.
2	[Cancel] button	Cancels creating group information.
3	Group Name	Enter the group name. You can enter up to 128 alphanumerical characters and symbols other than ", ' (back quote), (,), *, +, /, :, ; (semicolon), <, =, >, ?, [,], ' (apostrophe), $\{$, $\}$, \sim , and , (comma).
4	Role Assignment	You can select roles to be assigned to the group. Click the [Edit] button and select roles from the displayed screen. P.144 "[Role Assignment] screen"

☐ [Edit Group Information] screen

You can check roles registered to the group.

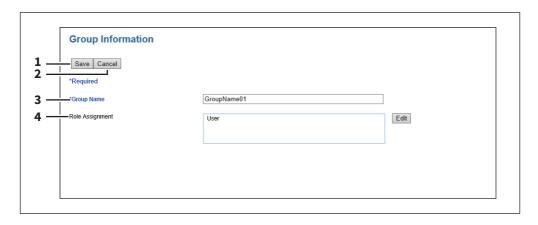


	Item name	Description
1	[Save] button	Saves the entered group information.
2	[Cancel] button	Cancels changing group information.
3	Group Name	Displays the group name.
4	Role Assignment	Displays the roles assigned to the group. Click the [Edit] button and select roles from the displayed screen. P.144 "[Role Assignment] screen"

■ [Role Management] Item list <access policy mode>

You can manage and register roles if you are logged in to the access policy mode.

- P.148 "Default roles and privileges"
- P.150 "[Create New Role] screen"
- P.152 "[Edit Role] screen"

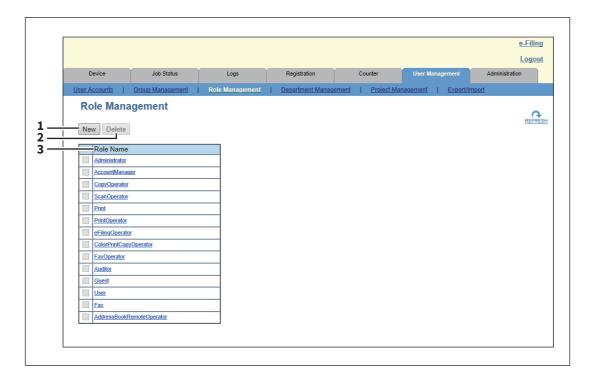

	Item name	Description
1	[New] button	Allows you to add a new role. □ P.150 "[Create New Role] screen"
2	[Delete] button	Deletes the role selected in the role list. However, you cannot delete the default roles.
3	Role Name	Displays the role name. For more information on default roles, see the following: P.148 "Default roles and privileges" You can check role information by clicking the role name. P.152 "[Edit Role] screen"

☐ Default roles and privileges

The following table describes privileges granted to default roles.

The functions listed in "Privileges" and "Permitted operations (functions)" below are displayed in "6 Function list" on the [Create Role Information] screen.

P.150 "[Create New Role] screen"


Default role names	Privileges	Permitted operations (functions)
Administrator	EWB Function	EWB Access
	Scan Function *1	Store to e-Filing
	Output Setting *2	Color Print
	e-Filing	e-Filing Access e-Filing Deletion
	Device Setting	Device Setting
	User/Department Management	Create, read, edit, or delete information for user/department management
	Log Management	Read Export
	Job Management	Job Operation
	Addressbook Management	Export/Import Address Book Create a clone file/install an address book
AccountManager	EWB Function	EWB Access
	User/Department Management	Create, read, edit, or delete information for user/department management
CopyOperator	Copy Function	Copy Job
	EWB Function	EWB Access
ScanOperator	EWB Function	EWB Access
	Scan Function	Store to Local File Share Store to Remote Server Send Email RemoteScan/WSScan(Pull)
	Local File Share	Store to Local Storage Store to USB Device
	Remote	Send Email Store to Remote Server WS Scan(Push)
Print	Print Function *1	Print Job
	EWB Function	EWB Access
PrintOperator	Print Function *1	Print Management
	EWB Function	EWB Access
	Output Setting *2	Color Print
eFilingOperator	EWB Function	EWB Access
	Scan Function *1	Store to e-Filing
	e-Filing	e-Filing Access

Default role names	Privileges	Permitted operations (functions)
ColorPrintCopyOperator	Copy Function	Copy Job Color Copy
	Print Function *1	Print Job Color Print
	EWB Function	EWB Access
	Output Setting	Color Print
FaxOperator	EWB Function	EWB Access
	Fax/iFax Function	Internet Fax Transmission Fax Transmission Fax Received Print *3
Auditor	EWB Function	EWB Access
	Log Management *1	Read
Guest	(No privilege settings)	(No settings)
User	Copy Function	Copy Job Color Copy *2 Store to Local File Share Store to Remote Server Store to e-Filing
	Print Function *1	Print Job Color Print *2 Store to e-Filing
	EWB Function	EWB Access
	Scan Function	Store to Local File Share Store to Remote Server Send Email Store to e-Filing RemoteScan/WSScan(Pull)
	Fax/iFax Function *1	Internet Fax Transmission Fax Transmission Store to Local File Share Store to Remote Server
	Output Setting *2	Color Print
	Local File Share	Store to Local Storage Store to USB Device
	Remote	Send Email Store to Remote Server WS Scan(Push)
	e-Filing	e-Filing Access
Fax	EWB Function	EWB Access
	Fax/iFax Function *1	Internet Fax Transmission Fax Transmission
AddressBookRemoteOperator	Addressbook Management	Export/Import Address Book Create a clone file/install an address book
	-	

^{*1} Part of operations (functions) is permitted.
*2 Available only for models that support color printing.
*3 For the details of the fax received print function, contact your service technician.

☐ [Create New Role] screen

You can register a new role.

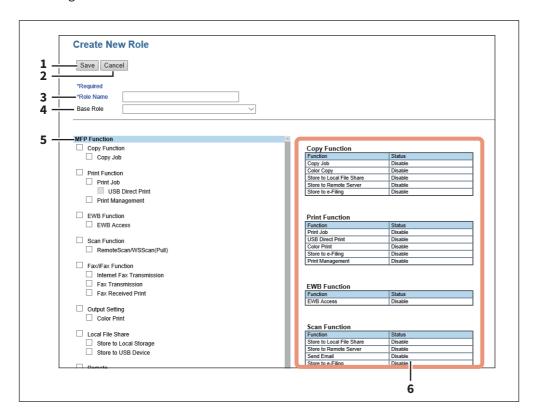


	Item name	Description
1	[Save] button	Saves the entered role information.
2	[Cancel] button	Cancels creating the role.
3	Role Name	Enter the role name. You can enter up to 128 characters.
4	Base Role	Select a role which is used as a base of the new role. You can select any registered roles or default roles (CopyOperator, ScanOperator, Print, PrintOperator, eFilingOperator, ColorPrintCopyOperator, FaxOperator, Guest, User, Fax) as the base role.

	Item name		Description
5	MF	P Function	Allows you to select the privileges to be assigned to the role.
		Copy Function	Assigns all copy functions.
		Copy Job	Assigns the copy job function.
		Print Function	Assigns all print functions.
		Print Job	Assigns the print job function.
		USB Direct Print	Assigns the USB direct print function.
		Print Management	Assigns the print management function.
	EWB Function *1		Assigns all EWB functions.
		EWB Access	Assigns the EWB access function.
		Scan Function	Assigns all scan functions.
		Remote Scan/ WSScan(Pull)	Assigns the Remote Scan or Web Services Scan function.
		FAX/iFAX Function	Assigns all fax/ifax functions.
		Internet Fax Transmission	Assigns all Internet Fax transmission functions.
		Fax Transmission	Assigns the fax transmission function.
		Fax Received Print	Assigns the fax/Internet Fax received print function.
		Output Setting *2	Assigns all output setting functions.
		Color Print	Assigns the color print function.
		Local File Share	Assigns all local file share functions.
		Store to Local Storage	Assigns all local file storage functions.
		Store to USB Device	Assigns all storage to USB device functions.
		Remote	Assigns all remote functions.
		Send Email	Assigns scan to function.
		Store to Remote Server	Assigns all storage to remote server functions.
		WS Scan(Push)	Assigns the WS scan (push) function.
		e-Filing	Assigns all e-Filing functions.
		e-Filing Access	Assigns the e-Filing access functions.
6	Fu	nction list	Displays operations (functions) enabled/disabled by privileges assigned to the role selected from "MFP Function". Even if one item is selected from "MFP Function", more than one function may be enabled. Example: If you select the [Send Email] check box in [Remote] from "MFP Function", [Send Email] in [Remote] and that in [Scan Function] on the "Function list" will be enabled.

^{*1} The External Interface Enabler is required to use the EWB (Embedded Web Browser) function. This setting is available only for some models.
*2 Available only for models that support color printing.

☐ [Edit Role] screen

You can confirm and edit roles. However, you cannot edit the default roles.

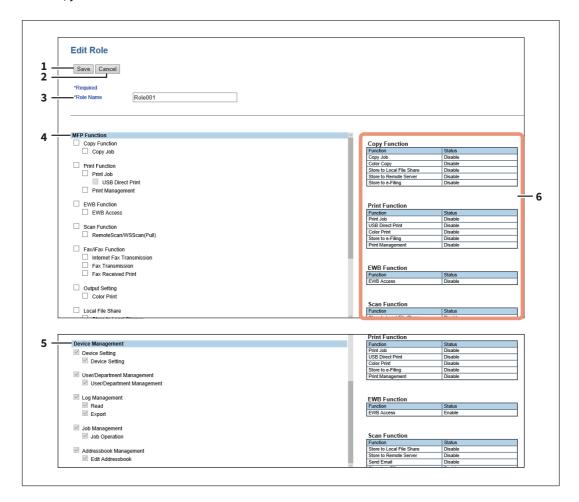


	Item name	Description
1	[Save] button	Saves the edited role information.
2	[Cancel] button	Cancels editing the role.
3	Role Name	Enter if changing the role name. You can enter up to 128 alphanumerical characters and symbols other than ", ' (backquote), (,), *, +, /, :, ; (semicolon), <, =, >, ?, [,], ' (apostrophe), $\{$, $\}$, \sim , and , (comma).
4	MFP Function	Allows you to select the MFP function to be assigned to the group. Select from the following functions. See the following for details: P.150 "[Create New Role] screen"
5	Device Management	Displays device management privileges assigned to default roles. (Default roles only) P.148 "Default roles and privileges"
6	Function list	Displays functions assigned to the role. See the following for details: P.150 "[Create New Role] screen"

■ [Department Management] Item list <access policy mode>

You can manage departments if you are logged in to the access policy mode.


- P.154 "[Department Information] screen"
- P.155 "[Edit Department Information] screen"

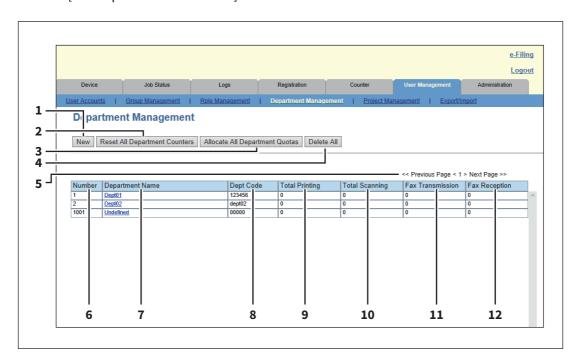

	Item name	Description
1	[New] button	Allows you to add a new department. P.154 "[Department Information] screen"
2	[Reset All Department Counters] button	Resets counters for all departments.
3	[Allocate All Department Quotas] button	Initializes quotas for all departments.
4	[Delete All] button	Deletes the registered department.
5	Select Page	Allows you to select a page when there are 101 items or more.
6	Number	Displays the registration number of the department.
7	Department Name	Displays the department name. Click a department name link to check the department management information. P.155 "[Edit Department Information] screen"
8	Dept Code	Displays the department code.
9	Total Printing	Displays the total number of printed pages of the department.
10	Total Scanning	Displays the total number of scanned pages of the department.
11	Fax Transmission	Displays the total number of transmitted fax pages of the department.
12	Fax Reception	Displays the total number of received fax pages of the department.

lacksquare [Department Information] screen


You can register a new department.

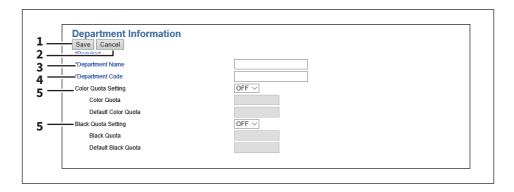

	Item name	Description
1	[Save] button	Saves the entered department information.
2	[Cancel] button	Cancels creating the department information.
3	Department Name	Enter the department name. You can enter up to 20 characters.
4	Department Code	Enter the department code. You can enter up to 63 characters (except the following: ! " # \$ % & ' () * + , / : ; <=>? @ [\] ^ `{ } ~ space).
5	Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. • OFF — Not performed • ON — Performed P.130 "[Quota Setting] screen <access mode="" policy="">"</access>
	Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.99.

☐ [Edit Department Information] screen

You can confirm and edit department information.

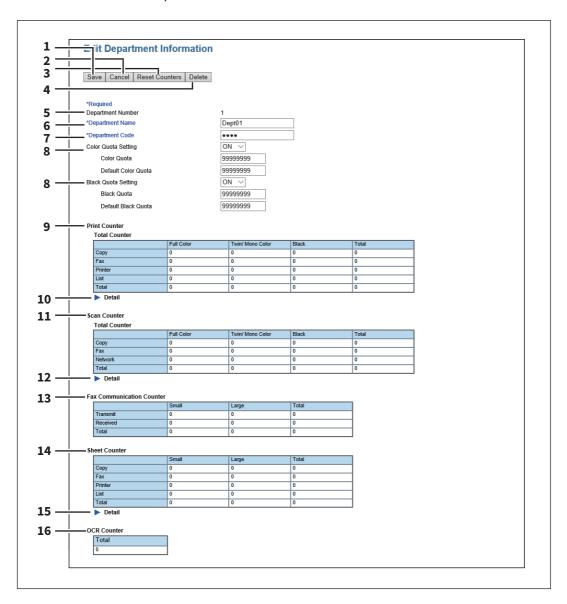

	Item name	Description
1	[Save] button	Saves the entered department information.
2	[Cancel] button	Cancels changing the department information.
3	[Reset Counters] button	Resets counters.
4	[Delete] button	Deletes the displayed department.
5	Department Number	Displays the registration number of the department.
6	Department Name	Enter if changing the department name. You can enter up to 20 characters.
7	Department Code	Enter if changing the department code. You can enter up to 63 characters (except the following: ! " # \$ % & ' () * + , / :; <=>? @ [\] ^ `{ }~ space).

	Description
Quota Setting	Select this to perform the quota setting of the department according to the setting specified in the [Quota Setting] screen on the [Counter] tab. • OFF — Not performed • ON — Performed
	P.130 "[Quota Setting] screen <access mode="" policy="">"</access>
Quota	Displays the quota amount. This value decreases according to the weight set in the [Quota Setting] screen on the [Counter] tab, and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
Default Quota	Enter the default amount to assign to the department. When [Black/Color Quota] or [Black Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999. When [Job Quota] is set in the [Quota Setting] screen on the [Counter] tab, you can enter up to 99,999,999.999.
Print Counter	Displays the output total count value.
Detail	Displays details of the total output count value when you click []. Copy Counter: Displays the number of pages printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of pages printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of pages printed by system page print operations for paper sizes set on your equipment.
Scan Counter	Displays the total count value of scanned documents.
Detail	Displays details of the total count value of scanned documents when you click []. Copy Counter: Displays the number of pages scanned by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of pages scanned by fax reception for paper sizes set on your equipment. Network Counter: Displays the number of pages scanned by scan operations for paper sizes set on your equipment.
Fax Communication Counter	Displays the communication record.
Sheet Counter	Displays the number of printed sheets according to the function being used. Values for the small size and large size are displayed according to the paper size specified on your equipment. This counter increments by 1 for either single or dual-sided copying.
Detail	Displays details of the number of printed sheets when you click[]. Copy Counter: Displays the number of sheets printed by copy operations for paper sizes set on your equipment. Fax Counter: Displays the number of sheets printed by fax reception for paper sizes set on your equipment. Printer Counter: Displays the number of sheets printed by print operations and E-mail reception (Internet Fax reception) for paper sizes set on your equipment. List Counter: Displays the number of sheets printed by system page print operations for paper sizes set on your equipment.
	Print Counter Detail Scan Counter Detail Fax Communication Counter Sheet Counter


	Item name	Description
16	OCR Counter	Displays the number of images to which an OCR process has been performed.
	Tip This OCR Counter appears only	when an OCR Enabler is installed.

■ [Project Management] Item list <access policy mode>

You can register project codes that can be assigned to jobs when you are logged in access policy mode.


- P.158 "[Project Management] screen"
- P.158 "[Create Project Information]/[Edit Project Information] screen"

☐ [Project Management] screen

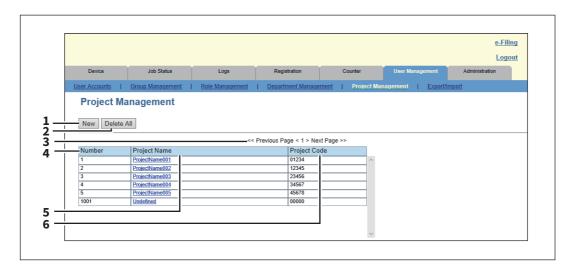

	Item name	Description
1	[New] button	Allows you to register a new project code. P.158 "[Create Project Information]/[Edit Project Information] screen"
2	[Delete All] button	Deletes all of the registered project codes.
3	Select Page	Allows you to select a page when there are 20 items or more.
4	Number	Displays the project code number.
5	Project Name	Displays the project name.
6	Project Code	Displays the project code.

☐ [Create Project Information]/[Edit Project Information] screen

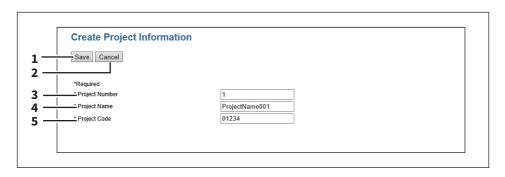

	Item name	Description
1	[Save] button	Registers the information of the new project code.
2	[Cancel] button	Cancels project code creation.
3	Project Number	Enter the project code number.
4	Project Name	Enter the project name.

	Item name	Description
5	Project Code	Enter the project code.

■ [Export/Import] Item list <access policy mode>


You can export and import your device settings if you are logged in to the access policy mode.

- P.159 "Export"
- P.160 "Import"

■ Export


Note

The exported user information must be controlled appropriately to prevent illegal access or tampering.

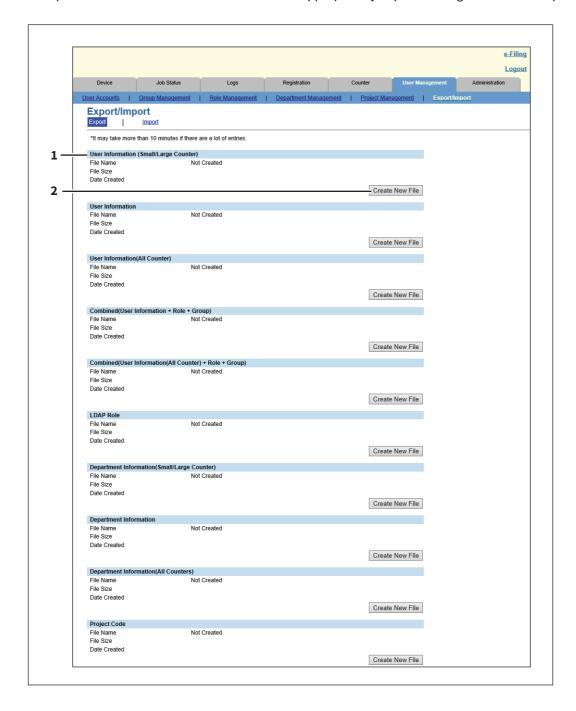

	Item name	Description
1	Select Export Information	Select the information type to be exported from the following.
	Туре	User Information (Small/Large Counter)
		User Information
		User Information(All Counter)
		Combined(User Information + Role + Group)
		• Combined(User Information(All Counter) + Role + Group)
		• LDAP Role
		Department Information(Small/Large Counter)
		Department Information
		Department Information(All Counters)
		Project Code
2	[Create New File] button	Creates the export file of the selected information type.

☐ Import

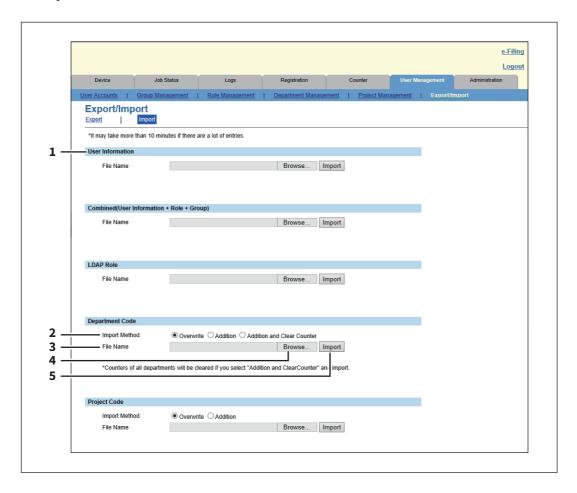


	Item name	Description
1	Select Import Information Type	Select the information type to be imported from the following. • User Information • Combined(User Information + Role + Group) • LDAP Role • Department Code • Project Code

	Item name	Description
2	Import method	Specify this item when you have selected Department Code or Project Code.
3	File name	Displays the name of the import file.
4	[Browse] button	Allows you to find and select the import file.
5	[Import] button	Imports the displayed file.

■ [Shared Settings] Item list <access policy mode>

When this printer is set as the primary MFP in [Shared Setting] from [Setting up User Authentication Setting], you can synchronize the user information on the printer with other secondary MFPs.

P.309 "Setting up User Authentication Setting"

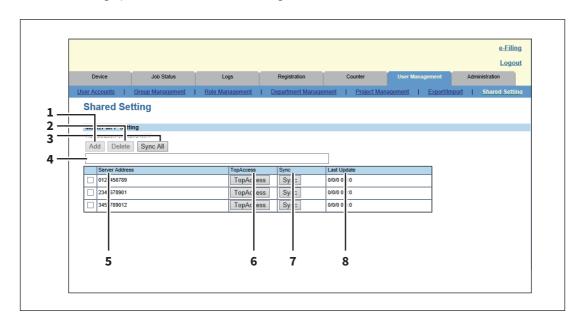

	Item name	Description
1	[Add] button	Adds a new secondary MFP. Enter the IP address or host name for the secondary MFP for the distribution destination in the input box below, and then click the [Add] button to register. You can register up to 10 MFPs.
2	[Delete] button	Deletes the selected MFP from the list of secondary MFPs.
3	[Sync All] button	Synchronizes the information on this printer with the user information for all registered secondary MFPs.

Note

- The synchronized information is the user information (User Name, Password, PIN Code, Card Information, Role Assignment, Group Assignment, Panel UI Language, Panel UI Keyboard Layout, Email Address, Home Directory, PanelUI Keyboard Display). Settings for Department Management and Project Management are not synchronized.
- Only user information updated since the last sync is synchronized. When a user has been deleted, the user of the secondary MFP is also deleted during the synchronization.
- During the initial synchronization, if there is user information in a secondary MFP that is not registered to the printer when the printer is a primary MFP, the user information for the secondary MFP is deleted.
- The Port Number does not synchronize with the primary MFP or different secondary MFPs. P.280 "Off Device Customization Architecture settings"
- Enter the IP address or host name when registering a secondary MFP. Input box Server Address Displays a list of registered secondary MFPs.

	Item name	Description
6	[TopAccess] button	Starts TopAccess.
7	[Sync] button	Synchronizes the user information for relevant secondary MFPs with the information on the printer.
8	Last Update	Displays the previous update time.

[Administration] Tab Page

This section describes administrative functions which allow you to configure devices and network, and manage users and groups from TopAccess access policy mode. This section is intended for persons who are in charge of this equipment. There is no need for general users to read.

General settings 165 Network settings 179 Copier settings 228 Fax settings 233 Save as file settings 238 Email settings 249 InternetFax settings 254 Printer/e-Filling settings 258 Printer Sevice settings 259 Print Service settings 276 ICC Profile settings 274 Print Data Converter settings 277 Embedded Web Browser settings 277 Off Device Customization Architecture settings 280 Version 281 Setting up General settings 282 Setting up General settings 282 Setting up Network settings 282 Setting up Dopier settings 285 Setting up Fax settings 285 Setting up Fax settings 286 Setting up Fax settings 290 Setting up Permal settings 290 Setting up Permal settings 293 Setting up Printer Settings 293 Setting up Printer Settings 293 Setting up Pr	[Setup] Item List	165
Copier settings 228 Fax settings 232 Save as file settings 249 InternetFax settings 254 Printer/e-Filing settings 258 Printer settings 259 Print Service settings 279 Print Service settings 274 Print Data Converter settings 274 Embedded Web Browser settings 277 Off Device Customization Architecture settings 280 Version 281 Setting up General settings 282 Setting up General settings 282 Setting up Network settings 284 Soetting up Copier settings 285 Setting up Fax settings 286 Setting up Fax settings 289 Setting up Final settings 290 Setting up Printer/e-Filing settings 293 Setting up Printer settings 293 Setting up Printer settings 294 Setting up Printer settings 293 Setting up Printer cycice settings 295 Setting up Printer Device customizati	General settings	165
Fax settings 232 Save as file settings 238 Email settings 249 InternetFax settings 254 Printer/e-Filing settings 258 Printer settings 259 Print Service settings 274 Print Data Converter settings 277 Embedded Web Browser settings 277 Off Device Customization Architecture settings 280 Version 281 [Setup] How to Set and How to Operate 282 Setting up General settings 282 Setting up Network settings 285 Setting up Fax settings 289 Setting up Fax settings 290 Setting up Printer/e-Filling settings 292 Setting up Printer/e-Filling settings 293 Setting up Print Printer settings 295 Setting up Print Data Converter settings 295 Setting up Print Data Converter settings 295 <	Network settings	179
Save as file settings. 238 Email settlings 249 InternetFax settings 254 Printer/e-Filing settings 258 Printer settings. 259 Print Service settings. 266 ICC Profile settings. 274 Print Data Converter settings. 276 Embedded Web Browser settings. 277 Off Device Customization Architecture settings. 280 Version. 281 [Setup] How to Set and How to Operate 282 Setting up General settings. 282 Setting up Network settings. 284 SNMP V3 settings 285 Setting up Network settings. 284 SNMP V3 settings 285 Setting up Copier settings 288 Setting up Fax settings. 288 Setting up Fax settings. 290 Setting up F-mail settings. 290 Setting up Printer settings. 290 Setting up Print Service settings. 293 Setting up Print Data Converter settings. 295 Setting up Print	Copier settings	228
Email settings	Fax settings	232
InternetFax settings	Save as file settings	238
Printer/e-Filing settings258Printer settings259Print Service settings266ICC Profile settings274Print Data Converter settings276Embedded Web Browser settings277Off Device Customization Architecture settings280Version281[Setup] How to Set and How to Operate282Setting up General settings282Setting up Network settings285Setting up Copier settings285Setting up Fax settings285Setting up Fax settings289Setting up Fax settings290Setting up Fernall settings290Setting up Printersetsettings292Setting up Printer/e-Filing settings293Setting up Printersettings294Setting up Printersettings295Setting up Print Service settings297Setting up Print Data Converter settings297Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings307Certificate management settings307Certificate management settings302Sessoord Policy settings322	Email settings	249
Printer settings	InternetFax settings	254
Print Service settings	Printer/e-Filing settings	258
ICC Profile settings	Printer settings	259
Print Data Converter settings	Print Service settings	266
Embedded Web Browser settings	ICC Profile settings	274
Off Device Customization Architecture settings	Print Data Converter settings	276
Version.281[Setup] How to Set and How to Operate282Setting up General settings.282Setting up Network settings.284SNMP V3 settings.285Setting up Copier settings.288Setting up Fax settings.289Setting up Save as file settings.290Setting up InternetFax settings.292Setting up InternetFax settings.293Setting up Printer/e-Filing settings.294Setting up Print Service settings.295Setting up Print Service settings.297Setting up Print Data Converter settings.298Setting up Print Data Converter settings.302Configuring the EWB function.303Setting up Off Device Customization Architecture settings.304Displaying version information.305[Security] Item List.307Authentication settings.307Certificate management settings.318Password Policy settings.322		
[Setup] How to Set and How to Operate282Setting up General settings282Setting up Network settings285SNMP V3 settings285Setting up Copier settings288Setting up Fax settings289Setting up Bettings290Setting up E-mail settings290Setting up InternetFax settings293Setting up Printer/e-Filing settings293Setting up Printer/estings294Setting up Print Service settings295Setting up ICC Profile settings297Setting up Print Data Converter settings298Setting up Off Device Customization Architecture settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings318	Off Device Customization Architecture settings	280
Setting up General settings282Setting up Network settings284SNMP V3 settings285Setting up Copier settings288Setting up Fax settings289Setting up Fax settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up Print Data Converter settings297Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322	Version	281
Setting up General settings282Setting up Network settings284SNMP V3 settings285Setting up Copier settings288Setting up Fax settings289Setting up Fax settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up Print Data Converter settings297Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322	[Setup] How to Set and How to Operate	282
Setting up Network settings284SNMP V3 settings285Setting up Copier settings288Setting up Fax settings289Setting up Save as file settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up ICC Profile settings298Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings318	Setting un General settings	282
SNMP V3 settings		
Setting up Copier settings288Setting up Fax settings289Setting up Save as file settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up Print Data Converter settings298Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322		
Setting up Fax settings289Setting up Save as file settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up ICC Profile settings298Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322	•	
Setting up Save as file settings290Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Print Service settings295Setting up Print Service settings297Setting up ICC Profile settings298Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322		
Setting up E-mail settings292Setting up InternetFax settings293Setting up Printer/e-Filing settings294Setting up Printer settings295Setting up Print Service settings297Setting up ICC Profile settings298Setting up Print Data Converter settings302Configuring the EWB function303Setting up Off Device Customization Architecture settings304Displaying version information305[Security] Item List307Authentication settings307Certificate management settings318Password Policy settings322		
Setting up InternetFax settings		
Setting up Printer/e-Filing settings		
Setting up Printer settings		
Setting up Print Service settings		
Setting up ICC Profile settings	<u> </u>	
Setting up Print Data Converter settings		
Configuring the EWB function		
Displaying version information		
[Security] Item List		
Authentication settings	Displaying version information	305
Authentication settings	[Security] Item List	307
Certificate management settings		
Password Policy settings322		
, 0		
	, 0	

[Security] How to Set and How to Operate	326
Installing a device certificate	
Creating/Exporting a client certificate	332
Installing CA certificate	333
[Maintenance] Item List	335
Upload Software settings	335
Remove Software settings	337
Create Clone File settings	338
Install Clone File settings	341
Import settings	344
Export settings	346
Delete Files settings	348
Notification settings	348
Languages settings	352
User Paper Type	356
Data Backup	354
System Updates settings	
Reboot settings	
Panel View	358
[Maintenance] How to Set and How to Operate	
About the maintenance functions	
Uploading the client software	361
Removing the client software	
Deleting the data from local folder	
Setting up notification	
Importing and exporting	
Rebooting the equipment	372
[Registration] ([Administration] tab) Item List	
Public Home	
Public Theme Settings	
Public Home Settings	
Default Home	
Default Home Settings	
Simple Screen Settings	
Image/Icon Management	
Home Data List	
Fax Received Forward and InternetFAX Received Forward settings	
Meta Scan	
[Registration] ([Administration] tab) How to Set and How to Operate	
Registering Fax and Internet Fax received forward	399
[Application] Item List	
Application List	
Settings	408
[License] Item List	410
License List	410
Activate	411

[Setup] Item List

P.165 "General settings"
P.179 "Network settings"
P.228 "Copier settings"
P.232 "Fax settings"
P.238 "Save as file settings"
P.249 "Email settings"
P.254 "InternetFax settings"
P.258 "Printer/e-Filing settings"
P.259 "Printer settings"
P.266 "Print Service settings"
P.274 "ICC Profile settings"
P.276 "Print Data Converter settings"
P.277 "Embedded Web Browser settings"
P.280 "Off Device Customization Architecture settings"
P.281 "Version"
Tip
Users who are granted administrator privileges in access policy mode can access the [Setup] menu from the
[Administration] tab.
See the following pages for how to access it:
□ P.15 "Access Policy Mode"
in its recessioney mode

■ General settings

You can configure the general settings such as device information, energy save, date and time, and web general
setting.
P.166 "Setting up Device Information"
P.167 "Setting up Functions"
P.168 "Long File Name Setting"
P.168 "Setting up e-Filing Notification Events"
P.168 "Setting up Job Skip Control"
P.169 "Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator"
P.169 "Restriction of Destination Selection Method"
P.169 "Setting up Confidentiality Setting"
P.170 "Setting up Energy Save"
P.173 "Shutdown Setting"
P.173 "Setting up Date & Time"
P.174 "Setting up SNTP Service"
🚇 P.174 "Setting up Daylight Savings Time Setting"
P.175 "Setting up WEB General Setting"
P.175 "Home Setting"
🚇 P.177 "Assignment for Programmable Button"
P.177 "Panel Setting"
P.177 "OCR Setting"
P.178 "PDF/A Fileformat Setting"
Tip
The [General] submenu can be accessed from the [Setup] menu on the [Administration] tab.
See the following pages for how to access it and information on the [Setup] menu:
🚇 P.15 "Access Policy Mode"
P 165 "[Setup] Item List"

☐ Setting up Device Information

You can set the device information displayed in the [Device] tab page.




	Item name	Description
1	Name	Displays the device name of your equipment.
2	Copier Model	Displays the model name of your equipment.
3	Serial Number	Displays the serial number of your equipment.
4	MAC Address	Displays the MAC address of your equipment.
5	Save as File & e-Filing Space Available	Displays the available space for save as file and e-Filing on your equipment.
6	Fax Space Available	Displays the available space for fax transmission and reception for your equipment.
7	Data Cloning Function	Enable this item when migrating settings on your equipment to another device.
8	User Information Cloning	Enable this item when migrating the user information to another device. This item is available only when [Data Cloning Function] is enabled.
9	Administrator's Password Cloning	Enable this item when migrating the password of the default administrator to another device. This item is available only when [Data Cloning Function] is enabled.
10	USB Direct Print	Select whether the USB Direct Print function is enabled or disabled. USB Direct Print is available only for some models.
11	Location	Enter the installed location of your equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.
12	Geo Location	Enter the latitude and longitude in that order with a comma between them. Enter the precise values if required. Up to 64 characters can be entered including! $\% \% \% () * : + ; [, -=] . \sim . (e.g. geo:00.00,90.00)$
13	Contact Information	Enter the name of the person who is responsible for this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.
14	Service Phone Number	Enter the telephone number of the person who is responsible for servicing this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.

	Item name	Description
15	Administrative Message	Enter the message to the users about this equipment. This is displayed in the [Device] tab page that appears first when accessing the TopAccess website for users.

□ Setting up Functions

Tip


Some items may not be changeable depending on the installed options and their settings. For details, contact your service technician.

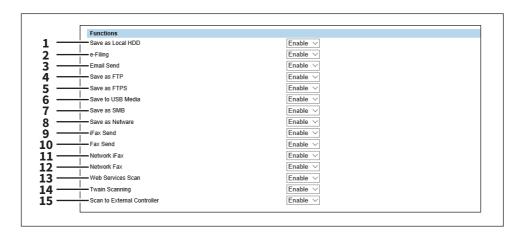

	Item name	Description
1	Save as Local HDD	Select whether to enable or disable the function to save on the internal storage device.
2	e-Filing	Select whether to enable or disable the e-Filing function.
3	Email Send	Select whether to enable or disable the function to transmit E-mails.
4	Save as FTP	Select whether to enable or disable the function to save using FTP.
5	Save as FTPS	Select whether to enable or disable the function to save using FTPS.
6	Save to USB Media	Select whether to enable or disable the use of USB media.
7	Save as SMB	Select whether to enable or disable the function to save using SMB.
8	Save as Netware	Select whether to enable or disable the function to save using NetWare.
9	iFax Send	Select whether to enable or disable the function to send Internet Faxes.
10	Fax Send	Select whether to enable or disable the function to send faxes.
11	Network iFax	Select whether to enable or disable the network iFax function.
12	Network Fax	Select whether to enable or disable the network fax function.
13	Web Services Scan	Select whether to enable or disable the web scanning service function.
14	Twain Scanning	Select whether to enable or disable the TWAIN scanning function.
15	Scan to External Controller	Select whether to enable or disable the function to scan to an external controller.

☐ Long File Name Setting

 The touch panel of this equipment may not be able to fully display a file name when the name is long, for example, in private print jobs due to its restriction. You can specify how to display file names in Long File Name Setting.



	Item name	Description
1	Long File Name Expression	Select how to display file names.
	(Display)	• First Portion — The file name is displayed from the beginning and "" is
		used to indicate that part of the name is not displayed.
		• Last Portion — The file name is displayed in the way where the end of the
		name can be seen.
		• First and Last Portions — The file name is displayed in the way where the
		beginning and the end of the file name can be seen.
		• Non-Abbreviation — The file name is displayed from the beginning up to
		the number of displayable characters.


☐ Setting up e-Filing Notification Events

You can set E-mail conditions for notifying you that the expiration date of data in e-Filing boxes is approaching.



	Item name	Description
1	Advance automatic delete notification	Select when an E-mail notifying you of the approaching of the expiration date of data in e-Filing boxes is to be sent. You can select how many days before the expiration date from 0 (not notified) to 99 days.

 ☐ Setting up Job Skip Control



	Item name	Description
1	Job Skip Control	You can select whether to enable or disable the function to skip jobs which do not match the printing conditions.

☐ Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator



	Item name	Description
1	No Restriction	Allows all users to perform operations on the Address Book.
2	Can be operated by Administrator / AddressbookRemoteOperator only	Only users with Administrator access or an AddressbookRemoteOperator can perform operations on the Address Book.


☐ Restriction of Destination Selection Method



	Item name	Description
1	Prohibit Direct Entry	Prohibits direct entry of the destination.
2	Prohibit Use Of Local Address Book	Prohibits selection of the destination from the address book.

☐ Setting up Confidentiality Setting

 You can specify whether or not to hide the document name, user name, and destination with asterisks (*) that are displayed on jobs.




	Item name	Description
1	Target of Restriction	Specify whether or not to apply the confidentiality setting on the job.
		• None — Does not apply the confidentiality setting.
		\bullet Only JobStatus — Applies the confidentiality setting only to the job status.
		• Only Log — Applies the confidentiality setting only to the job log.
		• JobStatus and Log — Applies the confidentiality setting to both the job
		status and job log.
2	Document Name	• Enable — Displays 10 asterisks (*) instead of the document name.
		• Disable — Displays the document name.


	Item name	Description
3	User Name	• Enable — Displays 10 asterisks (*) instead of the user name.
		Disable — Displays the user name.
4	ТО	• Enable — Displays 10 asterisks (*) instead of the destination.
		Disable — Displays the destination.
5	FROM	• Enable — Displays 10 asterisks (*) instead of the sender.
		Disable — Displays the sender.
6	Agent	• Enable — Displays 10 asterisks (*) instead of the agent.
		• Disable — Displays the agent.


☐ Setting up Energy Save

You can set Energy Save mode for your equipment.

 For information on types of Energy Save mode and how to enter the mode, see the **Quick Start Guide**.

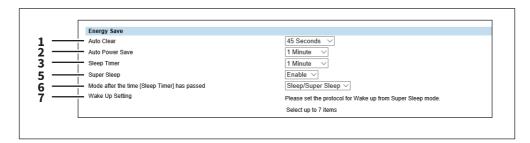



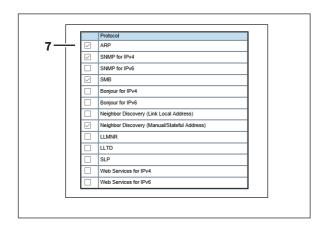

	Item name	Description
1	Auto Clear	Select how long your equipment can remain inactive before the touch panel automatically returns to the default display.
	Tip The changed value is applied to log.	o Auto Clear if its setting is altered. The history of Auto Clear is registered in the
2	Auto Power Save	Select how long your equipment can remain inactive before entering Automatic Energy Save mode.
3	Sleep Timer	Select how long your equipment can remain inactive before being entering Sleep mode.

	Item name	Description
4	Sleep Mode *1	Select the sleep mode that is activated when a specified period of time has passed.
		• Power Off — The equipment enters the Power Off mode.
		ullet Auto — The equipment enters the Sleep mode or the Power Off mode
		according to the LAN and Fax connections. If the connections are active, it
		enters the Sleep mode. If they are not active, it enters the Power Off mode.
		• Sleep — The equipment enters the Sleep mode.
		Note
		After you do cloning between the color and monochrome models, the sleep mode action might be changed. If the equipment is turned off unexpectedly or the sleep mode does not work as you like, check the Sleep Mode setting.
5	Super Sleep *1	Select whether this equipment enters the Super Sleep mode when the specified period has elapsed in the Automatic Energy Save mode or when the [ENERGY SAVER] button on the control panel is pressed.

Note

- When the Wireless LAN/Bluetooth Module is installed in this equipment, or when the IPsec feature is enabled, you cannot change the Super Sleep Mode from [Disable].
- If this equipment cannot be found on the network or cannot be connected via network while in Super Sleep, try searching again.
- The equipment may not enter this mode at the set timing depending on its operational status.

6	Mode after the time [Sleep Timer] has passed *2	Select the mode to be entered after the time set in [Sleep Timer] has passed.
7	Wake Up Setting	Select the protocol to wake up your equipment from the Super Sleep mode (or the Sleep mode for the models with no Super Sleep mode function) by a network search. The number of available protocols varies depending on the model.

Note

- The [Wake Up Setting] setting is enabled when sending an unspecified number of MFP data through "broadcasting" and sending multiple data with MFP specified through "multicasting". The [Wake Up Setting] setting is disabled when using "unicast" which specifies an address and sends.
- The wake up setting is enabled when the super sleep mode is enabled in the energy save setting.
- The protocol selecting list of the Wake Up setting is made to select the desired protocols regardless of whether the selected protocol is enabled or disabled on each protocol setting. If the selected protocol is disabled in its protocol setting, however, the Wake Up setting is disabled too and therefore this equipment will not be recovered from the Super Sleep mode or the Sleep mode (for models in which no Super Sleep mode is installed).
- When no response is returned from this equipment after you access the network even if a protocol selected on this setting is used, retry the access.

Tip

For "unicast" communication which carries out transmission by specifying a certain address in the following protocols, the equipment can return from the Super Sleep mode (or the Sleep mode for the models with no Super Sleep mode function) even if the Wake Up setting is not applied.

IPP, FTP, HTTP, SMB, SMTP, SNMP, RAW9100, LPD, WebService

- *1 This function is not available for some models.
- *2 This function is available only for some monochromatic models.

The following network settings are required for this equipment to enter the Super Sleep mode.

• Select other than [Use Stateless Address] in the IPv6 setting.

P.183 "IPv6"

• Select [Disable] for [Enable IPX/SPX] in the IPX/SPX setting.

P.225 "Setting up IPX/SPX"

• Select [Disable] for [Enable Apple Talk] in the AppleTalk setting.

P.226 "Setting up AppleTalk"

- Specify one of the following in [POP3 Network Service].
 - [Disable] for [Enable POP3 Client].
 - No entry for [POP3 Server Address].
 - No entry for [Account Name].
 - 0 for [Scan Rate].

P.216 "Setting up POP3 Client"

• Disable IEEE 802.1X authentication.

For the IEEE 802.1X authentication method under the wired LAN environment, refer to the following chapter in the **MFP Management Guide**.

Chapter 2: "SETTING ITEMS (ADMIN) - IEEE 802.1X Authentication Setting"

See the following for the network access setting in super sleep mode for your equipment.

ARP

Select this to enable address resolution when this equipment is used under IPv4 environment.

SNMP for IPv4

Select this to search for this equipment over the network with SNMP protocol when Client Utilities is used under IPv4 environment.

SNMP for IPv6

Select this to search for this equipment over the network with SNMP protocol when Client Utilities is used under IPv6 environment.

SMR

Select this to enable domain name resolution when NetBIOS name is used under IPv4 environment.

Bonjour for IPv4

Select this to search for this equipment over the network with the Bonjour protocol when it is used under IPv4 environment.

• Bonjour for IPv6

Select this to search for this equipment over the network with the Bonjour protocol when it is used under IPv6 environment.

• Neighbor Discovery (Link Local Address)

Select this to enable address resolution when this equipment is used under IPv6 environment.

Neighbor Discovery (Manual/Stateful Address)

Select this to enable address resolution when this equipment is used under IPv6 environment.

• LLMNR

Select this to enable domain name resolution when NetBIOS name is used.

LLTD

Select this to search for this equipment over the network with Nmap display when Network Mapper is used.

SLP

Select this to enable service discovery when SLP is used.

• Web Services for IPv4

 
Select this to search for this equipment over the network with WSDiscovery under IPv4 environment.

• Web Services for IPv6

Select this to search for this equipment over the network with WSDiscovery under IPv6 environment.

☐ Shutdown Setting

Specify whether to display a confirmation screen when shutting down the equipment.



Item name	Description
Display the shutdown screen when choices a	cify whether or not to display the confirmation screen.

☐ Setting up Date & Time

You can set the date, time, time zone, and date format.

Tip


- [Date & Time] settings are not available if the SNTP function is enabled.
- If the date and time is not set correctly, the SSL/TLS communications and Kerberos authentication with the server might fail.



	Item name	Description
1	Year/Month/Date/Time	Select the year and month in designated boxes. Also, enter the date and time in designated boxes.
2	Time Zone	Select the time zone where this equipment is located.
3	Date Format	Select the date format.

☐ Setting up SNTP Service


In SNTP Service, you can specify the SNTP server to refresh the time settings of this equipment using SNTP service.

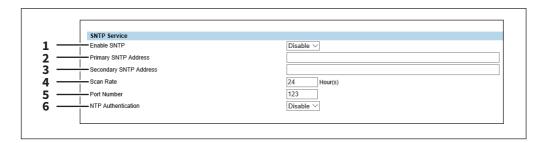

	Item name	Description	
1	Enable SNTP	Select whether to enable or disable SNTP (Simple Network Time Protocol). When this is enabled, the time settings of this equipment can be adjusted using the SNTP service.	
	Tip		
	[Date & Time] settings are not a	vailable if enabled.	
2	Primary SNTP Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the Primary SNTP Server Address when [Enable SNTP] is enabled.	
3	Secondary SNTP Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the Secondary SNTP Server Address when [Enable SNTP] is enabled as required.	
	Tip		
	When the [Obtain a SNTP Server Address automatically] option is enabled in the TCP/IP settings, the SNTP		
	server address can be obtained	using the DHCP server.	
	P.180 "Basic Setting"		
4	Scan Rate	Enter how often this equipment should access the SNTP server to check the time.	
5	Port Number	Enter the port number for the SNTP service. Generally "123" is used.	
6	NTP Authentication	Select whether to enable or disable NTP authentication.	

lacktriangle Setting up Daylight Savings Time Setting

Make the required settings for daylight savings time.

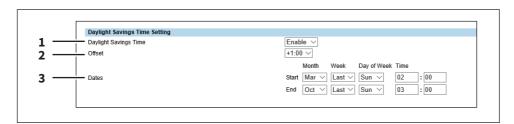

	Item name	Description
1	Daylight Savings Time	Select [Enable] to shift the clock to the daylight savings time. [Disable] is set as the default.
2	Offset	Select the desired offset (time difference) from the local standard time. You can select from between -2 and +2 hours, excluding 0 hour, in 30-minute increments. [+1:00] is set as the default.

	Item name	Description
3	Dates	Select the applicable period for the daylight savings time.
		• Start — Select or enter the start date and time of daylight savings time.
		• End — Select or enter the end date and time of daylight savings time.

Tip

- If you change the settings during the daylight saving time period, the changes will be reflected to the equipment's clock. If you select [Disable] during the applicable period, be sure to confirm that the correct time is displayed since the equipment's clock will shift to the current time. When the SNTP Service setting is enabled and if the SNTP server is synchronized, the correct time will be displayed.
 - P.173 "Setting up Date & Time"
- If the equipment is turned off at the start or end date and time, the equipment will shift the clock the next time it is turned on.
- After the clock shifts, the daylight saving time will also apply to the weekly timers.

Note

Select the Start and the End dates and times based on the time set for the equipment.

P.173 "Setting up Date & Time"

☐ Setting up WEB General Setting

You can set the session timer for TopAccess.



	Item name	Description
1	Session Timer	Enter how long you want this equipment to preserve the session data of TopAccess. You can enter any integer between 5 to 999. This setting also applies to the session data of the e-Filing web utility. "10" is set as the default.

Tip

- When logged in the access policy mode, you will be automatically logged out if the session timer elapses without any operation being performed.
- Once a logging-in user operates TopAccess, the changed value is applied to Session Timer if its setting is altered.

□ Home Setting

You can set the default screen displayed by pressing the [Home] button on the control panel when user authentication is enabled. The settings vary, depending on the [Sync Setting] setting.

Tip


For the procedure for home data synchronization, refer to the following page.

P.437 "Setting Home Data Synchronization"


When [Disable] is selected from [Sync Setting]



When [Use Network Server for Sync] is selected from [Sync Setting]

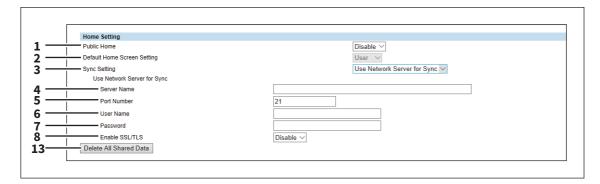

When [Use MFP for Sync] is selected from [Sync Setting]

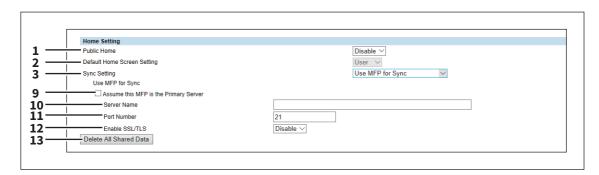


	Item name	Description
1	Public Home	Select whether to enable or disable Public Home.
2	Default Home Screen Setting	Select the Home to be displayed as the default screen when you press the [Home] button. <u>User</u> : Select this to the User Home screen. Public: Select this to display the Public Home screen.
3	Sync Setting	Specify whether or not to synchronize the HOME screen with the network server or other MFPs.
		Disable: Disable the Home sync function.
		Use Network Server for Sync: Select this to use the network server for
		synchronization.
		Use MFP for Sync: Select this to use MFP for synchronization.
4	Server Name	Enter the name of the network server.
5	Port Number	Enter the port number of the network server.
6	User Name	Enter the name of the user who accesses the network server.
7	Password	Enter the password of the user who accesses the network server.
8	Enable SSL/TLS	Select whether SSL/TLS is enabled or disabled.
9	Assume this MFP is the Primary Server	Select this check box to synchronize this MFP as the primary server. When you clear this check box, another MFP can synchronize as the primary server.
	Note	
	If the FTP server is disabled, you cannot set this MFP as the primary server.	
	P.209 "Setting up FTP Server"	
10	Server Name	Enter the name of the primary server when you set another MFP other than this MFP as the primary server.

	Item name	Description
11	Port Number	Enter the port number of the primary server when you set another MFP other than this MFP as the primary server.
12	Enable SSL/TLS	Select whether SSL/TLS is enabled or disabled when you set another MFP other than this MFP as the primary server.
13	Delete All Shared Data	Delete all the shared data stored in the FTP server.

☐ Assignment for Programmable Button

 
You can assign functions to Programmable Button 1 and Programmable Button 2.



	Item name	Description
1	Programmable Button 1/ Programmable Button 2	Select the function to assign.

□ Panel Setting

 
You can set the default screen on the control panel and the appearance order in the job lists.



	Item name	Description
1	Default Screen	Specify the functions to be displayed on the default screen after this equipment starts up. Select [Embedded Application] and then press [Assignment] to specify the applications to be set on the default screen.
2	Sort Order	Specify the appearance order of hold (fax) and secure Rx jobs in the job list. Ascending Order — Shows the jobs in the ascending order by day. Descending Order — Shows the jobs in the descending order by day.

□ OCR Setting

 You can specify the OCR function.




	Item name	Description
1	Language	Select the prioritized primary and secondary languages.
2	Auto Rotation	Specify whether or not to automatically rotate.

	Item name	Description
3	XLSX Sheet Composition	Specify how to create the XLSX sheet.
		• 1 Page Becomes 1 Sheet — Makes 1 page 1 sheet.
		• Multi Pages Become 1 Sheet — Combines multiple pages into 1 sheet.

■ PDF/A Fileformat Setting

 You can set the default level of the PDF/A file format.



	Item name	Description
1	Default Conformance Level	Select the default conformance level of PDF/A.
		• <u>PDF/A-1b</u> — Selects PDF/A-1b as a default setting.
		• PDF/A-2b — Selects PDF/A-2b as a default setting.

Note

When you save searchable PDF/A-2b files with the enabled OCR function, they might not conform to the PDF/A-2b standard, depending on several OCR languages that you select. It is recommended that you select PDF/A-1b to save searchable PDF/A files with the OCR function.

■ Network settings

 
P.165 "[Setup] Item List"

You can configure the network settings such as TCP/IP, Filtering, IPX/SPX, AppleTalk, Bonjour, LDAP Session, SMB
Session, NetWare Session, HTTP Network Service, SMTP Client, SMTP Server, POP3 Network Service, SNTP Service
FTP Client, FTP Server, SNMP Network Service, and Security Service.
P.180 "Basic Setting"
P.188 "Setting up Filtering"
P.189 "Setting up IP Security"
P.201 "Setting up SMB"
P.205 "Setting up HTTP"
P.206 "Setting up WSD"
P.208 "Setting up SMTP Server"
P.209 "Setting up FTP Server"
P.210 "LDAP Client settings"
P.214 "Setting up SMTP Client"
P.216 "Setting up POP3 Client"
P.218 "Setting up FTP Client"
P.219 "Setting up Bonjour"
P.219 "Setting up Mobile Scan(eSCL)"
P.220 "Setting up SNMP"
P.223 "Setting up SLP"
P.224 "Setting up LLTD"
P.224 "Syslog Setting"
P.225 "Setting up IPX/SPX"
P.226 "Setting up NetWare"
P.226 "Setting up AppleTalk"
P.227 "VNC Setting"
Tip
The [Network] submenu can be accessed from the [Setup] menu on the [Administration] tab.
See the following pages for how to access it and information on the [Setup] menu:
P.15 "Access Policy Mode"
East 1.10 Access to dicy mode

■ Basic Setting


You can set TCP/IP, DNS, and DDNS in the Basic Setting. The TCP/IP must be configured to enable TopAccess, SMB printing, Raw TCP or LPR printing, IPP printing, Scan to Email, and Internet Fax.

General Setting



	Item name	Description
1	Ethernet Speed Duplex Mode	Select the ethernet speed. [AUTO] is set as the default.
	Note	
	 When you select a specific ethernet speed, you must select the same one as set in the connected network. If you do not know the ethernet speed that must be used, select [AUTO]. If the network is not stable, power OFF the equipment then ON. 	
2	Host Name	Enter the host name of your equipment. You can enter up to 63 alphanumerical characters including "-" (hyphens). You cannot use a "-" (hyphen) as the first and last character. The MFP name is set as the default.
3	IP Conflict Detect	Specify whether or not to detect IP address conflicts. Select [Enable] to display a message on the touch panel when an IP address conflict is detected. [Enable] is set as the default.


IPv4

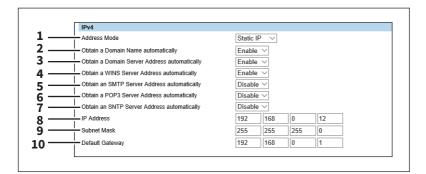

	Item name	Description
1	Address Mode	 Select how to set the IP address. Static IP — Select this to assign the static IP address manually. When this is selected, enter the static IP address in the [IP Address] box. Dynamic — Select this to assign the IP address using the DHCP with Auto-IP addressing enabled. The IP address, subnet mask, gateway address, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address can be automatically acquired from the DHCP server if the network supports DHCP. However, if the network does not support DHCP, use the AutoIP function to assign an IP address. No AutoIP — Select this to assign the IP address using the DHCP with Auto-IP addressing disabled. The IP address, subnet mask, gateway address, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address can be automatically acquired from the DHCP server if the network supports DHCP. If the communication with the DHCP cannot be established, the previous IP address is used.
2		Select [Enable] when you want to obtain a domain name automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default. It have a domain name, the data are left blank in the domain name even if you nanually in the DDNS Session. In that case, select [Disable] here and set the DNS Session.
3	the primary and secondary DN	Select [Enable] when you want to obtain a domain server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default. It have a primary and secondary DNS server addresses, the data are left blank in S server addresses, even if you set the correct primary and secondary DNS ne DNS Session. In that case, select [Disable] here and set the correct primary ress in the DNS Session.

	Item name	Description
4	Obtain a WINS Server Address automatically	Select [Enable] when you want to obtain a primary or secondary WINS server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Enable] is set as the default.
	When the DHCP server does not have a primary and secondary WINS server addresses, the data are left blank in the primary and secondary WINS server addresses, even if you set the correct primary and secondary WINS server addresses manually in the SMB Session. In that case, select [Disable] here and set the correct primary and secondary WINS server address in the SMB Session. P.201 "Setting up SMB"	
5	Obtain an SMTP Server Address automatically	Select [Enable] when you want to obtain a SMTP server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	address even if you set the corr	t have a SMTP server address, the data are left blank in the SMTP server rect SMTP server address manually in the SMTP Client. In that case, select ext SMTP server address in the SMTP Client.
6	Obtain a POP3 Server Address automatically	Select [Enable] when you want to obtain a POP3 server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	When the DHCP server does not have a POP3 server address, the data are left blank in the POP3 server address even if you set the correct POP3 server address manually in the POP3 Network Service. In that case, select [Disable] here and set the correct POP3 server address in the POP3 Network Service. P.216 "Setting up POP3 Client"	
7	Obtain an SNTP Server Address automatically	Select [Enable] when you want to obtain a SNTP server address automatically using the DHCP server. This setting will apply only when [No AutoIP] or [Dynamic] is selected in the Address Mode option. [Disable] is set as the default.
	even if you set the correct SNTI	t have a SNTP server address, the data are left blank in the SNTP server address server address manually in the SNTP Network Service. In that case, select ect SNTP server address in the SNTP Network Service.
8	IP Address	Enter the static IP address for your equipment when [Static IP] is selected in the [Address Mode] box. Specify within the range from 1 to 126 and 128 to 223 for the 1st octet, 0 to 255 for the 2nd to 4th octet.
9	Subnet Mask	Enter the subnet mask if required when [Static IP] is selected in the [Address Mode] box. Specify within the range from 0 0 0 0 to 255 255 255 255. However, you cannot set 0.0.0.0 and 255.255.255.255.
10	Default Gateway	Enter the gateway address if required when [Static IP] is selected in the [Address Mode] box. Specify within the range from 0 0 0 0 to 255 255 255.

IPv6

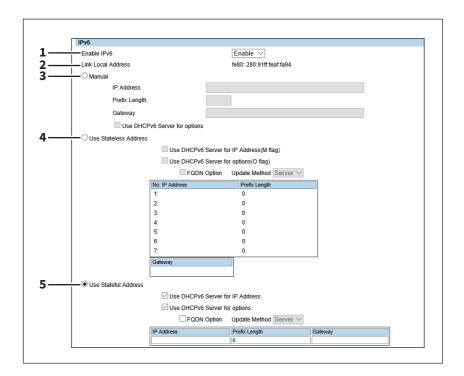

1 Enable IPv6 Select whether the IPv6 protocol is enabled or disabled. [Enable] is se default.	
	t as the
2 Link Local Address The automatically generated unique IP Address used for the IPv6 is di	splayed.
You assign the IPv6 address, prefix and default gateway manually. In tomode, you can assign one IPv6 address to this equipment. IP Address — Assign the IPv6 address for this equipment. Specify with range from 1:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:fffff. Prefix Length — Assign the prefix length for the IPv6 address. Specify the range from 0 to 128. "0" is set as the default. Gateway — Assign the default gateway address. Specify within the rand 1:0:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:fffff. Use DHCPv6 Server for options — Select this check box to use the optinformation (IPv6 address for the DNS server, etc.) which is issued from DHCPv6 server.	within ge from

- When [Manual] is selected, a stateful address cannot be set.
- If the selected IPv6 address is already assigned, DAD (Duplicate Address Detection) detects it and notifies you on the touch panel of this equipment.


	Item name	Description
4	Use Stateless Address	Use the IPv6 addresses (Stateless addresses) issued from routers.
		• Use DHCPv6 Server for IP Address(M flag) — Use the IPv6 address issued
		from the DHCPv6 server in the stateless network environment.
		• Use DHCPv6 Server for options(O flag) — Use the optional information
		(IPv6 address for the DNS server, etc.) issued from the DHCPv6 server in the
		stateless network environment.
		• FQDN Option — The FQDN option is available if Use DHCPv6 Server for IP
		Address is selected. Select [Server] or [Client] for [Update Method] if using
		the FQDN option. [Server] is set as the default.
		• IP Address — Stateless Addresses obtained from routers are displayed. Up
		to 7 IPv6 addresses can be retained.
		ed. If you change a router advertisement (RA) M flag configuration from "0" to enable the DHCPv6 function.
5	Use Stateful Address	Use the Stateful address issued from DHCPv6 server.
		• Use DHCPv6 Server for IP Address — Select whether or not the IPv6
		address which is issued from the DHCPv6 server is used for this equipment.
		• Use DHCPv6 Server for options — Select whether or not the optional
		information (IPv6 address for the DNS server, etc.) except the IPv6 address
		for this equipment, which is issued from the DHCPv6 server is used on this
		equipment.
		• FQDN Option — The FQDN option is available if Use DHCPv6 Server for IP
		Address is selected. Select [Server] or [Client] for [Update Method] if using
		the FQDN option. [Server] is set as the default.
		• IP Address — A stateful address, Prefix Length and Gateway obtained from
		DHCPv6 Server are displayed.

DNS

In DNS Session, you can specify the DNS server to enable the FQDN (Fully Qualified Domain Name) rather than the IP address on specifying each server address such as SMTP server, POP3 server, and LDAP server.

Tip

 When the DNS service is enabled and the DNS server supports the dynamic DNS service, Set the DDNS Session as well. P.185 "DDNS"



	Item name	Description
1	Enable DNS	Select whether the DNS server is enabled or not. [Enable] is set as the default.
2	Primary DNS Server Address	Specify the IP address of the primary DNS server when the DNS service is enabled. Specify within the range from 0 0 0 to 255 255 255 255.
3	Secondary DNS Server Address	Specify the IP address of the secondary DNS server when the DNS service is enabled, as you require. Specify within the range from 0 0 0 0 to 255 255 255.
4	Primary DNS Server Address(IPv6)	Specify the IP address of the primary DNS server when the DNS service is enabled in IPv6. Specify within the range from 1:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff.
5	Secondary DNS Server Address(IPv6)	Specify the IP address of the secondary DNS server when the DNS service is enabled in IPv6, as required. Specify within the range from 1:0:0:0:0:0:0:0 to ffff:ffff:ffff:ffff:ffff:ffff.

Tip


When the [Obtain a Domain Server Address automatically] option is enabled in the TCP/IP settings, the server address of the primary and secondary DNS server addresses can be obtained using the DHCP server.

P.180 "Basic Setting"

In DDNS Session, you can enable the Dynamic DNS service if the DNS server supports the dynamic DNS.


Note

- When using the security in DDNS, if the difference between the time set in the server, in which Windows DNS record is to be updated, and the one set in the equipment exceeds the time stated in the account policy of the server, the DNS update using the security will fail. Check the time set for the DNS server and match it with the one set for the equipment.
- When using DDNS and the IP address is assigned using DHCP, enable "006 DNS Servers" and "015 DNS Domain Name" in the DHCP Server's Scope Options or Server Options.

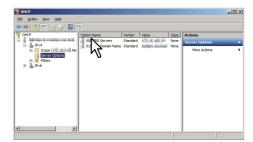


• When using DDNS, make sure the "Dynamic updates" option is set to "Nonsecure and secure" or "Secure only" for the Forward Lookup Zones and Reversed Lookup Zones in the DNS server (in Windows Server). If the DNS server has been set up with "Secure only", be sure to set the security at the DDNS settings for the equipment.


Forward Lookup Zones (Windows Server 2019)

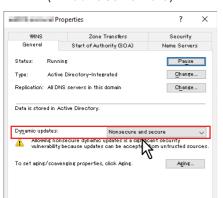

OK Cancel Apply Help

Reversed Lookup Zones (Windows Server 2019)

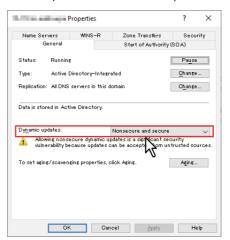

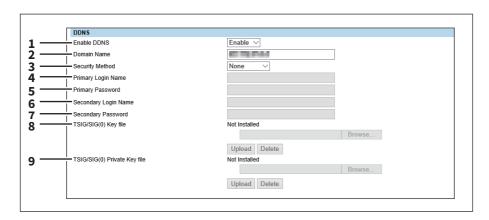

	Item name	Description
1	Enable DDNS	Select whether the dynamic DNS service is enabled or disabled. [Enable] is set as the default.
2	Domain Name	Enter the domain name that will be added to the DNS server using DDNS. You can enter up to 96 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
	When the [Obtain a Domain Name automatically] option is enabled in the TCP/IP settings, the domain name can be obtained using the DHCP server. P.180 "Basic Setting"	

	Item name	Description
3	Security Method	Enter the security method.
		• None
		Select this to perform a non-secure DDNS update. • GSS-TSIG
		Select this to perform a secure DDNS session using GSS-TSIG. You must set a log-in name and a password. If both are not set, the secure DDNS session will not be available. • TSIG
		Select this to perform a secure DDNS session using TSIG. To select this, you must upload a key file and a private key file. If any of them is not uploaded, the security setting will be disabled. • SIG(0)
		Select this to perform a secure DDNS session using SIG(0). To select this, you must upload a key file and a private key file. If any of them is not uploaded, the security setting will be disabled.
4	Primary Login Name	Enter the primary login name if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
5	Primary Password	Enter the primary password if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \setminus (backslash).
6	Secondary Login Name	Enter the secondary login name if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
7	Secondary Password	Enter the secondary password if the security method selected in the above setting is GSS-TSIG. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
8	TSIG/SIG(0) Key file	Use this setting to upload or delete a key file to be used for TSIG and SIG(0). To upload it, click [Browse] and specify a private key file to be uploaded, and then click [Upload]. To delete it, click [Delete].
9	TSIG/SIG(0) Private Key file	Use this setting to upload or delete a private key file to be used for TSIG and SIG(0). To upload it, click [Browse] and specify a private key file to be uploaded, and then click [Upload]. To delete it, click [Delete].

LLMNR




	Item name	Description
1	LLMNR	Select whether LLMNR is enabled or disabled. [Enable] is set as the default.

□ Setting up Filtering

You can set filtering in order to restrict access from client computers to this equipment. Filtering can be specified with an IP address or a MAC address.

Note

MAC address filtering is given priority over IP address filtering.

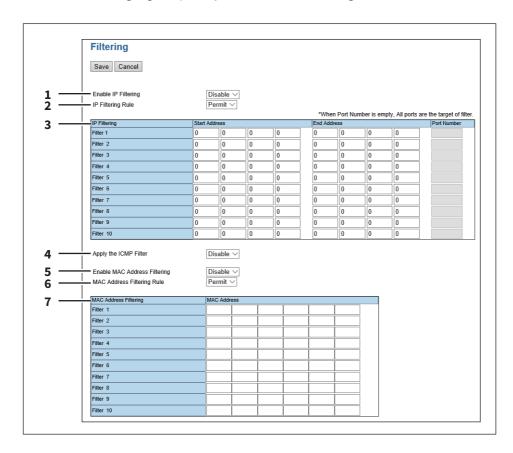


	Item name	Description
1	Enable IP Filtering	Select [Enable] for IP address filtering. When [Enable] is selected, access from devices on a network to which the IP address (specified in [IP Filtering]) is set is restricted under conditions set in [IP Filtering Rule]. [Disable] is set as the default.
	Note	
		work environment implemented with IPv4. It is not available in an IPv6 network e IP address filtering under IPv6 environment, select MAC address filtering.
2	IP Filtering Rule	Select IP address filtering rules.
		Permit — Select this to permit access from devices on a network to which
		the IP address (specified in [IP Filtering]) is set.
		• Deny — Select this to deny access from devices to which the specified IP
		address is set.
3	IP Filtering	Enter the start IP address, end IP address, and port number of the clients to apply IP filtering. Up to 10 addresses can be specified.
	Note	
	Only IPv4 addresses are availab	ole. An IPv6 address cannot be specified.
4	Apply the ICMP Filter	Specify [Enable] if you want to filter the Internet Control Message Protocol. The default is [Disable].

	Item name	Description
5	Enable MAC Address Filtering	Select [Enable] for MAC address filtering. When [Enable] is selected, access from devices on a network to which the MAC address (specified in [MAC Address Filtering]) is set is restricted under conditions set in [MAC Address Filtering Rule]. [Disable] is set as the default.
6	MAC Address Filtering Rule	 Select MAC address filtering rules. Permit — Select this to permit access from devices on a network to which the MAC address (specified in [MAC Address Filtering]) is set. Deny — Select this to deny access from devices to which the specified MAC address is set.
7	MAC Address Filtering	Enter the MAC address of a target client computer for MAC address filtering. Up to 10 addresses can be specified.

☐ Setting up IP Security

With the IP security function, you can enable data encryption communication using IPsec (IP Security Protocol).

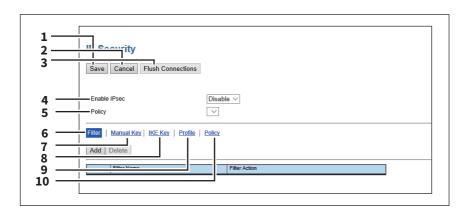



	Item name	Description
1	[Save] button	Saves the IP Security setting.
2	[Cancel] button	Cancels the IP Security setting.
3	[Flush Connections] button	With the [Flush Connections] button, if the keys for IPsec communication are leaked or a security violation occurs, you can manually delete (flush) the current session with the flush connection function and start a new session. If you want to delete the information of SAD (Security Association Database) for any reason, you can delete it in the same way.
4	Enable IPsec	Specify whether or not to enable IPsec. • Enable — Enables IPsec. • Disable — Disables IPsec.
5	Policy	Select a policy to use in IPsec. To enable data encryption communication using IPsec, you must first create IPsec policies according to your system environment. P.200 "[Add Policy] / [Modify Policy] screen"

	Item name	Description
6	Filter	Creates a filter for the IPsec environment. [Add] button — You can add a filter on the [Add Filter] screen. P.191 "[Add Filter] / [Modify Filter] screen" [Delete] button — Select filters to delete and click the [Delete] button to delete them. Filter Name — Click a registered filter name to modify its content. P.191 "[Add Filter] / [Modify Filter] screen" Filter Action — Displays the action of the registered filter.
7	Manual Key	Set the IPsec manual key. [Add] button — You can add a manual key on the [Add Manual Key] screen. P.193 "[Add Manual Key] / [Modify Manual Key] screen" [Delete] button — Select manual keys to delete and click the [Delete] button to delete them. Manual Key Name — Click a registered manual key name to modify its content. P.193 "[Add Manual Key] / [Modify Manual Key] screen" Encryption Algorithm — Displays the registered encryption algorithms.
8	IKE Key	Set the IPsec IKE key. [Add] button — You can add an IKE key on the [Add IKE] screen. P.194 "[Add IKE] / [Modify IKE] screen" [Delete] button — Select keys to delete and click the [Delete] button to delete them. Key Name — Click a registered key name to modify its content. P.194 "[Add IKE] / [Modify IKE] screen" IKE Type — Displays the registered IKE types.
9	Profile	First create a filter and a manual key or IKE key according to your IPsec environment, and then create profiles by combining them. [Add] button — You can add a profile on the [Add Profile] screen. P.198 "[Add Profile] / [Modify Profile] screen" [Delete] button — Select profiles to delete and click the [Delete] button to delete them. Profile Name — Click a registered profile name to modify its content. P.198 "[Add Profile] / [Modify Profile] screen" Profile Mode — Displays the registered profile mode.
10	Policy	Create a policy to use in IPsec by combining the registered profiles. [Add] button — You can add a policy on the [Add Policy] screen. P.200 "[Add Policy] / [Modify Policy] screen" [Delete] button — Select policies to delete and click the [Delete] button to delete them. Policy Name — Click a registered policy name to modify its content. P.200 "[Add Policy] / [Modify Policy] screen"

[Add Filter] / [Modify Filter] screen

You can display this screen by clicking the [Add] button for Filter or a registered filter name. You can create a filter to use in IPsec.

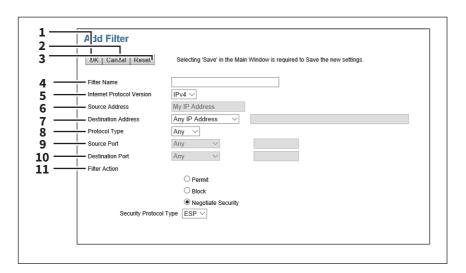

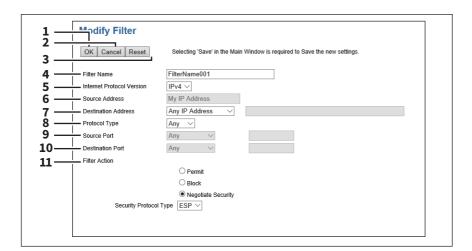



	Item name	Description
1	[OK] button	Saves the folder setting.
2	[Cancel] button	Cancels registration of the folder.
3	[Reset] button	Returns the settings to the defaults.
4	Filter Name	Enter a filter name. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), ", and =.
5	Internet Protocol Version	Select the IP version for IPsec. • IPv4 — Select this to use IPsec under the IPv4 environment. • IPv6 — Select this to use IPsec under the IPv6 environment.
6	Source Address	The IP address of this equipment is set as the source address to which the filter is applied. [My IP Address] is displayed in this box. This item cannot be changed.

	Item name	Description
7	Destination Address	Specify the destination address for the communication to which the filter is applied.
		• Specific IP Address — Set a specific IP address. Enter the IP address in the address input box.
		• Subnet / Prefix — Set the destination with its IP address and subnet mask.
		Enter the IP address and the prefix of the subnet mask directly in the
		address input box.
		• FQDN — Sets FQDN for the destination. Enter FQDN in the address input
		box. You can enter up to 255 alphanumerical characters including hyphen
		(-) and period (.). However, neither hyphen (-) nor period (.) can be used as
		first or last character.
		Any IP Address — Set any IP address.
8	Protocol Type	Select a protocol for the filter.
		• Any — Set any protocol.
		• TCP — Select this to use TCP only.
		UDP — Select this to use UDP only. ICMP — Select this to use ICMP only.
		• ICMP — Select this to use ICMP only.
9	Source Port	Specify the source port number. This setting is available only if you selected TCP or UDP in the protocol type setting.
		• Any — Set any source port.
		• Port Number — Set the port number of the sender. Enter the port number
		in the port number input box.
10	Destination Port	Set the destination port number. This setting is available only if you selected
		TCP or UDP in the protocol type setting.
		• Any — Set any destination port.
		• Port Number — Set the port number of the destination. Enter the port number in the port number input box.
11	Filter Action	Set the operation of the filter.
	Titter Action	• Permit — Select this to permit access from the specified destination.
		Block — Select this to block access from the specified destination.
		Negotiate Security — IPsec communication is performed with the
		specified destination. When this item is set, you must select the security
		protocol type to be used in IPsec communication from the following:
		- ESP — Select this to use ESP (Encapsulating Security Payload) AH — Select this to use AH (Authentication Header).

[Add Manual Key] / [Modify Manual Key] screen

You can display this screen by clicking the [Add] button for Manual Key or a registered manual key name. You can set a manual key to use in IPsec.

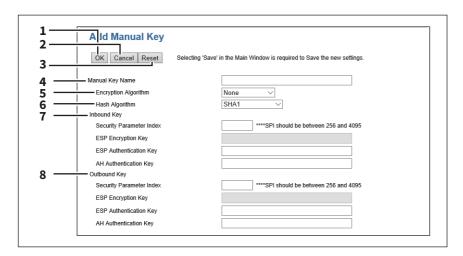

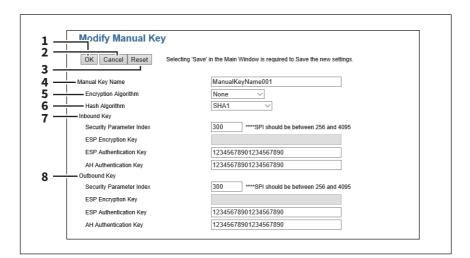



	Item name	Description
1	[OK] button	Saves the key setting.
2	[Cancel] button	Cancels registration of the key.
3	[Reset] button	Returns the settings to the defaults.
4	Manual Key Name	Enter the name of the manual key. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), ", and =.
5	Encryption Algorithm	 None — Select this not to perform data encryption. AES-256-CBC — Select this to use AES-CBC (256 bits). AES-192-CBC — Select this to use AES-CBC (192 bits). AES-128-CBC — Select this to use AES-CBC (128 bits). 3DES-CBC — Select this to use 3DES-CBC. DES-CBC — Select this to use DES-CBC.

	Item name	Description
6	Hash Algorithm	Select a hash algorithm.
		• SHA1 — Select this to use SHA1.
		• MD5 — Select this to use MD5.
		• AES-XCBC-MAC — Select this to use AES-XCBC-MAC.
7	Inbound Key	Select a key for the receiving side.
	Security Parameter Index	Specify a security parameter index (SPI) for identification. You can enter a value in the range from 256 to 4095.
	ESP Encryption Key	Enter an ESP (Encapsulating Security Payload) encryption key.
	ESP Authentication Key	Enter an ESP (Encapsulating Security Payload) authentication key.
	AH Authentication Key	Enter an AH (Authentication Header) authentication key.
8	Outbound Key	Select a key for the destination.
	Security Parameter Index	Specify a security parameter index (SPI) for identification. You can enter a value in the range from 256 to 4095.
	ESP Encryption Key	Enter an ESP (Encapsulating Security Payload) encryption key.
	ESP Authentication Key	Enter an ESP (Encapsulating Security Payload) authentication key.
	AH Authentication Key	Enter an AH (Authentication Header) authentication key.

[Add IKE] / [Modify IKE] screen

You can display this screen by clicking the [Add] button for IKE Key or a registered key name. You can set an IKE key to use in IPsec.

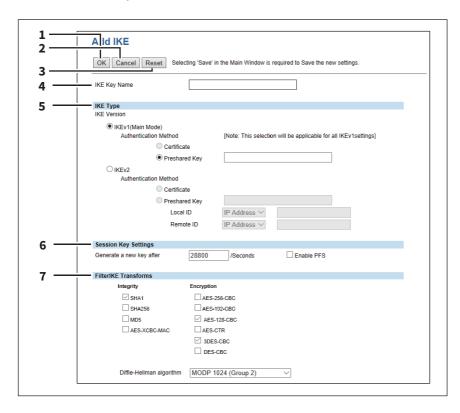

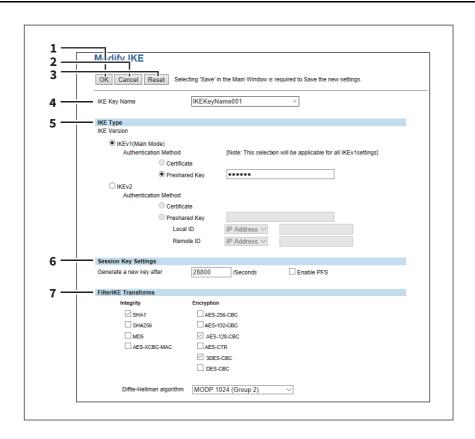

	Item name	Description
1	[OK] button	Saves the key setting.
2	[Cancel] button	Cancels registration of the key.
3	[Reset] button	Returns the settings to the defaults.
4	IKE Key Name	Enter the name of the IKE key. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (apostrophe), ; (semicolon), , (comma), ", and =.
	Tip Up to 30 IKE keys can be created.	


	Item name	Description
5	IKE Type	
	IKEv1 (Main Mode)	Select this to use IKEv1. Certificate — Select this to use an electronic certificate. To select this, IPsec certificate must be installed in this equipment in advance. Preshared Key — Select this to perform authentication by sharing key information with the recipient of the communication in advance. Enter key information to be shared in the entry box. You can enter up to 128 alphanumerical characters and symbols other than &, <, and ".
	Note If you register more than one Pr	reshared Key for IKEv1, only the one that you registered last will be valid.
	IKEv2	Select this to use IKEv2. Certificate — Select this to use an electronic certificate. To select this, IPsec certificate must be installed in this equipment in advance. Preshared Key — Select this to perform authentication by sharing key information with the recipient of the communication in advance. Enter key information to be shared in the entry box. You can enter up to 128 alphanumerical characters and symbols other than &, <, and ". • Local ID — Select among IP Address, FQDN, Email and Key-ID. When you have selected the Key-ID, enter the value to the corresponding item. You can enter up to 128 alphanumerical characters and symbols other than &, <, and ". • Remote ID — Select among IP Address, FQDN, Email and Key-ID. When you selected FQDN, Email or Key-ID, enter a value corresponding to the item you selected. When you selected Key-ID, enter the corresponding value. You can enter up to 128 alphanumerical characters and symbols except the following: & < ". When you selected Email, you can enter up to 192 alphanumerical characters. When you selected FQDN, you can enter up to 255 alphanumerical characters including hyphen (-) and
		period (.). However, neither hyphen (-) nor period (.) can be used as first or last character.
6	Session Key Settings	
	Generate a new key after	Enter the interval between generating key information for IPsec communications in seconds. Set the interval period for regenerating key information for IPsec communication from 60 seconds to 604,800 seconds (7 days). Enable PFS — Select the check box when using the PFS (Perfect Forward Secrecy) function in IKE.


	Item name	Description
7	FilterIKE Transforms	
-	Integrity	Select the authentication algorithm to be used in IKE.
		• SHA1 — Select this to use SHA1.
		• SHA256 — Select this to use SHA256.
		• MD5 — Select this to use MD5.
		• AES-XCBC-MAC — Select this to use AES-XCBC-MAC.
	Encryption	Select the encryption algorithm to be used in IKE.
		• AES-256-CBC — Select this to use AES-CBC (256 bits).
		• AES-192-CBC — Select this to use AES-CBC (192 bits).
		• AES-128-CBC — Select this to use AES-CBC (128 bits).
		• AES-CTR — Select this to use AES-CTR.
		• 3DES-CBC — Select this to use 3DES-CBC.
		• DES-CBC — Select this to use DES-CBC.
	Diffie-Hellman algorithm	Select the Diffie-Hellman group to be used in IKE.
		• MODP 768 (Group 1) — Select this to use the MODP group in 768 bits.
		• MODP 1024 (Group 2) — Select this to use the MODP group in 1024 bits
		• MODP 2048 (Group 14) — Select this to use the MODP group 14 in 2048
		bits.
		• MODP 2048 (Group 24) — Select this to use the MODP group 24 in 2048
		bits.
		• Elliptic Curve P-256 (Group 19) — Select this to use Elliptic Curve P-
		256.
		• Elliptic Curve P-384 (Group 20) — Select this to use Elliptic Curve P-
		384.
		• Elliptic Curve P-521 (Group 21) — Select this to use Elliptic Curve P-
		521.

[Add Profile] / [Modify Profile] screen

You can display this screen by clicking the [Add] button for Profile or a registered profile name.

You can create a profile for an IPsec environment by combining the registered filter and either a manual key or an IKE key.

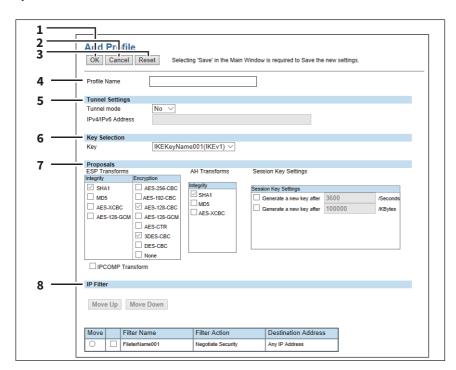

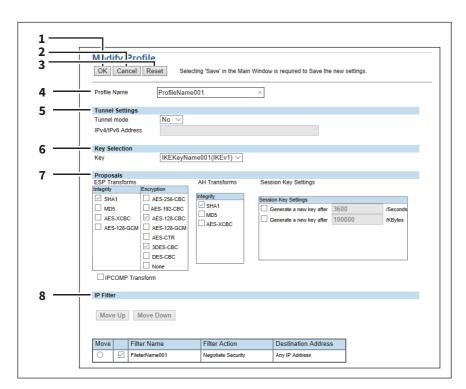


	Item name	Description
1	[OK] button	Saves the profile setting.
2	[Cancel] button	Cancels registration of the profile.
3	[Reset] button	Returns the settings to the defaults.


	Item name	e Description
4	Profile Name	Enter the profile name. You can enter up to 63 alphanumerical characters, including hyphen (-) and underscore (_).
	Tip	
	Up to 30 profiles can b	e created.
5	Tunnel Settings	
	Tunnel mode	Select whether or not to use tunnel mode for IPsec communications.
		• Yes — Select this to use the tunnel mode.
		• No — Select this not to use the tunnel mode. (The transport mode will
	ID 4/ID CALL	be used instead.)
	IPv4/IPv6 Address	Enter the IP address for the gateway which encrypts and decrypts data in tunnel mode.
6	Key Selection	
	Key	Displays the IKE key settings registered in the equipment. IKE keys already registered in this equipment are displayed.
7	Proposals	
	ESP Transforms	Specify the transform for ESP.
		• Integrity — Selects the authentication algorithm to be used in ESP.
		- SHA1 — Select this to use SHA1.
		 - MD5 — Select this to use MD5. - AES-XCBC — Select this to use AES-XCBC.
		- AES-128-GCM — Select this to use AES-128-GCM.
		• Encryption — Selects the encryption algorithm to be used in ESP.
		- AES-256-CBC — Select this to use AES-CBC (256 bits).
		 - AES-192-CBC — Select this to use AES-CBC (192 bits). - AES-128-CBC — Select this to use AES-CBC (128 bits).
		- AES-128-GCM — Select this to use AES-GCM (128 bits).
		- AES-CTR — Select this to use AES-CTR.
		 - 3DES-CBC — Select this to use 3DES-CBC. - DES-CBC — Select this to use DES-CBC.
		- None — Select this not to perform data encryption.
	AH Transforms	Specify the transform for AH.
		• Integrity — Selects the authentication algorithm to be used in AH.
		- SHA1 — Select this to use SHA1.
		 - MD5 — Select this to use MD5. - AES-XCBC — Select this to use AES-XCBC.
	Session Key Settin	
		Session Key Settings — Sets an interval for regenerating the session
		key. The interval can be set in time or the amount of data. Select the
		desired check box and then key in the value in the entry box.
		 Generate a new key after []/Seconds — Specify the interval between key generations in seconds. Specify within the range from 180 to 86,400 seconds (24 hours).
		- Generate a new key after []/KBytes — Specify the data volume
		between key generations in Kbytes. Specify within the range from 20,480 to 214,783,647 Kbytes.
	IPCOMP Transform	Select if using the IPCOMP transform.
<u> </u>		

	Item name	Description
8	IP Filter	You can display a list of filter settings registered in this equipment. Select the check box for the filter to be applied to the profile. If more than one filter is registered, you can change their order in the list. Click [Move] for the desired filter, and then click [Move Up] or [Move Down] to move the filter.

[Add Policy] / [Modify Policy] screen

You can display this screen by clicking the [Add] button for Policy or a registered policy name. You can create a policy to use in IPsec by combining the registered profiles.

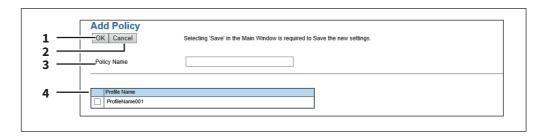


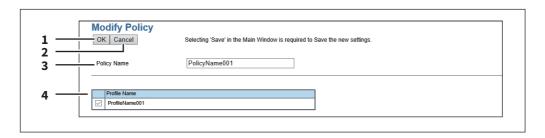

	Item name	Description
1	[OK] button	Saves the profile setting.
2	[Cancel] button	Cancels registration of the profile.
3	Policy Name	Enter the policy name. You can enter up to 63 alphanumerical characters and symbols other than #, %, &, +, \ (backslash), ' (single quotation), ; (semicolon), , (comma), " (double quotation) and =.
	Tip Up to 10 policies can be created.	
4	Profile Name	Select profiles to apply to the policy. You can select multiple profiles.

☐ Setting up SMB

In SMB, you can specify the SMB network properties to access this equipment through a Microsoft Windows Network and enable SMB printing. When you enable the SMB, users can also browse the local folder in the equipment. You can also specify the WINS server when the WINS server is used to enable the Windows print sharing and Windows file sharing services between the different subnets.

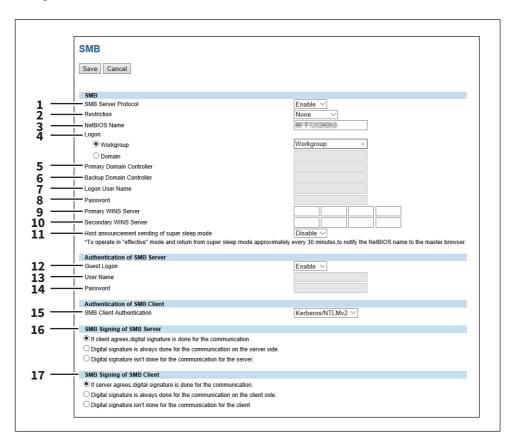

	Item name	Description
1	SMB Server Protocol	Select whether the SMB protocol is enabled or disabled.
		• Enable — Select this to enable SMB.
		• Disable — Select this to disable SMB.
2	Restriction	Specify restrictions on SMB.
		• None — Select this to not specify restrictions on SMB.
		• Print Share — Select this to enable the file sharing service using SMB, but
		disable SMB printing.
		• File Share — Select this to enable SMB printing, but disable the file sharing
		service using SMB.
3	NetBIOS Name	Enter the NetBIOS name of this equipment. The equipment uses "MFP <nic number="" serial="">" as the default NetBIOS name.</nic>
		Serial Number - as the default Netbios Hame.
	Note	
	You can enter only alphani	umerical characters and "-" (a hyphen) for NetBIOS names. If you use any other
	characters, a warning mes	sage will be displayed.

	Item name	Description
4	Logon	Enter the workgroup or domain that this equipment joins.
		• Workgroup — To include the equipment in the workgroup, enter the
		workgroup name. All client computers can access this equipment without a
		user name and password.
		• Domain — Select this and enter the domain name when the equipment will
		log on in the domain. Any client computers which are not members of the
		domain will need a valid user name and password to access this
		equipment. Use this to enhance access security to this equipment.
5	following: ;:"<>+=\ ?,*#	ames, you can use only alphanumerical characters and symbols other than the rs, a warning message will be displayed. Specify the server name or IP address of the primary domain controller when
3	Primary Domain Controller	this equipment will log on the domain network. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
6	Backup Domain Controller	Specify the server name or IP address of the backup domain controller when this equipment will log on the domain network, if required. If the Primary Domain Controller is unavailable, the Backup Domain Controller will be used to log on. You can enter up to 128 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
	Note If the wrong primary or backup domain controller is specified, the NETWORK INITIALIZING message will be displayed for up to 4 minutes while the equipment searches for the primary or backup domain controller. In that case, correct the primary or backup domain controller setting after the NETWORK INITIALIZING message disappears.	
7	Logon User Name	Enter a valid user name to log on to the specified domain. You can enter up to 128 alphanumerical characters and symbols other than $ \cdot = + ? \cdot $.
8	Password	Enter the password for the specified log on user name to log on the domain network. You can enter up to 128 alphanumerical characters.
9	Primary WINS Server	Specify the IP address of the primary WINS server when the WINS server is used to provide the NetBIOS name in your local area network. This option would be more useful to access this equipment using the NetBIOS Name from a different subnet.
	Tip	
	When the [Obtain a WINS Ser	ver Address automatically] option is enabled in the TCP/IP settings, the primary ddress can be obtained using the DHCP server.

	Item name	Description	
10	Secondary WINS Server	Specify the IP address of the secondary WINS server as you require when the WINS server is used to provide NetBIOS name in your local area network. If the Primary WINS Server is unavailable, the Secondary WINS Server will be used.	
	When the [Obtain a WINS Server Address automatically] option is enabled in the TCP/IP settings, the primary and secondary WINS server address can be obtained using the DHCP server. P.180 "Basic Setting"		
	Note If "0.0.0.0" is entered for the Pri WINS server.	imary WINS Server and Secondary WINS Server, this equipment will not use the	
11	Host announcement sending of super sleep mode	Specify this to display this equipment's icon in the "Network" folder on the Windows computer even in super sleep mode.	
		• <u>Disable</u> : Disables host announcement sending in super sleep mode.	
		• Enable : Even in super sleep mode, the icon for this printer is displayed in the "Network" folder on Windows computers.	
	Note When the printer's super sleep mode is set to [Disable], the icon for this printer is displayed in the "Network" folder on Windows computers regardless of this setting.		
12	Guest Logon	Select whether a guest user can log on to the SMB server. [Enable] is set as the default.	
13	User Name	Enter a name of the user who logs on to the SMB server if [Guest Logon] is set to [Disable]. You can enter up to 32 alphanumerical characters and symbols except " $/ []$; $ =, +*? <>$.	
	Note		
	If you connect to the SMB server for this equipment before changing the user name, qualification information		
	on the user name and the password is cached in your Windows computer. Restart your Windows computer to clear qualification information.		
14	Password	Enter a password of the specified user if [Guest Logon] is set to [Disable]. You	
	1 43300014	can enter up to 128 alphanumerical characters and symbols.	

Note

If you connect to the SMB server for this equipment before changing the password, qualification information on the user name and the password is cached in your Windows computer. Restart your Windows computer to clear qualification information.

	Item name	Description
15	SMB Client Authentication	Specify the authentication method for the SMB clients.
		• Kerberos/NTLMv2 — Specify this when connecting to an SMB server using
		Kerberos/NLTMv2 authentication. NTLMv2 authentication is used if
		Kerberos authentication has failed.
		• Kerberos/NTLMv1 — Specify this when connecting to an SMB server using
		Kerberos/NTLMv1 authentication. NTLMv1 authentication is used if
		Kerberos authentication has failed.
		 Kerberos — Specify this when connecting to an SMB server using Kerberos authentication.
		• NTLMv2 — Specify this when connecting to an SMB server using NTLMv2 authentication.
		• NTLMv1 — Specify this when connecting to an SMB server using NTLMv1 authentication.
16	SMR Signing of SMR Sonyor	Soloct whother SMR Signing is enabled or disabled when a client accesses the
16	SMB Signing of SMB Server	Select whether SMB Signing is enabled or disabled when a client accesses thi
16	SMB Signing of SMB Server	equipment using SMB, such as when a client accesses the shared folder in thi
16	SMB Signing of SMB Server	equipment using SMB, such as when a client accesses the shared folder in thi equipment.
16	SMB Signing of SMB Server	equipment using SMB, such as when a client accesses the shared folder in thi equipment. • If client agrees, digital signature is done for the communication. —
16	SMB Signing of SMB Server	equipment using SMB, such as when a client accesses the shared folder in thi equipment.
16	SMB Signing of SMB Server	equipment using SMB, such as when a client accesses the shared folder in thi equipment. • If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only when
16	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in the equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client
16	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in the equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication in
16	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in the equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication i allowed without the digital signature. Digital signature is always done for the communication on the server
16	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in thi equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only when a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication is allowed without the digital signature.
116	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in the equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication i allowed without the digital signature. Digital signature is always done for the communication on the server side. — Select this to allow the communication only when a client accesses.
116	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in th equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication i allowed without the digital signature. Digital signature is always done for the communication on the server side. — Select this to allow the communication only when a client accesses this equipment with a digital signature. When a client accesses this
116	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in th equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication i allowed without the digital signature. Digital signature is always done for the communication on the server side. — Select this to allow the communication only when a client accesses this equipment with a digital signature. When a client accesses this equipment without a digital signature, the communication is not allowed
16	SMB Signing of SMB Server	 equipment using SMB, such as when a client accesses the shared folder in the equipment. If client agrees, digital signature is done for the communication. — Select this to use the digital signature to secure communication only whe a client accesses this equipment with a digital signature. Even if a client accesses this equipment without a digital signature, the communication i allowed without the digital signature. Digital signature is always done for the communication on the server side. — Select this to allow the communication only when a client accesses this equipment with a digital signature. When a client accesses this equipment without a digital signature, the communication is not allowed. Digital signature isn't done for the communication for the server. —

recommended to select [If client agrees, digital signature is done for the communication.]. If this is set incorrectly, the SMB communication may become unavailable.


	Item name	Description
17	SMB Signing of SMB Client	Select whether SMB Signing is enabled or disabled when this equipment accesses the clients using SMB, such as when this equipment stores the scanned data in the network folder using SMB.
		ullet If server agrees, digital signature is done for the communication. $-$
		Select this to use the digital signature to secure the communication to an
		SMB server only when the SMB Signing of SMB Server that this equipment
		accesses is enabled. If the SMB Signing of SMB Server is disabled in an SMB
		server, the communication is performed without the digital signature.
		• Digital signature is always done for the communication on the client
		side. — Select this to make this equipment always access an SMB server
		with a digital signature. When the SMB Signing of SMB Server is disabled in
		an SMB server, the communication is not allowed.
		ullet Digital signature isn't done for the communication for the client. $-$
		Select this to communicate to an SMB server without the digital signature.
		If the SMB Signing of SMB Server is always enabled in an SMB server, the
		communication is not allowed.

Note

- If you do not know whether the SMB Signing of SMB Server is enabled or disabled in the SMB servers, it is recommended to select [If server agrees, digital signature is done for the communication.]. If this is set incorrectly, the SMB communication may become unavailable.
- The digital signature is always done for the communication on the server side as the default on Windows Server 2012 or later. Therefore specify "If server agrees, digital signature is done for the communication." or "Digital signature is always done for the communication on the client side." for SMB communications with Windows Server 2012 or later.

■ Setting up HTTP

In HTTP, you can enable or disable Web-based services such as TopAccess and e-Filing web utility.

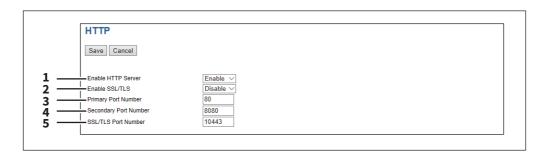

	Item name	Description
1	Enable HTTP Server	Select whether the Web-based services such as TopAccess and e-Filing web utility are enabled or disabled. [Enable] is set as the default.
2	Enable SSL/TLS	Select whether the SSL (Secure Socket Layer)/TLS (Transport Layer Security) is enabled or disabled. When this is enabled, the data transferred between the equipment and client computers will be encrypted using a private key when operating TopAccess and e-Filing web utility. [Disable] is set as the default.
	Note Not all operating systems s	support SSL/TLS for all protocols.


· · · · · · · · · · · · · · · · · · ·	_/TLS Port Number	
The same port numbers as the Change the applicable port nu HTTP Network Service / Seco HTTP Network Service / SSL IPP Print / Port Number IPP Print / SSL/TLS Port Nun	umber before that for the Primary Port Number is set. condary Port Number _/TLS Port Number mber	
Change the applicable port nu HTTP Network Service / Seco HTTP Network Service / SSL IPP Print / Port Number IPP Print / SSL/TLS Port Nun	umber before that for the Primary Port Number is set. condary Port Number _/TLS Port Number mber	
 HTTP Network Service / Sec HTTP Network Service / SSL IPP Print / Port Number IPP Print / SSL/TLS Port Nun 	condary Port Number _/TLS Port Number mber	
HTTP Network Service / SSLIPP Print / Port NumberIPP Print / SSL/TLS Port Nun	_/TLS Port Number	
IPP Print / Port NumberIPP Print / SSL/TLS Port Nun	mber	
• IPP Print / SSL/TLS Port Nun		
, ,		
Secondary Port Number	Find the nort number for TonAccess and the e-Filing web utility. You can	
	enter a value in the range from 1 to 65535. Generally the default value "8080 is used.	
Note		
The same port numbers as the ones for the following settings are not usable.		
Change the applicable port number before that for the Secondary Port Number is set.		
HTTP Network Service / Primary Port Number		
HTTP Network Service / SSL/TLS Port Number		
• IPP Print / Port Number		
SSL/TLS Port Number	Enter the port number for the SSL/TLS. You can enter a value in the range fro 1 to 65535. Generally the default value "10443" is used.	
	he same port numbers as the hange the applicable port no HTTP Network Service / Prio HTTP Network Service / SSI	

Change the applicable port number before that for the SSL/TLS Port Number is set.

- HTTP Network Service / Primary Port Number
- HTTP Network Service / Secondary Port Number
- IPP Print / Port Number
- IPP Print / SSL/TLS Port Number

■ Setting up WSD


In WSD, you can set the Web Services Setting. The Web Services Print operations and Web Services Scan operations are performed on client computers with Windows through a network.

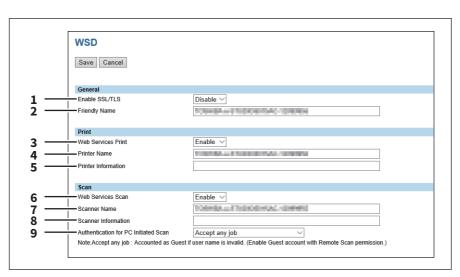

	Item name	Description
1	Enable SSL/TLS	Specify whether or not to use SSL/TLS in Web Service.
		• Enable — Select this to use SSL/TLS.
		• Disable — Select this no to use SSL/TLS.
2	Friendly Name	Assign the friendly name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, \star , ?, ", >, <, , !, and , (comma).
3	Web Services Print	Select whether the Web Services Print is enabled or disabled.
		• Enable — Select this to enable the Web Services Print.
		Disable — Select this to disable the Web Services Print.
	Note	
		0.0
4	Printer Name	Assign the printer name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, *, ?, ", >, <, and $ $. "MFP model name-Serial number" is set as the default.
5	Printer Information	Assign the printer information for this equipment. You can enter up to 127 characters other than =,; (semicolon), #, and \ (backslash).
6	Web Services Scan	Select whether the Web Services Scan is enabled or disabled.
		• Enable — Select this to enable the Web Services Scan.
		• Disable — Select this to disable the Web Services Scan.
7	Scanner Name	Assign the scanner name for this equipment. You can enter up to 127 characters and symbols other than =, ; (semicolon), #, /, \ (backslash), :, *, ?, ", >, <, and $ $. "MFP model name-Serial number" is set as the default.
8	Scanner Information	Assign the scanner information for this equipment. You can enter up to 127 characters other than =, ; (semicolon), #, and \setminus (backslash).
9	Authentication for PC Initiated Scan	Specify whether to enable user authentication before accepting a scan from a client PC.
		• Do not accept any job — Select this not to accept any jobs regardless of the
		result of user authentication.
		Accept the job if user name is valid — Select this to accept jobs only after
		successful user authentication.
		• Accept any job — Select this to accept any jobs regardless of the result of
		user authentication.

☐ Setting up SMTP Server

In SMTP Server, you can enable or disable SMTP transmission for receiving the Internet Fax and E-mails. This function is usually set when you want to enable the Offramp Gateway feature.

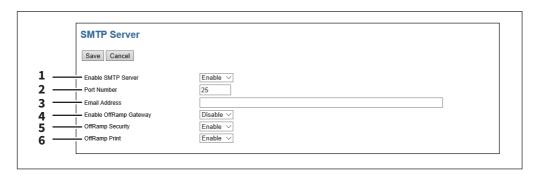

	Item name	Description
1	Enable SMTP Server	Select whether this equipment works as an SMTP server or not. This must be enabled when you use the Offramp Gateway feature. When this is enabled, this equipment can receive Internet Faxes or E-mails that are forwarded through the SMTP to the domain of this equipment. [Enable] is set as the default.
2	Port Number	Enter the port number to transmit an Internet Faxes or E-mails. Generally "25" is used.
	the HTTP setting is enabled) is mistake, use the touch panel o	s the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in selected, you cannot access TopAccess or the e-Filing web utility. If you make a f the equipment to change the HTTP setting and enter the correct port number.
3	Email Address	Enter the E-mail address of this equipment. When this equipment works as an SMTP server, it can receive all Internet Faxes and E-mails that contain its domain name. If the E-mail address of the received document matches the address you set here, this equipment prints it. You can enter up to 192 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
4	Enable OffRamp Gateway	Select whether the OffRamp Gateway transmission is enabled or disabled. [Disable] is set as the default.
5	OffRamp Security	Select whether the Offramp Security is enabled or disabled. When this is enabled, this equipment cancels the offramp gateway transmissions that are forwarding to the fax numbers not registered in the Address Book of this equipment. This can prevent the unauthorized offramp gateway transmission. [Enable] is set as the default.
6	OffRamp Print	Select whether this equipment should print documents sent using the offramp gateway transmission. When this is enabled, this equipment automatically prints documents sent using offramp gateway transmission, so that they can be confirmed. [Enable] is set as the default.

□ Setting up FTP Server

In FTP Server, you can enable or disable the FTP server functions.




	Item name	Description
1	Enable FTP Server	Select whether the FTP server is enabled or disabled. Select [Enable] to enable the following functions.
		FTP printing
		Reading/writing the address book data using the AddressBook Viewer
		Backing up/Restoring the e-Filing data using the e-Filing Backup/Restore Utility
		[Enable] is set as the default.
2	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the FTP server. [Disable] is set as the default.
	Note Not all operating systems supp	oort SSL/TLS for all protocols.
3	Default Port Number	Enter the port number for the FTP server. You can enter a value in the range from 1 to 65535. Generally the default value "21" is used.
	Note	
	the HTTP setting is enabled) is	s the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in selected, you cannot access TopAccess or the e-Filing web utility. If you set it by f the equipment to change the HTTP setting and enter the correct port number.
4	SSL/TLS Port Number	Enter the port number that is used to access this equipment using FTP with SSL/TLS. The port number depends on the port setting in the FTP server. You can enter a value in the range from 1 to 65535. Generally the default value "990" is used.
	Note	

When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.

□ LDAP Client settings


You can register the directory service properties of the LDAP (Lightweight Directory Access Protocol) server. When a new directory service is added, the users can search destinations using the LDAP server.

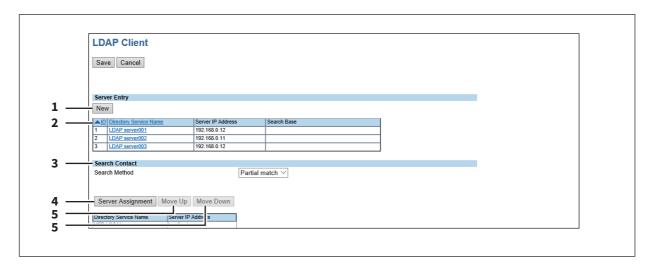

	Item name	Description
1	[New] button	Registers the LDAP server that provides a directory service. P.211 "[Create LDAP Information]/[Edit LDAP Information] screen"
2	Directory Service List	Displays a list of registered LDAP servers. You can edit the registered details by clicking a directory service name. P.211 "[Create LDAP Information]/[Edit LDAP Information] screen"
3	Search Method	Select search conditions for LDAP searching.
		 Partial match — Select this to search information partially matching the search conditions. Prefix match — Select this to search information that starts with contents matching the search conditions. Suffix match — Select this to search information that ends with contents matching the search conditions. Full match — Select this to search information fully matching the search conditions.
4	[Server Assignment] button	Registers the search target server. P.213 "[Server Assignment] screen"
5	[Move Up]/[Move Down] button	Moves up and down in the search list.

[Create LDAP Information]/[Edit LDAP Information] screen

You can display this screen by clicking a directory service name in the directly service list or the [New] button.

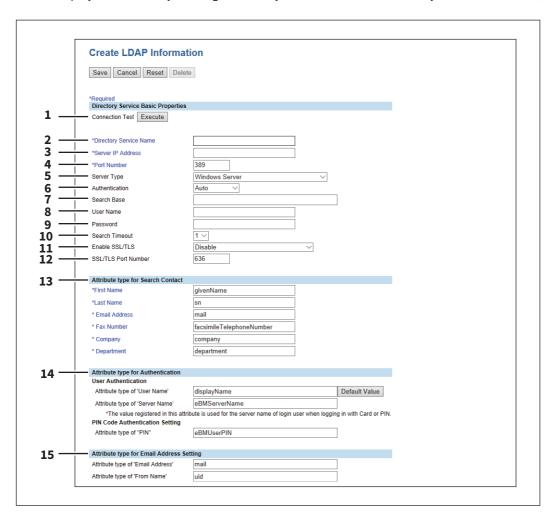

	Item name	Description
1	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
2	Directory Service Name	Enter the directory service name to identify the directory service. You can enter up to 64 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Server IP Address	Enter the IP address or FQDN of the LDAP server. You can enter up to 128 alphanumerical characters and symbols.
4	Port Number	Enter the port number to access the LDAP server. You can enter a value in the range from 1 to 65535. Generally the default value "389" is used to access the LDAP server without SSL/TLS. When the SSL/TLS is required, generally the "636" port is used to access the LDAP server.
5	Server Type	 Select the LDAP server you want to use for LDAP authentication. Windows Server — Select this when LDAP is running on a Windows server. LDAP Server (Other than Windows Server) — Select this when the LDAP is running on a server other than a Windows one.


	Item name	Description
6	Authentication	Select the SASL authentication protocol. If you do not know the authentication type, select [Auto].
		• Auto — Select this to access the LDAP server using the appropriate
		authentication that this equipment detects.
		• Kerberos — Select this to access the LDAP server using the Kerberos
		authentication.
		• Digest-MD5 — Select this to access the LDAP server using the Digest-MD5 authentication.
		• CRAM-MD5 — Select this to access the LDAP server using the CRAM-MD5
		authentication.
		 Login — Select this to access the LDAP server using the login authentication.
		 Plain — Select this to access the LDAP server using the plain
		authentication.
		• Simple Bind — Select this to access the LDAP server using the Simple Bind
		authentication.
7	Search Base	Enter the search base. When you configure the Active Directory in Windows server, make sure to enter this option. You can enter up to 256 alphanumerical characters and symbols other than; (semicolon), #, and \ (backslash).
8	User Name	Enter the log-in user name if a user name is required to access the directory service. You can enter up to 256 alphanumerical characters and symbols.
9	Password	Enter the password if required to access the directory service. You can enter up to 32 alphanumerical characters and symbols.
10	Search Timeout	Select the timeout period for quitting communication when no response is received from the LDAP server. Specify within the range from 1 to 5. "1" is set as the default.
11	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for communicating the LDAP directory service.
		• Disable — Select this to disable the SSL/TLS for communicating the LDAP
		directory service.
		• Verify with imported CA certification(s) — Select this to enable the SSL/
		TLS using the imported CA certificate.
		without using imported CA certificate.

Note

- When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment.
 - P.326 "[Security] How to Set and How to Operate"
- If at least one of the registered LDAP directory services requires the SSL/TLS, you must enable the [Enable SSL/TLS] option. When the [Enable SSL/TLS] option is enabled, this equipment will connect the registered LDAP directory services using SSL/TLS first. Then if the connection fails using SSL/TLS, this will connect to the registered LDAP directory service without using SSL/TLS. Therefore, even if you enable the [Enable SSL/TLS] option, this equipment can also connect to an LDAP directory service that does not require the SSL/TLS.
- Not all operating systems support SSL/TLS for all protocols.

	Item name	Description
12	SSL/TLS Port Number	Enter the port number to access the LDAP server using SSL/TLS. You can enter a value in the range from 1 to 65535. Generally the default value "636" is used.
13	Attribute type for Search Contact	Enter the attribute type to be used for searching contacts using the external LDAP server. You can enter up to 32 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
14	Attribute type for Authentication	Specify the attribute name for authentication. Enter [Attribute type of 'User Name'], [Attribute type of 'Server Name'], and either [Attribute type of 'PIN'] or [Attribute type of 'Card information'] for authentication. You can enter up to 32 half-width alphanumerical characters and symbols (excluding = ; # \). Click the [Default Value] button to display the predetermined value.
15	Attribute type for Email Address Setting	Specify [Attribute type of 'Email Address'] and [Attribute type of 'From Name'] for authentication. You can enter up to 32 half-width alphanumerical characters and symbols (excluding = ; # \).

[Server Assignment] screen

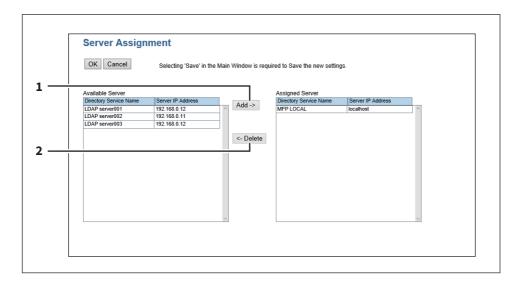

	Item name	Description
1	[Add] button	Adds the server from the server list to the assigned servers.
2	[Delete] button	Deletes the server from the assigned servers.

☐ Setting up SMTP Client

In SMTP Client, you can enable or disable SMTP transmission for sending the Internet Fax and E-mails.


Note

A From Address setting is also required to send Internet Fax and E-mails. For information about the From Address setting, see the following sections:

- P.292 "Setting up E-mail settings"
- P.293 "Setting up InternetFax settings"

The From Address can be also determined automatically when the User Management Setting is enabled. For more information about User Management Setting, see the following section:

P.135 "[User Management] Tab Page"

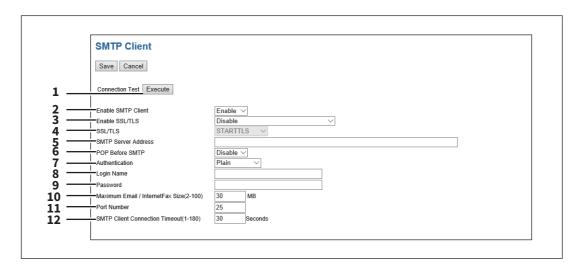

	Item name	Description
1	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
2	Enable SMTP Client	When this is enabled, this equipment sends an Internet Fax and an E-mail to the specified SMTP server for transmission over the Internet. [Enable] is set as the default.
3	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for SMTP transmission.
		• Disable — Select this to disable the SSL/TLS for SMTP transmission.
		• Verify with imported CA certification(s) — Select this to enable the SSL/
		TLS using the imported CA certificate.
		Accept all certificates without CA — Select this to enable the SSL/TLS
		without using imported CA certificate.
		1

Note


- When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this
 - P.326 "[Security] How to Set and How to Operate"
- Not all operating systems support SSL/TLS for all protocols.

	Item name	Description
4	SSL/TLS	Select the protocol for the SSL/TLS when the [Enable SSL/TLS] option is
		enabled.
		• STARTTLS — Select this to send a message in TLS (Transport Layer
		Security) using STARTTLS that is the extension command for SMTP transmission.
		Over SSL/TLS — Select this to send a message in SSL (Secure Socket)
		Layer)/TLS (Transport Layer Security).
		Layer// 123 (Transport Layer Security).
	Note	
	When you select [Over SSL/TLS for the Over SSL/TLS instead or], make sure to change the port number correctly. Generally, "465" port is used "25" port.
5	SMTP Server Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the SMTP
		server when [Enable SMTP Client] is enabled. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \
		(backslash).
	Note	
		MTP server, you must configure the DNS server and enable the DNS in the DNS
	Session.	
	Tip	
	When the [Obtain a SMTP Server Address automatically] option is enabled in the TCP/IP settings, the SMTP	
	server address can be obtained	
	P.180 "Basic Setting"	
6	POP Before SMTP	Select whether the POP Before SMTP authentication is enabled or disabled. [Disable] is set as the default.
7	Authentication	Select the type of authentication to access the SMTP server.
		• Disable — Select this to access the SMTP server using no authentication.
		• Plain — Select this to access the SMTP server using plain authentication.
		• Login — Select this to access the SMTP server using the log-in
		authentication.
		• CRAM-MD5 — Select this to access the SMTP server using CRAM-MD5
		authentication.
		Digest-MD5 — Select this to access the SMTP server using Digest-MD5 authentication.
		Kerberos — Select this to access the SMTP server using Kerberos authentication.
		NTLM(IWA) — Select this to access the SMTP server using NTLM (IWA)
		authentication.
		AUTO — Select this to access the SMTP server using the appropriate
		authentication that this equipment detects.
8	Login Name	Enter the log-in name to access the SMTP server if the SMTP authentication is
		enabled. You can enter up to 64 alphanumerical characters and symbols.
	Note	
	Enter the account name for accessing a POP3 server when the POP Before SMTP authentication is enabled	
	P.216 "Setting up POP3 Clie	nt"

	Item name	Description
9	Password	Enter the password to access the SMTP server if the SMTP authentication is enabled. You can enter up to 64 alphanumerical characters and symbols.
	Note	
	Enter the password for accessing a POP3 server when the POP Before SMTP authentication is enabled. P.216 "Setting up POP3 Client"	
10	Maximum Email / InternetFax Size (2-100)	Select the maximum size that this equipment is allowed to send using the SMTP. Specify within the range from 2 to 100 MB.
	Note The available maximum size includes that for attached files. Approx. 70 MB is the available maximum size for attached files when 100 MB is set in this option.	
11	Port Number	Enter the port number for accessing the SMTP server when [Enable SMTP Client] is enabled. The port number depends on the port setting in the SMTP server. You can enter a value in the range from 1 to 65535. Generally the default value "25" is used.
	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.	
12	SMTP Client Connection Timeout(1-180)	Enter a timeout period for quitting communication when no response is received from the SMTP server. Specify within the range from 1 to 180 seconds. "30" is set as the default.

☐ Setting up POP3 Client

In POP3 Client, you can specify the POP3 server to receive an Internet Fax and E-mails.

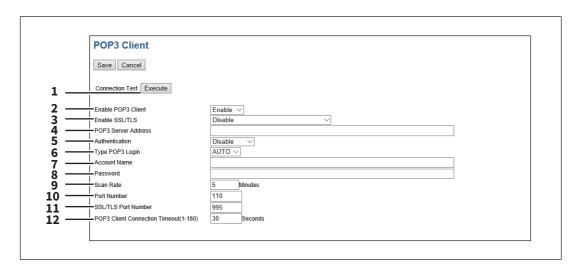

	Item name	Description
1	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
2	Enable POP3 Client	Select whether retrieving an Internet Fax and an E-mail from the POP3 server is enabled or disabled. [Enable] is set as the default.

	Item name	Description
3	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for POP3 transmission.
		• Disable — Select this to disable the SSL/TLS for POP3 transmission.
		• Verify with imported CA certification(s) — Select this to enable the SSL/
		TLS using the imported CA certificate.
		without using imported CA certificate.
	Note	
	When [Verify with imported equipment.]	ed CA certification(s)] is selected, you must import the CA certificate in this to Set and How to Operate"
	• Not all operating systems	support SSL/TLS for all protocols.
4	POP3 Server Address	Enter the IP address or FQDN (Fully Qualified Domain Name) of the POP3 server when [Enable POP3 Client] is enabled. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
	Note If you use FQDN to specify the Session.	ne POP3 server, you must configure the DNS server and enable the DNS in the DNS
	Tip When the [Obtain a POP3 Se obtain the POP3 server add P.180 "Basic Setting"	erver Address automatically] option is enabled in the TCP/IP settings, you can ress from the DHCP server.
5	Authentication	Enable or disable the authentication for accessing the POP3 server.
		• Disable — Select this to disable the authentication.
		• NTLM/SPA — Select this to access the POP3 server using the NTLM/SPA
		authentication.
		• Kerberos — Select this to access the POP3 server using the Kerberos authentication.
	T DODAL	
6	Type POP3 Login	Select the POP3 login type.
		• AUTO — Select this to automatically designate the POP3 log-in type of the
		POP3 server.
		• POP3 — Select this to use the general POP3 log-in type.
		• APOP — Select this to use the APOP log-in type. APOP allows users to
		access the POP3 server by encrypting the user name and password.
	Note	
	-	to the mail server using [Auto], manually set the type of POP3 log in to either
_	[POP3] or [APOP].	Enter the account mana far this accimus at the popular to accept the popular Value
7	Account Name	Enter the account name for this equipment to access the POP3 server. You can enter up to 96 alphanumerical characters and symbols.
	Note	
		hout the domain name when [NTLM/SPA] or [Kerberos] is selected in the
	[Authentication] option.	mout the domain name when [MTEM/3FA] of [Refberos] is selected in the
8	Password	Enter the password for this equipment to access the POP3 server. You can
		enter up to 96 alphanumerical characters and symbols.

	Item name	Description
9	Scan Rate	Enter how often this equipment should access the POP3 server for new messages. You can enter a value in the range from 0 to 4096. "5" is set as the default.
10	Port Number	Enter the port number to access the POP3 server. The port number depends on the port setting in the POP3 server. You can enter a value in the range from 1 to 65535. Generally the default value "110" is used.
11	SSL/TLS Port Number	Enter the port number to access the POP3 server using SSL/TLS. The SSL/TLS port number depends on the port setting in the POP3 server. Generally "995" is used.
12	POP3 Client Connection Timeout(1-180)	Enter a timeout period for quitting communication when no response is received from the POP3 server. Specify within the range from 1 to 180 seconds. "30" is set as the default.

☐ Setting up FTP Client

In FTP Client, you can specify the default port number used for the Save as file using the FTP protocol.



	Item name	Description
1	SSL/TLS Setting	 Specify the certificate used in the SSL/TLS. Verify with imported CA certification(s) — Select this to use the registered certificate(s). Accept all certificates without CA — Select this to use all certificates.
2	Default Port Number	Enter the port number to access the FTP site. The port number depends on the port setting in the FTP site. You can enter a value in the range from 1 to 65535. Generally the default value "21" is used.

☐ Setting up Bonjour

In Bonjour, you can enable or disable the Bonjour networking that is available for Mac OS X.



	Item name	Description
1	Enable Bonjour	Select whether Bonjour is enabled or disabled. [Enable] is set as the default.
2	Link-Local Host Name	Enter the DNS host name of this equipment. You can enter up to 127 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).
3	Service Name	Enter the device name of this equipment that will be displayed in the Bonjour network. You can enter up to 63 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).

☐ Setting up Mobile Scan(eSCL)


In Mobile Scan(eSCL), you can enable or disable the Mobile Scan settings.



	Item name	Description
1	Enable Mobile Scan	Select whether Mobile Scan is enabled or disabled.
2	Secure Scan (SSL/TLS)	Select whether Secure Scan is enabled or disabled.

■ Setting up SNMP

In SNMP Network Service, you can enable or disable the SNMP to monitor the device status using a network monitoring utility. If an administrator wants to monitor the device status with a monitoring utility, programmed to match the MIB, you must enable the SNMP and SNMP Traps.

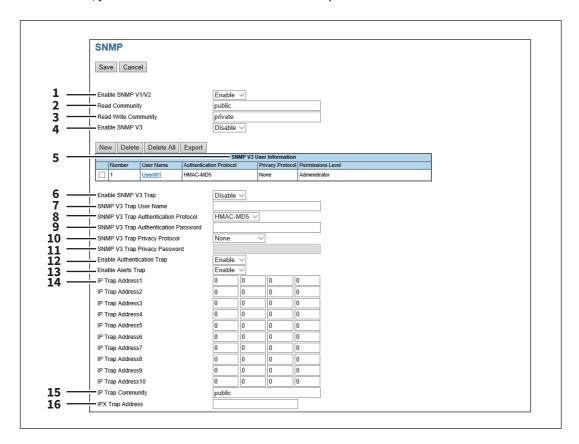

	Item name	Description
1	Enable SNMP V1/V2	Select whether SNMP V1/V2 monitoring with MIB is enabled or disabled. This must be enabled to allow users to connect using TopAccessDocMon, TWAIN driver, File Downloader, or the AddressBook Viewer. [Enable] is set as the default.
2	Read Community	Enter the SNMP read community name for the SNMP access. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). "public" is set as the default.

Note

- It is recommended to change the default Read Community name for security reasons.
- If changing the Read Community name, match the setting with the applications in use. Otherwise, applications that use MIB (TopAccess, TWAIN driver, File Downloader, and AddressBook Viewer) will become unavailable. The SNMP communication of the printer driver also will be unavailable, so that obtaining the configurations, confirming the department code, and obtaining the available boxes in e-Filing will be disabled.
- When you leave the [Read Write Community] option blank, the SNMP communication between the SNMP Browser of the Client computer and this equipment will be disabled.

	Item name	Description
3	Read Write Community	Enter the SNMP Read Write community name for the SNMP access. You can enter up to 31 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash). "private" is set as the default.
	Note	
	 If changing the Read Write Co applications that use MIB (To become unavailable. The SN 	e the default Read Write Community name for security reasons. Community name, match the setting with the applications in use. Otherwise, CopAccess, TWAIN driver, File Downloader, and AddressBook Viewer) will MP communication of the printer driver also will be unavailable, so that , confirming the department code, and obtaining the available boxes in e-Filing
4	Enable SNMP V3	Select whether SNMP V3 monitoring with MIB is enabled or disabled. This must be enabled to allow users to connect using TopAccessDocMon, TWAIN driver, File Downloader and the AddressBook Viewer.
5	SNMP V3 User Information	SNMP V3 user information registered into this equipment is displayed in a list. SNMP V3 user information can be registered, edited, deleted or exported. For the details, see the following: P.285 "Registering or editing SNMP V3 user information" P.286 "Exporting SNMP V3 user information" P.287 "Deleting SNMP V3 user information"
6	Enable SNMP V3 Trap	Select whether SNMP V3 Trap is sent or not. [Disable] is set as the default.
7	SNMP V3 Trap User Name	Enter an SNMP V3 Trap User Name. You can enter up to 31 alphanumerical characters and symbols.
8	SNMP V3 Trap Authentication	Select an authentication protocol.
	Protocol	• HMAC-MD5 — Select this to use HMAC-MD5.
		• HMAC-SHA — Select this to use HMAC-SHA.
9	SNMP V3 Trap Authentication Password	Enter an authentication password. You can enter up to 31 alphanumerical characters and symbols.
10	SNMP V3 Trap Privacy	Select a protocol for data encryption.
	Protocol	None — Select this not to encrypt data.
		• CBC-DES — Select this to use CBC-DES.
		• CFB-AES-128 — Select this to use AES-128 (CFB mode).
11	SNMP V3 Trap Privacy Password	Enter a privacy password. You can enter up to 31 alphanumerical characters and symbols.
12	Enable Authentication Trap	Select whether to send SNMP Traps when this equipment is accessed using SNMP V1/V2 from a different read community. [Enable] is set as the default.
13	Enable Alerts Trap	Select whether to send SNMP V1/V2 Traps when an alert condition occurs. [Enable] is set as the default.
14	IP Trap Address 1 to 10	Enter the IP address where the SNMP Traps will be sent. You can specify up to

IP Trap Community

10 addresses. Specify within the range from 0 0 0 0 to 255 255 255 255. Enter the trap community name for the IP Traps. You can enter up to 31 $^{\circ}$

alphanumerical characters and symbols. "public" is set as the default.


	Item name	Description
16	IPX Trap Address	Enter the IPX address where the SNMP Traps will be sent. You can enter up to 20 alphanumerical characters and symbols.

Note

When you want to use a user name registered in the SNMP V3 User Information list as an SNMP V3 Trap User Name, you must enter the same protocols and passwords registered for the authentication protocol, authentication password (not displayed on the list), privacy protocol and password (not displayed on the list) into the fields such as [SNMP V3 Trap Authentication Protocol], [SNMP V3 Trap Authentication Password], [SNMP V3 Trap Privacy Protocol] and [SNMP V3 Trap Privacy Password]. If they do not match, information registered in the list will be adopted.

[Create SNMP V3 User Information] screen

You can display this screen by clicking the [New] button in the Create SNMP V3 User Information page.

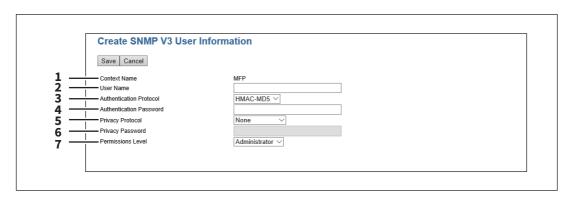

Tip

Clicking [Save] on the [Create SNMP V3 User Information] screen instantly registers the SNMP V3 user information, enabling the registered user to access this equipment via SNMP over a network.

	Item name	Description
1	Context Name	Displays the context name.
2	User Name	Enter the user name. You can enter up to 31 alphanumerical characters and symbols.
3	Authentication Protocol	Select an authentication protocol.
		• HMAC-MD5 — Select this to use HMAC-MD5.
		• HMAC-SHA — Select this to use HMAC-SHA.
4	Authentication Password	Enter the password when the Authentication option is enabled. You can enter up to 31 characters.
5	Privacy Protocol	Select a protocol for data encryption.
		None — Select this not to encrypt data.
		• CBC-DES — Select this to use CBC-DES.
		• CFB-AES-128 — Select this to use AES-128 (CFB mode).
6	Privacy Password	Enter the password for the user information. You can enter up to 31 alphanumerical characters and symbols.
7	Permissions Level	Select the access permission level of the SNMP V3 user.
		General User — Select this to permit only the reading of data.
		• Administrator — Select this to permit both the reading and writing of data.

☐ Setting up SLP

When SLP is enabled, this equipment becomes a Service Agent that responds to requests from a User Agent for searching particular services and registers services to a Directory Agent.


Tip

The SLP setting only supports the print services shown below. Raw TCP print, LPD print, IPP print, WSD print, SMB print, FTP print

Note

About the "printer-location" attribute of SLP

SLP has an attribute called "printer-location" as one of the services provided. The information of "printer-location" is the device setting information on the [General] submenu of the [Setup] menu on the [Administration] tab page, and that of the [Location] field of [Device Information] on the [Device] tab page. Turn the equipment off and on if you have changed [Location] from TopAccess. The change is reflected in "printer-location" of SLP after the equipment is restarted.

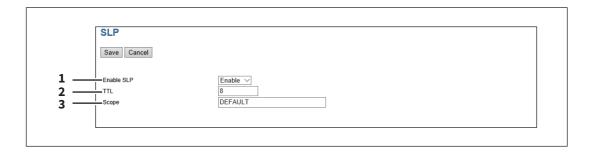


	Item name	Description
1	Enable SLP	Select whether SLP service is enabled or disabled. [Enable] is set as the default.
2	TTL	Set TTL (Time To Live, a scope in the network that provides SLP service). This is to enable the communication among User Agents and Directory Agents located on different networks.
3	Scope	Set this for specifying the scope of groups that provide SLP services. The default value is "DEFAULT".

Tip

- More than one group can be entered for [Scope] by separating them with a comma.
- Characters () \! <=> ~; * + cannot be entered in the scope.
- Do not leave this field blank or the SLP setting will be disabled.
- You can search a particular service using Konqueror (SUSE Linux) or SLPSNOOP utility (Novell client) which is a User Agent (UA).

Setting up LLTD

Enable this setting for confirming the device connection status, installing devices or accessing the TopAccess. This setting also allows you to discover the desired device over the local network and view device information such as location, IP address, MAC address or profile on the Network Map under the Windows 7/Windows Server 2008 environment. The LLTD settings are not available for some models.

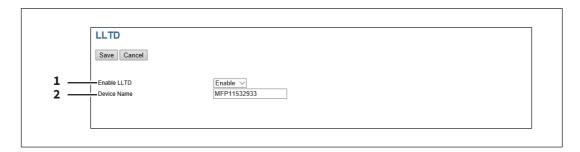


	Item name	Description
1	Enable LLTD	Select whether the LLTD setting is enabled or disabled.
		• Enable — Enables the LLTD.
		Disable — Disables the LLTD.
2	Device Name	Enter a device name to be displayed on the Network Map. You can enter up to 16 characters and symbols other than =, ; (semicolon), #, and \ (backslash).

Syslog Setting

Specify these items when sending message logs to a syslog server using syslog.

Note

Be sure to confirm that message logs are sent to a Syslog server regularly.

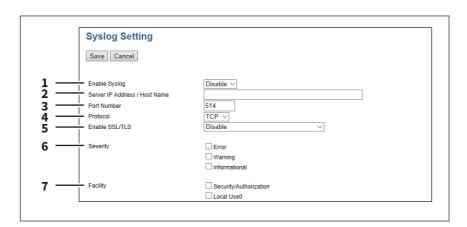

	Item name	Description
1	Enable Syslog	Specify whether or not to enable Syslog transmission.
2	Server IP Address/Host Name	Specify the IP address or host name of the Syslog server. You can enter up to 128 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
3	Port Number	Specify the port number to communicate with the Syslog server. You can enter a value in the range from 1 to 65535. Generally the default value "514" is used.

	Item name	Description
4	Protocol	Specify the communications protocol.
		• <u>TCP</u> — Select this to use TCP only.
		• UDP — Select this to use UDP only.
5	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the Syslog server.
		• Disable — Select this to disable the SSL/TLS for POP3 transmission.
		• Verify with imported CA certification(s) — Select this to enable the SSL/TLS using the imported CA certificate.
		 Accept all certificates without CA — Select this to enable the SSL/TLS without using imported CA certificate.
		 When [Verify with imported CA certification(s)] is selected, you must import the CA certificate in this equipment.
		P.326 "[Security] How to Set and How to Operate"
		 Not all operating systems support SSL/TLS for all protocols.
6	Severity	Specify the log type to be notified.
		• Error — Notifies when an error occurs.
		• Warning — Notifies when a warning occurs.
		• Information — Notifies information.
7	Facility	Specify the log content to be notified.
		• Security/Authorization — Security/Authorization log.
		• Local Use0 — Log that is other than the above.
		• Local Use1 (Job Log) — Job log
	Tip	1
		specify "Severity" and "Facility"
Specify both if you want to specify "Severity" and "Facility".		specify develop and radiacy.

☐ Setting up IPX/SPX

You can set the IPX/SPX protocol to enable the communication over IPX/SPX. The IPX/SPX must be configured to enable Novell printing as well as the IPX/SPX "Save as File" function with NetWare server over IPX/SPX.




Item name	Description
Enable IPX/SPX	Select whether the IPX/SPX protocol is enabled or disabled. Enable this when configuring Novell printing over the IPX/SPX network. [Disable] is set as the default.
Frame Type	 Select the desired frame type for IPX/SPX. Auto Sense — Select this to use an appropriate frame type that the equipment found first. IEEE 802.3/Ethernet II/IEEE 802.3 Snap/IEEE 802.2 — Instead of [Auto Sense], select the frame types to be used from these options.
	Enable IPX/SPX

	ltem name	Description
3	Actual Frame	Displays the actual frame type of the equipment.

☐ Setting up NetWare


In NetWare Session, you can set the NetWare Bindery or NDS service. This must be set when configuring a Novell printing environment.

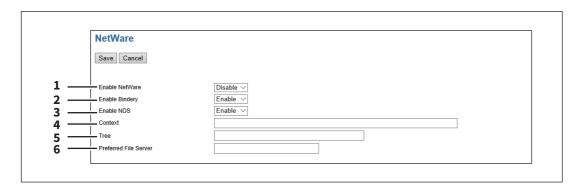

	Item name	Description
1	Enable NetWare	Select whether NetWare is enabled or disabled.
		• Enable — Enables NetWare.
		• Disable — Disables NetWare.
2	Enable Bindery	Select whether the NetWare Bindery mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in the bindery mode, you must enable this.
3	Enable NDS	Select whether the NetWare NDS mode for Novell printing is enabled or disabled. When you configure a Novell printing environment with the NetWare server in NDS mode, you must enable this. When this is enabled, you should also specify the context and tree for the NDS.
4	Context	Enter the NDS context where the NetWare print server for this equipment is located.
5	Tree	Enter the NDS tree.
6	Preferred File Server	Enter the NetWare server name in which this equipment preferentially searches for the queues.

☐ Setting up AppleTalk

 $You \ can \ set \ the \ protocol \ to \ enable \ communication \ over \ Apple Talk. \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ Apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ be \ configured \ to \ enable \ apple Talk \ must \ apple Talk \ apple Talk \ must \ apple Talk \ apple T$ printing from Mac computers. The AppleTalk settings are not available for some models.

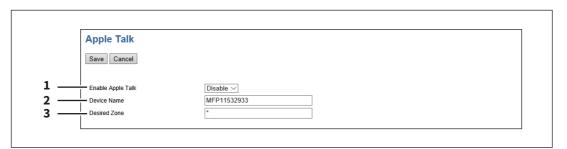

	Item name	Description
1	Enable Apple Talk	Select whether the AppleTalk protocol is enabled or disabled. Enable this when configuring AppleTalk printing. [Disable] is set as the default.
2	Device Name	Enter the device name of the equipment that will be displayed in the AppleTalk network. You can enter up to 32 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash).
3	Desired Zone	Enter the zone name where the equipment will connect — if required. You can enter up to 32 alphanumerical characters and symbols other than =,; (semicolon), #, and \setminus (backslash). The equipment will connect to the default zone if you enter "*".

■ VNC Setting


You can use a computer or a mobile terminal such as a tablet and a smartphone to check and operate the control panel.

Note

- The default password for this VNC function is "d9kvgn". Be sure to change it before using this function. Specify a password with six or more and eight or less alphanumeric letters.
- You can use only one computer or mobile terminal for the VNC function.

Tip

- It is recommended that you use UltraVNC (client software) on Windows 8.1 or later for the VNC function.
- When this VNC function is enabled, the equipment does not enter the Super Sleep mode.

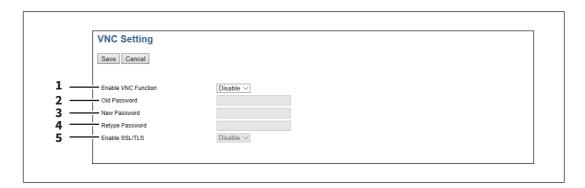

	Item name	Description
1	Enable VNC Function	Select whether the VNC function is enabled or disabled.
		• Enable — Enables the VNC function.
		Disable — Disables the VNC function.
2	Old Password	Enter the old password for the VNC function.
3	New Password	Enter a new password for the VNC function.
4	Retype Password	Retype the new password for the VNC function.
5	Enable SSL/TLS	Select whether the SSL (Secure Sockets Layer)/TLS (Transport Layer Security) is enabled or disabled for the VNC function.
		• Enable — Enables the VNC function.
		• Disable — Disables the VNC function.

■ Copier settings

You can specify copier settings.

- P.228 "Setting up Default setting"
- P.231 "Setting up Copy Job Enforcement Continue"

Tip


The [Copier] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

■ Setting up Default setting

In Default setting, you can set the default copier settings that apply for copy operation from the touch panel.

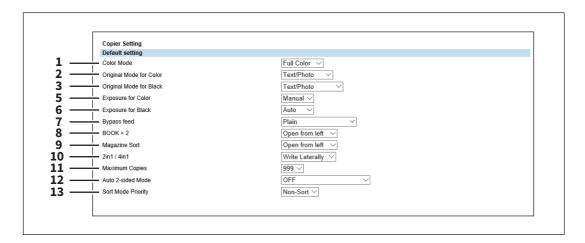




	Item name	Description
1	Color Mode *1	Select the default color mode for copying.
		• Auto Color — The equipment automatically judges the type of each color
		on originals. Colored originals are copied in full color and black and white
		originals are copied in black and white.
		• Full Color — All originals are copied in full color.
		• Black — All originals are copied in black and white.
		ted when the No Limit Black function is enabled. For the details of the No Limit e MFP Management Guide.
	Black function, refer to th	e MFP Management Guide.
2	Original Mode for Color *1	Select the default original mode for color originals.
		• Text/Photo — Originals with text and photographs mixed.
		• Text — Originals with text (or text and line art) only.
		Photo — Originals with general photographs on photographic printing
		paper.
		• Printed Image — Originals with photogravure (e.g. magazine, brochure).
		• Map — Originals with fine illustrations or text.

	Item name	Description
3	Original Mode for Black *1/	Select the default original mode for black and white originals.
	Original Mode	• Text/Photo — Originals with text and photographs mixed.
		• Text — Originals with text (or text and line art) only.
		• Photo — Originals with photographs.
		 Image Smoothing *2 — Originals with text and photographs mixed
		(especially originals requiring higher reproducibility on photos).
4	Resolution *1 *2	Select the default copier resolution.
		• 300dpi — Select 300 dpi resolution.
		• 600dpi — Select 600 dpi resolution.
5	Exposure for Color *1	Select the type of image density for color copies.
		• Auto — Select this to set the Auto mode as the default exposure for color
		copy. The Auto mode automatically detects the density of the original to
		make copies at the optimum exposure.
		• Manual — Select this to set the Manual mode as the default exposure for
		color copy. The manual mode allows you to manually specify the density of
		the original.
6	Exposure for Black *1/	Select the type of image density for black and white copies.
	Exposure	• Auto — Select this to set the Auto mode as the default exposure for black
		and white copies. The Auto mode automatically detects the density of the
		original to make copies at the optimum exposure.
		• Manual — Select this to set the Manual mode as the default exposure for
		black and white copies. The manual mode allows you to manually specify
		the density of the original.
7	Bypass feed	Select the default paper type for the Bypass Tray.
8	BOOK > 2 *2	Select the default page arrangement of the book-type originals for Book to 2-sided copies. Available only when the Automatic Duplexing Unit is installed.
		• Open from left — Select this to copy the booklet originals that can be read
		from the left page.
		• Open from right — Select this to copy the booklet originals that can be
		read from the right page.
9	Magazine Sort *2	Select the default page arrangement for magazine sort copies. Available only when the Automatic Duplexing Unit is installed.
		• Open from left — Select this to create a booklet that can be read from the
		left page.
		• Open from right — Select this to create a booklet that can be read from the
		right page.

	Item name	Description
10	2in1 / 4in1	Select the default page arrangement for 2in1/4in1 copies.
		Write Laterally — Select this to copy two pages or four pages from left to
		right or from top to bottom. When the portrait originals are copied using
		2in1 or 4in1, this equipment copies them from left to right. When the
		landscape originals are copied using 2in1 or 4in1, this equipment copies
		them from top to bottom.
		Write Vertically — Select this to copy each two pages or four pages from
		right to left or from top to bottom. When the portrait originals are copied
		using 2in1 or 4in1, this equipment copies them from right to left. When the
		landscape originals are copied using 2in1 or 4in1, this equipment copies
		them from top to bottom.
11	Maximum Copies	Select the maximum numbers of pages that users can specify for copying. You can select from [9999]*2, [999], [99] or [9].
12	Auto 2-sided Mode	Select how the 2-sided mode initially applies to copy settings when originals
12	Auto 2-sided Mode	are set in the Reversing Automatic Document Feeder. Available only when the Reversing Automatic Document Feeder and the Automatic Duplexing Unit are installed.
		OFF — Select this to initially apply [1->1 SIMPLEX] when originals are set in
		the Reversing Automatic Document Feeder.
		• One-sided/Double-sided — Select this to initially apply [1->2 DUPLEX]
		when originals are set in the Reversing Automatic Document Feeder.
		Double-sided/Double-sided — Select this to initially apply [2->2 DUPLEX]
		when originals are set in the Reversing Automatic Document Feeder.
		• User Selection — Select this to initially display the screen to select the 2-
		sided mode when originals are set in the Reversing Automatic Document Feeder.
13	Sort Mode Priority	Select the default sort mode for copying.
	,	Non-Sort — Copies exit without sorting.
		• Staple *2 — Copies exit with their corner stapled.
		• Sort — Copies exit in the same page order as the originals one set after
		another.
		Group — Copies grouped by page exit.

^{*1} Available only for models that support color printing.
*2 This function is not available for some models.

$f \square$ Setting up Copy Job Enforcement Continue

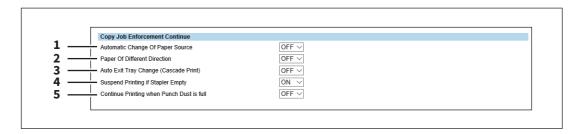

	Item name	Description
1	Automatic Change Of Paper Source	Specify whether or not to change the paper source automatically when the size of the original and the paper in the paper source do not match.
		• ON — Select this to change the paper source and continue processing the job.
		• OFF — Select this to stop the job.
2	Paper Of Different Direction *1	Specify whether or not to copy on paper which is loaded in the paper source in a different orientation from the original.
		• \mathbf{ON} — Select this to continue processing the job by copying on paper in a
		different orientation.
		• OFF — Select this to stop the job.
3	Auto Exit Tray Change	Specify whether or not to switch the receiving tray automatically.
	(Cascade Print) *1	• \mathbf{ON} — Select this to continue processing the job by switching the receiving
		tray.
		• OFF — Select this to stop the job.
4	Suspend Printing if Stapler	Specify whether to stop printing when staples run out.
	Empty *1	• ON — Select this to stop printing when staples run out.
		• OFF — Select this not to stop printing when staples run out.
5	Continue Printing when	Specify whether to continue printing when the punch dust bin is full.
	Punch Dust is full *1	ullet ON — Select this to continue printing even when the punch dust bin is full.
		• OFF — Select this to stop printing when the punch dust bin is full.

^{*1} This function is not available for some models.

■ Fax settings

You can specify fax settings.

- P.232 "Setting up Fax Setting"
- P.236 "Report Setting"

Tip

The [Fax] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:


- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

□ Setting up Fax Setting

In Fax Setting, you can set the default fax settings that apply to fax operations from the touch panel.

Tip

Some items may not be displayed or may not function on some models.

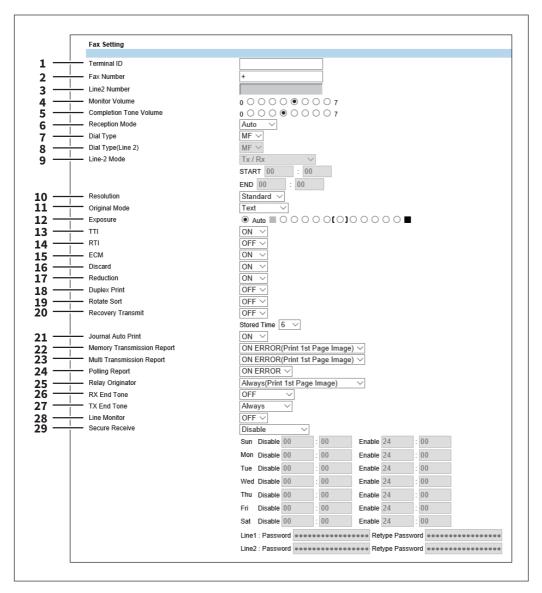

	Item name	Description
1	Terminal ID	Enter the terminal ID name (company name) to identify this equipment. The name will be printed at the leading edge of all documents transmitted.

	Item name	Description
2	Fax Number	Enter the fax number of this equipment. This fax number will be printed at the
		leading edge of all documents transmitted from Line 1.
3	Line2 Number *1	Enter the fax number for Line 2 of this equipment, if installed. This fax number will be printed at the leading edge of all documents transmitted from Line 2.
4	Monitor Volume	Select the volume of the line monitor during transmission.
5	Completion Tone Volume	Select the volume of the line monitor when completing the printing of a received fax.
6	Reception Mode	 Select how this equipment activates when a fax is received. Auto — Select this to automatically receive incoming originals when the bell rings. Select this when the line is being used exclusively by the fax transmission. Manual — Select this to manually receive incoming originals after pressing the [Start] button on the control panel.
7	Dial Type	 Select the dial type for Line 1. DP — Select this to use the Dial Pulse type for Line 1. MF — Select this to use Multi-frequency type for Line 1.
	Tip The following items are display • 10 PPS — Select this to use the • 20 PPS — Select this to use the • PB — Select this to use a tone	ne Dial Pulse type for 10 PPS. ne Dial Pulse type for 20 PPS.
8	Dial Type(Line 2) *1	 Select the dial type for Line 2, if installed. DP — Select this to use the Dial Pulse type for Line 2. MF — Select this to use Multi-frequency type for Line 2.
9	Tip The following items are display • 10 PPS — Select this to use th • 20 PPS — Select this to use th • PB — Select this to use a tone Line-2 Mode *1	 Dial Pulse type for 10 PPS. Exercise type push phone line. Select how Line 2 is used, if installed. Tx / Rx — Select this to use Line 2 for sending and receiving a fax. Rx Only (24 Hour) — Select this to use Line 2 only for receiving a fax. Rx Only (Timer) — Select this to use Line 2 only for receiving a fax during specified time. When this is selected, enter the start time and end time that
		Line 2 is used for only receiving a fax.
10	Resolution	 Select the default resolution for sending faxes. Standard — Select this to use the standard mode as the default resolution. This mode is suitable when you are frequently transmitting text documents with normal size characters. Fine — Select this to use the fine mode as the default resolution. This mode is suitable when you are transmitting documents with small size characters or fine drawings. Ultra Fine — Select this to use the ultra fine mode as the default resolution. This mode is suitable when you are transmitting documents with very small size characters or detailed drawings.

	Item name	Description
11	Original Mode Exposure	 Select the default image quality mode for sending faxes. Text — Select this to set the Text mode as the default image quality mode appropriate for sending text originals. Text/Photo — Select this to set the Text/Photo mode as the default image quality mode appropriate for sending originals containing both text and photos. Photo — Select this to set the Photo mode as the default image quality mode appropriate for sending photo originals. Select the default exposure for sending faxes.
12	Exposure	Select the default exposure for schaing faxes. Select [Auto] to automatically apply the ideal contrast according to the original or select the contrast manually in 11 stages.
13	TTI	Select whether to print a transmission header (TTI) on received faxes to identify the sender of received faxes.
14	Note The printed time is the transmi RTI	ssion time of each page. Select whether to print a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
15	ECM	Select whether to enable or disable the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
16	Discard	Select whether to discard the lower portion of the received fax image if it is larger than the recording paper.
17	Reduction	Select whether to reduce the received fax image if it is larger than the effective printing area of the recording paper.
18	Duplex Print	Select whether to print the received fax images on both sides of the recording paper. Available only when the Automatic Duplexing Unit is installed.
19	Rotate Sort *1	Select whether to rotate the output direction in the tray for each reception.
20	Recovery Transmit	Select whether to re-transmit a fax after failing the initially specified number of redial attempts. When this is enabled, select the stored time length from 1 to 24 hours.
21	Journal Auto Print	Select whether to automatically print a transmission and reception journal after every transmission completed.
22	Memory Transmission Report	 Select how to print a result report after a memory transmission. OFF — Select this to not print a memory transmission report. Always — Select this to print a memory transmission report with all page images for each memory transmission completed. ON ERROR — Select this to print a memory transmission report with all page images only when the memory transmission is not successfully completed. Always (Print 1st Page Image) — Select this to print a memory transmission report with the 1st page image for each memory transmission completed. ON ERROR (Print 1st Page Image) — Select this to print a memory transmission report with the 1st page image only when the memory transmission is not successful.


	Item name	Description
23	Multi Transmission Report	 Select how to print a result report after a multi-address transmission. OFF — Select this to not print a multi-address transmission report. Always — Select this to print a multi-address transmission report with all page images for each multi-address transmission completed. ON ERROR — Select this to print a multi-address transmission report with all page images only when the multi-address transmission is not successfully completed. Always (Print 1st Page Image) — Select this to print a multi-address transmission report with the 1st page image for each multi-address transmission completed. ON ERROR (Print 1st Page Image) — Select this to print a multi-address transmission report with the 1st page image only when the multi-address transmission is not successful.
24	Polling Report	 Select how to print a result report after a multi-polling reception. OFF — Select this to not print a multi-polling report. Always — Select this to print a multi-polling report for each multi-polling reception. ON ERROR — Select this to print a multi-polling report only when the multi-polling reception is not successful.
25	Relay Originator	 Select how to print a result report after a relay transmission. OFF — Select this to not print a relay station report. Always — Select this to print a relay station report with all page images for each relay transmission completed. ON ERROR — Select this to print a relay station report with all page images only when the relay transmission is not successful. Always (Print 1st Page Image) — Select this to print a relay station report with the 1st page image for each relay transmission completed. ON ERROR (Print 1st Page Image) — Select this to print a relay station report with the 1st page image only when the relay transmission is not successful.
26	RX End Tone	Select how to sound the RX end tone after the completion of reception. • OFF — The RX end tone does not sound. • Print End — The RX end tone sounds at the completion of printing. • Receive End — The RX end tone sounds at the completion of reception.
27	TX End Tone	Select how to sound the TX end tone after the completion of transmission. • OFF — The TX end tone does not sound. • Always — The TX end tone sounds at the completion of transmission. • ON ERROR — Sounds in the case of a transmission failure. • Normal End — Sounds at the normal completion of transmission.
28	Line Monitor	Select this to check the connection with the remote fax by confirming Line Monitor. • OFF — Line Monitor not confirmed • ON — Line Monitor confirmed

et the Secure Receive function to store received fax jobs in the nt without printing them. function, you can prevent the leaking of confidential information in vived when no people are present in your office, such as nighttime or or when an unspecified number of people visit your office. — Enables the Secure Receive function. t the fax jobs the Secure Receive function received, you must set
t the fax jobs the Secure Receive function received, you must set
Password] and [Retype Password] or [Line2: Password] *1 and e Password] *1. For the password, you can enter up to 20 umerical characters and symbols (! # () * + , / : ; = ? @ \$ ^ _ ` { } ~ \ e — Disables the Secure Receive function. f Schedule — Sets whether the Secure Receive function is enabled bled for each day of the week. You can set the time to enable and the Secure Receive function (24-hour display). day on which you want to enable the Secure Receive function all day, "00:00" for "Disable" and "00:00" for Enable. day on which you want to disable the Secure Receive function all ecify "00:00" for "Disable" and "24:00" for Enable. t the fax jobs the Secure Receive function received, you must set Password] and [Retype Password] or [Line2: Password] *1 and e Password] *1. For the password, you can enter up to 20

^{*1} This function is not available for some models.

□ Report Setting

You can select how to report fax results.

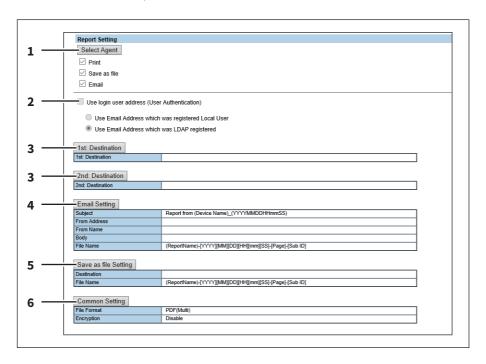

	Item name	Description
1	[Select Agent] button	You can make detailed settings by selecting one of the following items, and then clicking [Select Agent]. Print — Select this to print. There are no settings available in [Select Agent]. Save as file — Select this to save as a file. Click [Select Agent] to make settings for [Save as file Setting] and [Common Setting]. Email — Select this to send an email. Click [Select Agent] to make address settings, and settings for [Email Setting] and [Common Setting].
2	Use login user address (User authentication)	Set whether or not to use the E-mail address for a login user as the destination for E-mail transmission during user authentication. You can set the following items when you select this check box. Use Email Address which was registered Local User: The E-mail address for a user set in MFP Local Authentication is used as the destination for E-mail transmission. Use Email Address which was LDAP registered: The E-mail address for a server registered in LDAP Client is used as the destination for E-mail transmission. Click [Server Assignment]. Up to 4 LDAP servers can be assigned. P.210 "LDAP Client settings"
3	[1st Destination] /[2nd Destination] button	This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button. Click to display the address list where you can set addresses. P.58 "Destination Setting"
4	[Email Setting] button	This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button. Click to set the following items on the agent settings page for the Email settings. • Subject • From Address • From Name • Body • File Name
5	[Save as file Setting] button	This is enabled when you select [Save as file] from Report Settings, and then click the [Select Agent] button. Click to set the following items on the agent settings page for the Save as file settings. • Destination • File Name P.70 "Save as file Setting"
6	[Common Setting] button	This is enabled when you select [Email] or [Save as file] from Report Settings, and then click the [Select Agent] button. You can set the following items on the agent settings page. • File Format • Encryption □ P.66 "Email Setting" □ P.70 "Save as file Setting"

■ Save as file settings

You can configure the Save as file settings that apply to the Save as file operations.

- P.238 "Setting up Local Storage Path"
- P.239 "Setting up Storage Maintenance"
- P.239 "Setting up Destination"
- P.240 "Setting up Folder Name"
- P.240 "Setting up Format"
- P.241 "Setting up Single Page Data Saving Directory"
- P.242 "Setting up File Composition"
- P.242 "Setting up User Name and Password at User Authentication for Save as File"
- P.243 "Setting up Searching Interval"
- P.243 "Setting up Remote 1 and Remote 2 Settings"
- P.247 "Setting up N/W-Fax Destination"
- P.247 "Setting up N/W-Fax Folder"

Tip


The [Save as file] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

☐ Setting up Local Storage Path

You can see the folder path where files are stored by the Save as file to local folder. You can open the local folder by browsing this equipment from a Windows network.

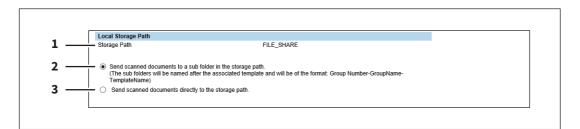


	Item name	Description
1	Storage Path	Displays the local storage path where files are stored when files are saved to the local folder by the Save as file functions.
2	Send scanned documents to a sub folder in the storage path.	Select this to save the files in the sub folder that is named as "Group Number-Group Name-Template Name".
3	Send scanned documents directly to the storage path.	Select this to save the files directly in the storage path.

☐ Setting up Storage Maintenance

In Storage Maintenance, you can select how to delete files stored in the local folder.

Note

 
The folder created when storing the files in the local folder will be deleted automatically when all files in the folder are deleted.



	Item name	Description
1	Do not delete documents automatically	Select this to delete files stored in the local folder manually. If you select this option, files saved in the shared folder will not be deleted automatically.
2	Delete documents after [] day(s)	Select this to automatically delete files stored in the local folder after a specified number of days. When this is selected, enter the number of days that the files are to remain. [30days] is set as the default.

■ Setting up Destination

 You can specify whether a network folder can be used for Save as file.



	Item name	Description
1	Do not allow any network folder to be used as a destination	You can specify that a network folder cannot be used for Save as file. When this is selected, users can only save a file in the local folder or USB media.
2	Use Network Folder Destination	You can specify that a network folder can be used for Save as file. When this is selected, set the Remote 1 and Remote 2 Settings to specify how users can select the network folders for Save as file destinations.
3	Default file path	Select the destination that will be set as the default destination when performing Save as file from the touch panel.
		• Use local folder — Select this to save in a local folder.
		• Remote 1 — Select this to save in the folder set in Remote 1.
		• Remote 2 — Select this to save in the folder set in Remote 2.

☐ Setting up Folder Name


You can select whether to add information related to this equipment or users to the name of a folder created automatically when you save files.



	Item name	Description
1	Folder Name Setting	Select additional information of the name of a folder created when you save files.
		Disable — Select this not to add any information.
		Add MachineName — Select this to add the NetBIOS name of this
		equipment.
		Add UserName — Select this to add a user name set in user authentication.

■ Setting up Format

You can set how to name files of the scanned images when you save them into the "FILE_SHARE" folder of this equipment or USB.

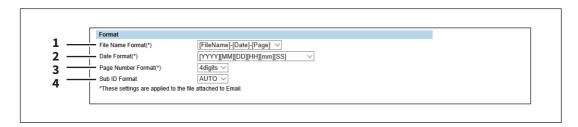


	Item name	Description
1	File Name Format	Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format. The added information will also be applied to file names attached to E-mails.
		• [FileName]-[Date]-[Page]
		• [FileName]-[Page]-[Date]
		• [Date]-[FileName]-[Page]
		• [Date]-[Page]-[Filename]
		• [Page]-[FileName]-[Date]
		• [Page]-[Date]-[FileName]
		• [FileName]_[Date]-[Page]

	Item name	Description
2	Date Format	Select how you add "date and time" of the file name selected in [File Name Format]. The added information will also be applied to file names attached to E-mails.
		• [YYYY][MM][DD][HH][mm][SS] — Year (4 digits), month, day, hour, minute and second are added.
		• [YY][MM][DD][HH][mm][SS] — Year (2 digits), month, day, hour, minute and second are added.
		• [YYYY][MM][DD] — Year (4 digits), month, and day are added.
		• [YY][MM][DD] — Year (2 digits), month, and day are added.
		• [HH][mm][SS] — Hour, minute and second are added.
		• [YYYY][MM][DD][HH][mm][SS][mm0] — Year (4 digits), month, day, hour,
		minute, second and random number (2 digits and "0") are added.
3	Page Number Format	Select the number of digits of a page number applied to "Page" of the file name selected in [File Name Format] from 3 to 6. The added information will also be applied to file names attached to E-mails. [4digits] is set as the default.
4	Sub ID Format	This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [AUTO]. [AUTO] is selected by default. If [AUTO] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.

☐ Setting up Single Page Data Saving Directory

 
If [SINGLE] is selected in [MULTI/SINGLE PAGE] on the scan menu of this equipment, the scanned data are saved as a single-page file. This setting is to select whether a subfolder is created or not when you are saving a single-page file.



	Item name	Description
1	Save under a subfolder	A subfolder is created in a specified directory and you can save the file into it.
2	Save without creating a subfolder	A subfolder is not created and the file is saved in a specified directory.

■ Setting up File Composition

 If [SINGLE] is selected in [MULTI/SINGLE PAGE] on the scan menu of this equipment, the scanned data are saved as a single-page file. This setting is to select a page configuration of a single-page file to be saved. The added information will also be applied to file names attached to E-mails.



	ltem name	Description
1	Scanning 1 page makes 1 file. (2-sided originals become 2 files.)	When 1 page of an original is scanned, the scanned data are saved as 1 file. When you scan 1 sheet of a 2-sided original, for example, the data of its front side are saved as 1 file and those of its back side are also saved as 1 file.
2	Make to the file like a scanned manuscript. (2-sided originals become 1 files.)	When 1 page of an original is scanned, the scanned data are saved as 1 file. When you scan 1 sheet of a 2-sided original, for example, the data of both the front and back sides (= 2 pages) are saved as 1 file.

☐ Setting up User Name and Password at User Authentication for Save as File


If user authentication is enabled, you can select whether a user name and a password used for user authentication are automatically applied to [LOGIN USER NAME] and [PASSWORD] to be used for saving files into a network folder (specified in REMOTE 1/2) or not. This setting is applied only when [Use Network Folder Destination] of the Destination setting for the Remote 1 or the Remote 2 is checked.



	Item name	Description
1	User name and password of the device	User names and passwords being logged in will not be applied. Enter [LOGIN USER NAME] and [PASSWORD] as required when scanning originals.
2	Login User Name and Password (Template registration User Name and Password is prioritized to expand template)	A user name and a password being logged in will be automatically applied. When a template is used, a user name and a password registered there will be automatically applied.
3	Login User Name and Password (Login User Name and Password is prioritized to expand template)	A user name and a password being logged in will be automatically applied. When a template is used, the user name and password being logged in will be applied.

☐ Setting up Searching Interval

 Select the interval for searching expired files in the "FILE_SHARE" folder. The content of this setting will also be applied to files in e-Filing boxes.




	Item name	Description
1	Deleting Expired File [] Hour(s)	This equipment searches expired files every time a specified period of time has passed. The period can be selected from 1 to 24 hours. 12 hours is set by default.
	You can set the expiration date using the items below. P.239 "Setting up Storage M	of each file in the "FILE_SHARE" folder or whether to delete expired files or not laintenance"

☐ Setting up Remote 1 and Remote 2 Settings

In Remote 1 and Remote 2, you can specify how users can select the network folders for Save as file destination when you select [Use Network Folder Destination] in the Destination setting. You can specify two network folders; Remote 1 and Remote 2. The setting items are the same for both Remote 1 and Remote 2.

Note

The network folder as a destination must be set to be shared by all users.

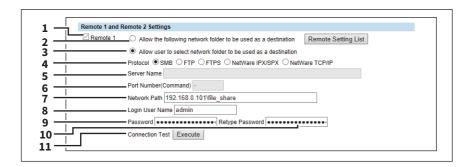


	Item name	Description
1	[Remote 1]/[Remote 2]	Select the remote network folder you want to use.
2	Allow the following network folder to be used as a destination	Select this to restrict users to select only the network folder that you have specified. Otherwise, select [Allow user to select network folder to be used as a destination]. [Remote Setting List] button — Sets a list of network folders for Save as file destination, which can be selected from Remote 1 and Remote 2. To select the specified setting list from the touch panel, you must select [Allow user to select network folder to be used as a destination]. P.245 "[Remote Setting List] screen"

	Item name	Description
3	Allow user to select network folder to be used as a destination	Select this to allow users to specify a network folder as a destination. When the list of Save as file destinations has been set in [Remote Setting List], you can select a network folder from the list. Otherwise, select [Allow the following network folder to be used as a destination].
		ecify either Remote 1 or Remote 2, select the one that is not set for the network ect [Allow user to select network folder to be used as a destination] of the
4	Protocol	Select the protocol to be used for uploading a file to the network folder. • SMB — Select this to send a file to the network folder using the SMB protocol.
		 FTP — Select this to send a file to the FTP server. FTPS — Select this to send a file to the FTP server using FTP over SSL/TLS. NetWare IPX/SPX — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.
		NetWare TCP/IP — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.
5	Server Name	When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "192.168.1.1" in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumerical characters and symbols.
6	Port Number(Command)	Enter the port number to be used for controls if you select [FTP] as the protocol. Generally "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and hyphens (-). "-" is set as the default.
7	Network Path	When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the "users\scanned" folder in the computer named "Client01", enter "\\Client01\users\scanned". When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "user/scanned". When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the "sys\scan" folder in the NetWare file server, enter "\sys\scan". You can enter up to 128 alphanumerical characters and symbols.
8	Login User Name	Enter the log-in user name to access an SMB server, an FTP server, or a NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
9	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. You can enter up to 32 alphanumerical characters, symbols, and spaces. A single space only can also be entered.

	Item name	Description
10	Retype Password	Enter the same password again for a confirmation.
11	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.

[Remote Setting List] screen


In this screen, you can set a list of network folders for Save as file destination, which can be selected from Remote 1 and Remote 2. You can register up to 30 items in the Remote Setting List.

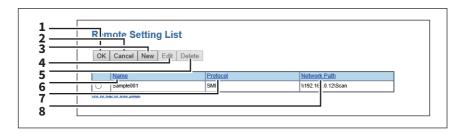

	Item name	Description
1	[OK] button	Registers the remote setting list.
2	[Cancel] button	Cancels the registration of the remote setting list.
3	[New] button	Sets a new remote setting. □ P.245 "[Remote Setting] screen"
4	[Edit] button	Edits the item selected in the remote setting list. □ P.245 "[Remote Setting] screen"
5	[Delete] button	Deletes the item selected in the remote setting list.
6	Name	Displays the name of the remote setting.
7	Protocol	Displays the protocol of the remote setting.
8	Network Path	Displays the network path of the remote setting.

[Remote Setting] screen

In this screen, you can set the network folders for Save as file destination that are to be registered in the list.

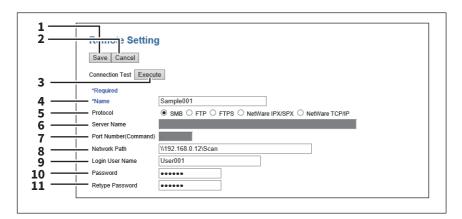


	Item name	Description
1	[Save] button	Saves the specified network folder for Save as file destination.
2	[Cancel] button	Cancels the settings.

	Item name	Description
3	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.
4	Name	Enter the name of the network folder for Save as file destination.
5	Protocol	 Select the protocol to be used for uploading a file to the network folder. SMB — Select this to send a file to the network folder using the SMB protocol. FTP — Select this to send a file to the FTP server. FTPS — Select this to send a file to the FTP server using FTP over SSL/TLS. NetWare IPX/SPX — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol. NetWare TCP/IP — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.
7	Server Name Port Number(Command)	When you select [FTP] as the protocol, enter the FTP server name or IP address where a scanned file will be sent. For example, to send a scanned file to the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "192.168.1.1" in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. You can enter up to 64 alphanumerical characters and symbols. Enter the port number to be used for controls if you select [FTP] as the protocol. Generally "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range from 0 to 65535 using numbers and
8	Network Path Login User Name	hyphens (-). "-" is set as the default. When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the "users\scanned" folder in the computer named "Client01", enter "\\Client01\users\scanned". When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "user/scanned". When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the "sys\scan" folder in the NetWare file server, enter "\sys\scan". You can enter up to 128 alphanumerical characters and symbols. Enter the log-in user name to access an SMB server, an FTP server, or a
10	Paccword	NetWare file server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
10	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. You can enter up to 32 alphanumerical characters, symbols, and spaces. A single space only can also be entered.
11	Retype Password	Enter the same password again for a confirmation.

☐ Setting up N/W-Fax Destination

 
You can configure a network folder to store documents that are sent using the N/W-Fax driver with the Save as file option enabled.



	Item name	Description
1	Do not allow any network folder to be used as a destination	Select this to not allow any network folders to be used as Save as file destinations for N/W-Faxes documents. When selected, users can only save an N/W-Fax document with the Save as file option enabled to local storage.
2	Use Network Folder Destination	Select this to allow network folders to be used as Save as file destinations for N/W-Fax documents. When selected, set the N/W-Fax Folder settings to specify which network folder to use.

☐ Setting up N/W-Fax Folder

In the N/W-Fax Folder, you can specify in which network folder N/W-Fax documents are saved.

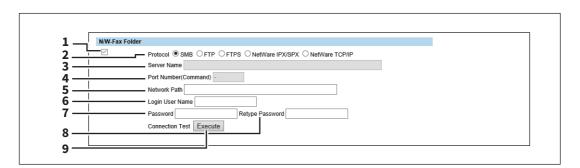

	Item name	Description
1	Check box	Select the check box so that the popup prompts you to enter the network path or the server name if you try to save the settings without it.
2	Protocol	 Select the protocol for uploading an N/W-Fax document to a network folder. SMB — Select this to send an N/W-Fax document to the network folder using the SMB protocol. FTP — Select this to send a file to the FTP server. FTPS — Select this to send a file to the FTP server using FTP over SSL/TLS. NetWare IPX/SPX — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol. NetWare TCP/IP — Select this to send a scanned file to the NetWare file server using the TCP/IP protocol.
3	Server Name	When you select [FTP] as the protocol, enter the FTP server name or IP address where an N/W-Fax document will be sent. For example, to send an N/W-Fax document to the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "192.168.1.1" in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server.

	Item name	Description
4	Port Number(Command)	Enter the port number to be used for controls if you select [FTP] as the protocol. Generally "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number.
5	Network Path	When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the "users\scanned" folder in the computer named "Client01", enter "\Client01\users\scanned". When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "user/scanned". When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the "sys\scan" folder in the NetWare file server, enter "\sys\scan".
6	Login User Name	Enter the login user name to access an SMB server, an FTP server, or a NetWare file server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.
7	Password	Enter the password to access an SMB server, an FTP server, or a NetWare file server, if required. The space can be entered.
8	Retype Password	Enter the same password again for a confirmation.
9	[Execute] button	Tests the connection using the specified network settings to check if the communications can be established.

■ Email settings

You can configure the E-mail settings that are needed for Scan to Email operations. This section describes necessary settings for E-mail transmissions.

Tip

The [Email Setting] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:


- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

■ Setting up Email Setting

You can specify the file format, fragment message size, and default body strings that apply to the Scan to Email documents.

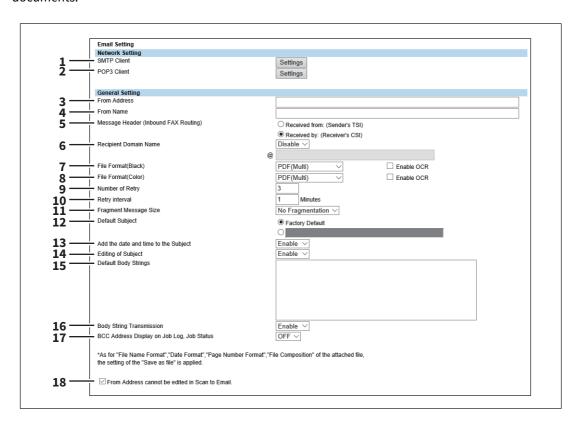

	Item name	Description
1	SMTP Client	Specify SMTP transmission for e-mails.
	See the following for how to se P.214 "Setting up SMTP Clie	
2	POP3 Client	Specify the POP3 server that receives e-mail print jobs.
	See the following for how to se P.216 "Setting up POP3 Clie	

	Item name	Description
3	From Address	Enter the E-mail address of this equipment.

Tip

- Email addresses are displayed on the transmission/reception history (log).
- The operation using easy-to-understand addresses is recommended.

Note

The [From Address] must be entered to enable E-mail transmission. However, the E-mail address of the user who is logged in to this equipment will be automatically set if any user management settings apart from MFP local authentication are enabled. For more information about User Management Setting, see the following section:

P.135 "[User Management] Tab Page"

4	From Name	Enter the name of this equipment.
5	Message Header (Inbound FAX Routing)	Select TTI to be used as a subject when the received Internet Fax is forwarded.
6	Recipient Domain Name	Enable or disable automatic addition of a domain name while a destination is being entered.
		• Enable — Select this to add a domain name.
		• <u>Disable</u> — Select this not to add a domain name.
		Enter the domain name to be added in the text box. You can enter up to 128 alphanumerical characters and symbols other than =, ; (semicolon), # and \(backslash).

	Itam nama	Description
	Item name	Description
7	File Format(Black)	Select the file format of files to be sent when scanning in black mode.
		• TIFF(Multi) — Select this to save scanned images as a Multi-page TIFF file.
		 TIFF(Single) — Select this to save scanned images separately as Single- page TIFF files.
		• PDF(Multi) — Select this to save scanned images as a Multi-page PDF file.
		 PDF(Single) — Select this to save scanned images separately as Single- page PDF files.
		• XPS(Multi) — Select this to save scanned images as a Multi-page XPS file.
		• XPS(Single) — Select this to save scanned images separately as Single-page XPS files.
		• PDF/A(Multi) — Select this to save scanned images as a Multi-page PDF/A file.
		• PDF/A(Single) — Select this to save scanned images separately as Single-page PDF/A files.
		• DOCX(Multi) — Select this to save scanned images as a Multi-page Word file (DOCX) after OCR processing.
		• DOCX(Single) — Select this to save scanned images as a Single-page Word file (DOCX) after OCR processing.
		• XLSX(Multi) — Select this to save scanned images as a Multi-page Excel file
		(XLSX) after OCR processing.
		• XLSX(Single) — Select this to save scanned images as a Single-page Excel
		file (XLSX) after OCR processing.
		• PPTX(Multi) — Select this to save scanned images as a Multi-page
		PowerPoint file (PPTX) after OCR processing.
		• PPTX(Single) — Select this to save scanned images as a Single-page
		PowerPoint file (PPTX) after OCR processing.
		You can select whether to enable OCR by [Enable OCR].

	Item name	Description
8	File Format(Color)	Select the file format of files to be sent when scanning in color mode.
		• TIFF(Multi) — Select this to save scanned images as a Multi-page TIFF file.
		• TIFF(Single) — Select this to save scanned images separately as Single-
		page TIFF files.
		• PDF(Multi) — Select this to save scanned images as a Multi-page PDF file.
		• PDF(Single) — Select this to save scanned images separately as Single-
		page PDF files.
		• Slim PDF(Multi) — Select this to save scanned images as Multi-page slim
		PDF files. Select this when you give priority to minimizing the file size over quality of image.
		• Slim PDF(Single) — Select this to save scanned images separately as
		Single-page slim PDF files. Select this when you give priority to minimizing
		the file size over quality of image.
		• XPS(Multi) — Select this to save scanned images as a Multi-page XPS file.
		• XPS(Single) — Select this to save scanned images separately as Single-page XPS files.
		• JPEG — Select this to save scanned images as JPEG files.
		• PDF/A(Multi) — Select this to save scanned images as a Multi-page PDF/A file.
		• PDF/A(Single) — Select this to save scanned images separately as Single-
		page PDF/A files.
		• DOCX(Multi) — Select this to save scanned images as a Multi-page Word file
		(DOCX) after OCR processing.
		• DOCX(Single) — Select this to save scanned images as a Single-page Word
		file (DOCX) after OCR processing.
		• XLSX(Multi) — Select this to save scanned images as a Multi-page Excel file
		(XLSX) after OCR processing.
		 XLSX(Single) — Select this to save scanned images as a Single-page Excel file (XLSX) after OCR processing.
		• PPTX(Multi) — Select this to save scanned images as a Multi-page
		PowerPoint file (PPTX) after OCR processing.
		• PPTX(Single) — Select this to save scanned images as a Single-page
		PowerPoint file (PPTX) after OCR processing.
		You can select whether to enable OCR by [Enable OCR].
	Tip	
		can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
9	Number of Retry	Enter the number of times to try sending scanned images when it fails. "3" is
		set as the default.
10	Retry interval	Enter the interval to try sending scanned images when it fails. [1minutes] is set as the default.
	Note	
	When the [Number of Retry] and [Retry interval] options are changed, the [Number of Retry] and [Retry interval] options in the Internet Fax settings are also changed.	
	P.255 "Setting up Interne	
11	Fragment Message Size	Select the size of the message fragmentation.

	Item name	Description
12	Default Subject	Select whether to set the E-mail subject to the factory default or a desired string.
		• <u>Factory Default</u> — Select this to display the BCC address entry column.
		• <entry box=""></entry> — Enter the desired subject.
13	Add the date and time to the Subject	Select whether to append or not date and time to the E-mail subject. This is set as a default.
		• Enable — Select this to append date and time to the subject.
		• Disable — Select this to not append date and time to the subject.
14	Editing of Subject	Select whether to allow or not editing of the E-mail subject.
		• Enable — Select this to allow the user to edit the E-mail subject.
		• Disable — Select this to not allow the user to edit the E-mail subject.
15	Default Body Strings	Enter the body text that will be automatically entered in the [Body] box when users operate Scan to Email from the touch panel. This sets only the default body text, so that it can be changed on each operation by users.
16	Body Strings Transmission	Select whether the body strings will be sent or not.
17	BCC Address Display on Job Log, Job Status	Select the display form of the destination of the BCC address displayed in the scan log and the scan job.
		• ON — Select this to display [Bcc Address], instead of the destination of the
		BCC address.
		OFF — Select this to display the destination of the BCC address.
18	From Address cannot be edited in Scan to Email.	Select this item to prohibit modification of the From Address.

☐ Setting up URL Transmission Settings

You can set to provide a URL (link) to the saving directory of the file instead of attaching it before sending a scanned image by email.



	Item name	Description
1	URL Transmission	Select whether to enable or disable the function to provide a URL to the saving directory of the scanned data.
		• Enable — Provides a URL to the saving directory.
		• Disable — Sends the data as attachments.
	Tip	
	The scanned data is stored in MFP Local.	
	• If a URL to the saving dir	ectory is provided, its link and the preservation period are stated in the email.

	Item name	Description
2	Threshold to Send Attached File (1-100)	Select the maximum size of an attached file. The allowable range is between 1 MB and 100 MB. Select [Send Email with URL at any time] if you want to provide a URL to the saving directory of the file, regardless of the file size. If a maximum size is specified, any file whose size is smaller than the specified one is attached to an email message. On the other hand, if a file exceeds the specified maximum size, a URL to the saving directory is provided.
3	Preservation Period for Download File	Select the preservation period of the file if a URL to the saving directory is provided. If you do not want to impose any limits on the preservation period, select [Unlimited]. If you prefer to automatically delete download files regularly, select a period until the data is deleted.
	Tip	
		MFP Local because it is full, this results in an error. Delete the stored files them manually, all scanned data in the shared folder is deleted.
	P.364 "Deleting the data fro	
4	Search Interval to delete the Expired Download File	Selects the interval of monitoring the expiration of the specified preservation period.
5	Host Name Format in URL	Selects the host name of the format.
		• <u>IP Address</u> : Select this to use the IP address set in the equipment.
		Host Name (FQDN): Select this to use the FQDN configured with the
		combination of the host and domain names set in the equipment.
		• NetBIOS Name : Select this to use the NetBIOS name set in the equipment.

Note

- Be sure to set the domain name of DDNS when [Host Name (FQDN)] is selected. If it has not been set, the IP Address is used for the format of the host name. Perform the name resolution for FQDN in the DNS server so that connection to a URL from a client PC becomes possible.
 - P.185 "DDNS"
- [NetBIOS Name] means "[NetBIOS Name] of SMB" set in this equipment. If [Disable] is selected for [SMB Server Protocol] of SMB, the IP Address is used for the format of the host name.
 - P.201 "Setting up SMB"

■ InternetFax settings

You can specify Internet Fax settings. This section describes necessary settings for Internet Fax transmissions.

Tip

The [InternetFax] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

P.15 "Access Policy Mode"


P.165 "[Setup] Item List"

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

☐ Setting up InternetFax Setting

You can specify the fragment page size and default body strings that apply to the Internet Faxes.

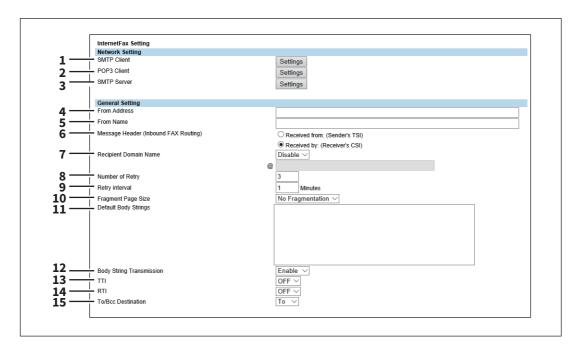


	Item name	Description	
1	SMTP Client	Specify SMTP transmission for InternetFax.	
	Tip		
	See the following for how to se	et SMTP Client.	
	P.214 "Setting up SMTP Clie	ent"	
2	POP3 Client	Specify the POP3 server that receives InternetFax print jobs.	
	Tip		
	See the following for how to se	et POP3 Client.	
	P.216 "Setting up POP3 Clie	ent"	
3	SMTP Server	Specify SMTP reception for InternetFax.	
	Tip	Tip	
	See the following for how to se	See the following for how to set SMTP Server.	
	P.208 "Setting up SMTP Server"		
4	From Address	Enter the E-mail address of this equipment.	
	Note		
	The [From Address] must be entered to enable Internet Fax transmission. However, the E-mail address of the		
	user who is logged in to this equipment will be automatically set if any user management settings apart from		
	MFP local authentication are enabled. For more information about User Management Setting, see the		
	following section:		
	P.135 "[User Management]		
5	From Name	Enter the name of this equipment.	
6	Message Header (Inbound FAX Routing)	Select TTI to be used as a subject when the received Internet Fax is forwarded.	

	Item name	Description
7	Recipient Domain Name	Enable or disable automatic addition of a domain name while a destination is being entered. Enable: Select this to add a domain name. Disable: Select this not to add a domain name. Enter the domain name to be added in the text box. You can enter up to 128 alphanumerical characters and symbols other than =,; (semicolon), # and \(backslash).
8	Number of Retry	Enter the number of times to try sending the Internet Faxes when it fails. "3" is set as the default.
9	Retry interval	Enter the interval to try sending the Internet Faxes when it fails. [1minutes] is set as the default.
	When the [Number of Retry] a interval] options in the E-mai P.249 "Email settings"	and [Retry interval] options are changed, the [Number of Retry] and [Retry settings are also changed.
10	Fragment Page Size	Select the size of the message fragmentation.
11	Default Body Strings	Enter the body text that will be automatically entered in the [Body] box when users operate Scan to Internet Fax from the touch panel. This sets only the default body text, so that it can be changed on each operation by users.
12	Body String Transmission	Select whether the body strings will be sent or not.
13	TTI	Specify whether or not to add the sender information in the header.
14	RTI	Specify whether or not to add the sender information in the footer.
15	To/Bcc Destination	You can set the destination of the internet fax to be sent only to To or Bcc.
		tion, To becomes blank and the transmitted internet fax may be treated as spam the mail server, mailer or security software. Check the settings for spam.

□ Report Setting

You can select how to report internet fax results.

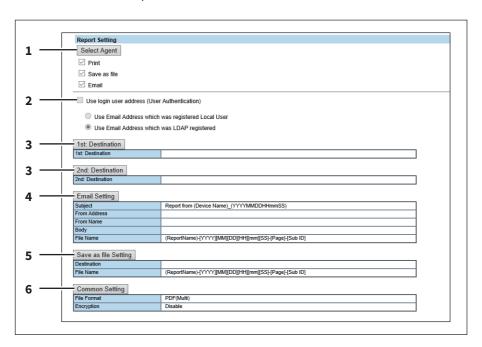

	Item name	Description
1	[Select Agent] button	You can make detailed settings by selecting one of the following items, and then clicking [Select Agent]. Print — Select this to print. There are no settings available in [Select Agent]. Save as file — Select this to save as a file. Click [Select Agent] to make settings for [Save as file Setting] and [Common Setting]. Email — Select this to send an email. Click [Select Agent] to make address settings, and settings for [Email Setting] and [Common Setting].
2	Use login user address (User Authentication)	Set whether or not to use the E-mail address for a login user as the destination for E-mail transmission during user authentication. You can set the following items when you select this check box. Use Email Address which was registered Local User: The E-mail address for a user set in MFP Local Authentication is used as the destination for E-mail transmission. Use Email Address which was LDAP registered: The E-mail address for a server registered in LDAP Client is used as the destination for E-mail transmission. Click [Server Assignment]. Up to 4 LDAP servers can be assigned. P.210 "LDAP Client settings"
3	[1st: Destination] /[2nd: Destination] button	This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button. Click to display the address list where you can set addresses. P.58 "Destination Setting"
4	[Email Setting] button	This is enabled when you select [Email] from Report Settings, and then click the [Select Agent] button. Click to set the following items on the agent settings page for the Email settings. • Subject • From Address • From Name • Body • File Name
5	[Save as file Setting] button	This is enabled when you select [Save as file] from Report Settings, and then click the [Select Agent] button. Click to set the following items on the agent settings page for the Save as file settings. • Destination • File Name P.70 "Save as file Setting"
6	[Common Setting] button	This is enabled when you select [Email] or [Save as file] from Report Settings, and then click the [Select Agent] button. You can set the following items on the agent settings page. • File Format • Encryption P.66 "Email Setting" P.70 "Save as file Setting"


■ Printer/e-Filing settings

Tip

The [Printer/e-Filing] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

☐ Setting up Printer/e-Filing Job Enforcement Continue

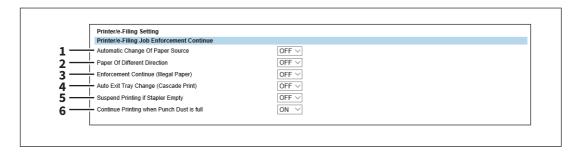

	Item name	Description
1	Automatic Change Of Paper Source	Specify whether or not to change the paper source automatically when the size of the original and the paper in the paper source do not match.
		• ON — Select this to change the paper source and continue processing the job.
		• OFF — Select this to stop the job.
2	Paper Of Different Direction *1	Specify whether or not to copy on paper which is loaded in the paper source in a different orientation from the original.
		• ON — Select this to continue processing the job by copying on paper in a different orientation.
		• OFF — Select this to stop the job.
3	Enforcement Continue (Illegal Paper) *1	Specify whether or not to continue processing the job forcibly when the specified output tray is incorrect.
		• ON — Select this to print to the specified output tray.
		OFF — Select this to stop the job.
4	Auto Exit Tray Change	Specify whether or not to switch the receiving tray automatically.
	(Cascade Print) *1	• ON — Select this to continue processing the job by switching the receiving tray.
		• OFF — Select this to stop the job.
5	Suspend Printing if Stapler Empty *1	Specify whether to stop printing when staples run out.
		• ON — Select this to stop printing when staples run out.
		OFF — Select this not to stop printing when staples run out.
6	Continue Printing when Punch Dust is full *1	Specify whether to continue printing when the punch dust bin is full.
		• ON — Select this to continue printing even when the punch dust bin is full.
		OFF — Select this to stop printing when the punch dust bin is full.

^{*1} This function is not available for some models.

■ Printer settings

You can configure how the printer works and the printer options needed for the raw print jobs.

- P.259 "Setting up General Setting"
- P.260 "Setting up Default Direct Print Setting"
- P.261 "Setting up Driver Customization Packages Setting"
- P.262 "Setting up Default Raw Job Setting"
- P.263 "Setting up Raw Job Setting"

Tip

The [Printer] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

■ Setting up General Setting

In General Setting, you can specify the printer related options.



	Item name	Description
1	Period of time to save Private,Hold,Proof and invalid Jobs	Select how long the private, hold, and test print jobs are kept. You can select in the range from 1 to 12 hours, or from 1 to 30 days. Select [Indefinite] to retain all jobs in the queues until a user manually deletes them. [14 Days] is set as the default.
2	LT<>A4 / LD <>A3 *1	Select whether to print a document intended for one paper size can be printed on paper of a different size. For example, you can print a document set up for Letter size on A4 paper. When disabled, this equipment will prompt users for the correct paper size. [Enable] is set as the default.
3	Wide A4 Mode (for PCL)	Select whether the width of the printable area of copy paper is widened or not when you are printing a PCL print job on A4 paper. Select [Enable] to widen it for approx. 3.5 mm / 0.14 inch (when in a portrait direction) and approx. 1.5 mm / 0.06 inch (when in a landscape direction). Thus more data can be printed for each line. [Disable] is set as the default.
	Note	
	This item is available only for s	ome models.
4	Restriction for Print Job	Select whether or not to restrict printing certain print jobs.
		• None — Select this to print all data.
		Only Private — Select this to print private print jobs only.
		Only Hold — Select this to print hold print jobs only.
		• Only Private/Hold — Select this to print private and hold print jobs only.

^{*1} The [LD <--> A3] function is not available for some models.

Setting up Default Direct Print Setting


You can set the default settings for USB Direct Print and E-mail Direct Print.

Note

Some print settings do not work on printouts according to file formats.

- The [PDF Overprint], [PDF Prioritize Original Size], and [PDF Size Options] settings can work only on PDF printouts.
- The [Enable Print Header] and [Enable Print Message Body] settings can work only on the E-mail Direct Print function.
- E-mails with encrypted PDF (secure PDF) files attached cannot be printed by the E-mail Direct Print function.

Color models

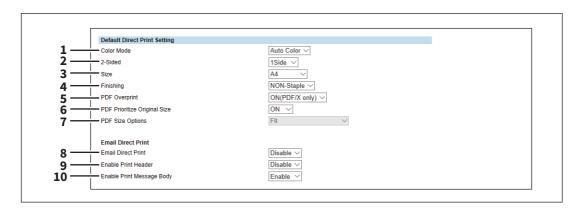

Monochromatic models



	Item name	Description
1	Color Mode	Select the default color mode setting for direct print. This item is available only for color models.
		• <u>Auto Color</u> — Select this to enable auto color print.
		• Full Color — Select this to enable full color print.
		• Black — Select this to enable monochrome print.
2	2-Sided	Select the default setting to print one side or both sides of paper for direct print. This item is available only when Automatic Document Feeder has been installed.
		• 1Side — Select this to enable one-side print.
		• Book — Select this to enable duplex book print.
		• Tablet — Select this to enable duplex tablet print.
3	Size	Select the default paper size for direct print.

	Item name	Description
4	Finishing *1	Select the default setting as to whether to staple paper or not.
		• NON-Staple — Select this to disable stapling paper.
		• Upper Left — Select this to staple paper on the upper left corner.
		Upper Right — Select this to staple paper on the upper right corner.
5	PDF Overprint	Select the default setting as to whether to overprint colors in PDF files or not.
		OFF — Select this to disable overprint.
		• ON — Select this to enable overprint.
		• ON (PDF/X only) — Select this to enable overprint only for PDF/X files.
6	PDF Prioritize Original Size	Select the default setting as to whether to prioritize the PDF original size or not.
		ullet OFF — Select this to prioritize the selected paper size over the original size.
		• <u>ON</u> — Select this to prioritize the original size over the selected paper size,
		which prints PDF files without enlargement or reduction.
7	PDF Size Options	Select the default setting as to how to print PDF files when [PDF Prioritize Original Size] is set to [OFF].
		• <u>Fit</u> — Select this to enlarge or reduce pages by fitting the original size to the paper size.
		• Shrink Oversized Pages — Select this to reduce pages if the original size is
		larger than the paper size. Pages are printed without enlargement if the
		original size is equal to or smaller than the paper size.
8	Email Direct Print	Select the default setting as to whether to print E-mails with PDF, JPEG, and XPS files attached by the Email Direct Print function.
		• <u>Disable</u> — Select this to disable Email Direct Print.
		• Auto — Select this to process Email Direct Print automatically.
9	Enable Print Header	Select whether to print the E-mail header when receiving E-mail print jobs. [Disable] is set as the default.
10	Enable Print Message Body	Select whether to print the body message when receiving E-mail print jobs. [Enable] is set as the default.

^{*1} This function is not available for some models.

☐ Setting up Driver Customization Packages Setting

You can set the function to download the customization packages for the printer driver.



	Item name	Description
1	Enable Download	Select whether the function is enabled or disabled to download customization packages for the printer driver.
		• <u>Enable</u> — Select this to enable this download function.
		Disable — Select this to disable this download function.

☐ Setting up Default Raw Job Setting


In Default Raw Job Setting, you can specify the default raw job setting, which applies to a raw job for which no queue name is specified or for which a specified queue name does not exist.

Note

This setting is available only for some models.

Tip

You can also add LPR queue names and specify the raw job setting for each queue. P.263 "Setting up Raw Job Setting"

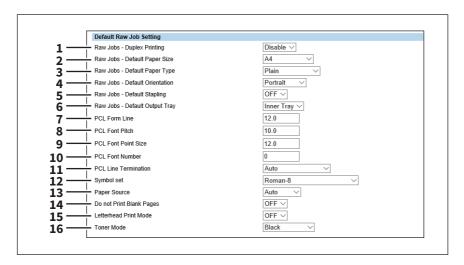

	Item name	Description
1	Raw Jobs - Duplex Printing	Select whether a raw job will be printed on both sides of the paper.
2	Raw Jobs - Default Paper Size	Select the default paper size that applies to a raw job.
3	Raw Jobs - Default Paper Type	Select the default paper type that applies to a raw job.
4	Raw Jobs - Default Orientation	Select the default orientation that applies to a raw job.
5	Raw Jobs - Default Stapling *1	Select whether a raw job will be stapled.
6	Raw Jobs - Default Output Tray *1	Select the default output tray that applies to a raw job. A banner page that is created by NetWare, UNIX, and Windows operating systems also will be outputted to the tray set here.
7	PCL Form Line	Enter the point size of line spacing. (12.00 makes 6 lines/inch)
8	PCL Font Pitch	Enter the font pitch when the selected font number represents a fixed pitch scalable font. The font pitch indicates the number of ANK characters per inch. 10 pitch prints 10 ANK characters within an inch.
9	PCL Font Point Size	Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.
10	PCL Font Number	Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Refer to the Specifications Guide for the font number and internal PCL fonts.
11	PCL Line Termination	Select the type of the line termination.
12	Symbol set	Select the symbol set that applies to a raw job.
13	Paper Source	Select the paper source that applies to a raw job.

	Item name	Description
14	Do not Print Blank Pages	Select whether blank pages are printed or not.
	print blank pages in these print	ng the UNIX filters or CUPS, this setting is not reflected. If you do not want to ings, enable [Do not Print Blank Pages] in the UNIX filter command or CUPS ions, refer to the Software Installation Guide or Printing Guide .
15	Letterhead Print Mode	Select whether the last page (odd page number) is printed on the same side as the other odd-number pages when printing both sides of a Raw print job whose total page number is odd. Select [ON] to print the last page on the same side (back) as the other odd-number pages. Select [OFF] to print it on the same side (front) as even-number pages.
	Note This item is available only for so	

 
^{*1} This function is not available for some models.

☐ Setting up Raw Job Setting

In Raw Job Setting, you can add up to 16 LPR queue names and specify the raw job setting for each queue. These queue names can be used when printing without a printer driver, such as printing from UNIX workstation.


Note

This setting is available only for some models.



	Item name	Description
1	[Add] button	Select this to add a LPR queue. P.264 "[Add New LPR Queue] screen"
2	[Edit] button	Select this to edit the LPR queue selected in the LPR queue list. P.264 "[Add New LPR Queue] screen"
3	[Delete] button	Select this to delete the LPR queue selected in the LPR queue list.
4	LPR queue list	Select this to display the list of registered LPR queues.

[Add New LPR Queue] screen

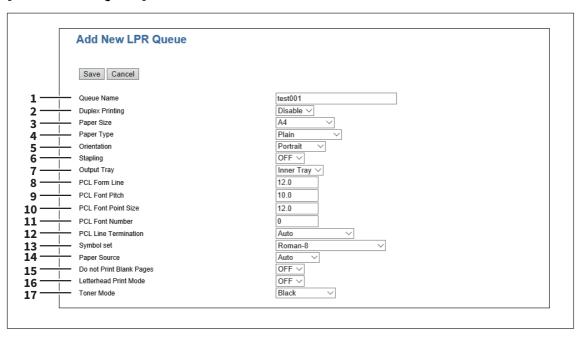

	Item name	Description
1	Queue Name	Enter the queue name with up to 31 alphanumerical characters. The queue name is case sensitive so that "Queue1" and "queue1" will be added as different queues.
2	Duplex Printing	Select whether a raw job will be printed on both sides of the paper.
3	Paper Size	Select the default paper size that applies to a raw job.
4	Paper Type	Select the default paper type that applies to a raw job.
5	Orientation	Select the default orientation that applies to a raw job.
6	Stapling *1	Select whether a raw job will be stapled.
7	Output Tray *1	Select the default output tray that applies to a raw job. A banner page that is created by NetWare, UNIX, and Windows operating systems also will be outputted to the tray set here.
8	PCL Form Line	Enter the number of lines printed per page.
9	PCL Font Pitch	Enter the font pitch when the selected font number represents a fixed pitch scalable font. The font pitch indicates the number of ANK characters per inch. 10 pitch prints 10 ANK characters within an inch.
10	PCL Font Point Size	Enter the font size when the selected font number represents a proportionally spaced scalable font. The Font Size option allows you to determine the point size (height) of the default font.
11	PCL Font Number	Enter the font number of the internal PCL font to be used as the default font for printing. You can check the font numbers and internal PCL fonts in the Internal PCL Font List. Refer to the Specifications Guide for the font number and internal PCL fonts.
12	PCL Line Termination	Select the type of the line termination.
13	Symbol set	Select the symbol set that applies to a raw job.
14	Paper Source	Select the paper source that applies to a raw job.

	Item name	Description
15	Do not Print Blank Pages	Select whether blank pages are printed or not.
	print blank pages in these print	ng the UNIX filters or CUPS, this setting is not reflected. If you do not want to ings, enable [Do not Print Blank Pages] in the UNIX filter command or CUPS ions, refer to the Software Installation Guide or Printing Guide .
16	Letterhead Print Mode	Select whether the last page (odd page number) is printed on the same side as the other odd-number pages when printing both sides of a Raw print job whose total page number is odd. Select [ON] to print the last page on the same side (back) as the other odd-number pages. Select [OFF] to print it on the same side (front) as even-number pages.
	Note This item is available only for so	ome models.

^{*1} This function is not available for some models.

■ Print Service settings

You can configure such print services as Raw TCP Print, LPD Print, IPP Print, FTP Print, NetWare Print, Email Print, and Multi Station Print.

- P.266 "Setting up Raw TCP Print"
- P.267 "Setting up LPD Print"
- P.267 "Setting up IPP Print"
- P.269 "Setting up FTP Print"
- P.269 "Setting up NetWare Print"
- P.270 "Setting up Email Print"
- P.270 "Setting up USB Cable Print"
- P.271 "Setting up Multi Station Print"

The [Print Service] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

 
- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

☐ Setting up Raw TCP Print


In Raw TCP Print, you can enable or disable the Raw TCP print service.



	Item name	Description
1	Enable Raw TCP	Enable or disable Raw TCP print service. [Enable] is set as the default.
2	Port Number	If enabling the Raw TCP, enter the Raw TCP port number for the Raw TCP print. You can enter a value in the range from 1024 to 32767. Generally the default value "9100" is used.
	When the same port number as the secondary one in the HTTP setting (SSL/TLS port number when SSL/TLS in the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing web utility. If you set it by mistake, use the touch panel of the equipment to change the HTTP setting and enter the correct port number.	
3	Enable Raw bi-directional	Enable or disable Raw bi-directional communication. [Disable] is set as the default.
	Note This item is available only for s	some models.

☐ Setting up LPD Print

 In LPD Print, you can set the LPD print options to enable the LPD/LPR print service.



	Item name	Description
1	Enable LPD	Enable or disable LPD print service. [Enable] is set as the default.
2	Port Number	Enter the port number for LPR printing. You can enter a value in the range from 1 to 65535. Generally the default value "515" is used.
When the same port number as the secondary one in the HTTP setting (SSL/TLS port number the HTTP setting is enabled) is selected, you cannot access TopAccess or the e-Filing we mistake, use the touch panel of the equipment to change the HTTP setting and enter the		selected, you cannot access TopAccess or the e-Filing web utility. If you set it by
3	Banners	Select whether to print a banner page for each print job using LPR printing. [OFF] is set as the default.
	Note This item is available only for s	ome models

☐ Setting up IPP Print

In IPP Print, you can set the IPP Print options to enable the IPP print service.




	Item name	Description
1	Enable IPP	Enable or disable the IPP print service. [Enable] is set as the default.
2	Port80 Enable	Enable or disable Port80 for IPP printing. Port631 is usually used for IPP access so users must specify the IPP port to the URL, i.e. "http:// <ip address="" dns="" name="" or="">:631/Print", for the IPP port. When this is enabled, this equipment allows IPP access through the Port80, which is the default port for the HTTP access so users do not have to specify the port number in the IPP port, i.e. "http://<ip address="" dns="" name="" or="">/Print". [Disable] is set as the default.</ip></ip>

	Item name	Description
3	Port Number	If enabling the IPP, enter the IPP port number. You can enter a value in the range from 1 to 65535. Generally the default value "631" is used.
	Note	
	-	ones for the following settings are not usable.
		mber before that for the Port Number is set.
	HTTP Network Service / PrimHTTP Network Service / Seco	
	HTTP Network Service / SSL/	-
4	URL	Display the URL for IPP printing. You cannot change the URL for IPP printing. This URL should be set as the print port when users set up the printer driver for IPP printing.
5	Enable SSL/TLS	Enable or disable SSL/TLS for IPP printing. [Enable] is set as the default.
	Tip	
	print port using the SSL/TLS, https:// <ip address="">:<ssl tl<br="">Example: https://192.168.53.</ssl></ip>	204:443/Print
6	SSL/TLS Port Number	oport SSL/TLS for all protocols. Enter the port number for SSL/TLS. You can enter a value in the range from 1
	33L/TL3T OF ENUMBER	to 65535. Generally the default value "631" is used.
	Change the applicable port nur • HTTP Network Service / Prim	•
	HTTP Network Service / SecoHTTP Network Service / SSL/	•
7	SSL/TLS URL	Display the SSL/TLS URL for IPP printing. You cannot change the SSL/TLS URL for IPP printing. This SSL/TLS URL should be set as the print port when users set up the printer driver for IPP printing if the SSL/TLS for IPP printing is enabled.
8	Printer Name	Enter the printer name for IPP printing. You can enter up to 127 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash). The MFP name is set as the default.
9	Authentication	Enable or disable the authentication for creating the IPP queue on the client computers. When this is enabled, the dialog box to enter a user name and password will be displayed when a user creates the IPP print port.
		• Disable — Select this to disable the authentication.
		Basic — Select this to enable the authentication.
	Note	
		rinting from the Mac OS printer driver (PPD), do not enable the authentication.) does not support the authentication for IPP printing.
10	User Name	Enter the user name when the Authentication option is enabled. Users must enter this user name to create an IPP queue on the client computers. You can enter up to 127 alphanumerical characters and symbols other than =,; (semicolon), #, @, and \ (backslash).

	Item name	Description
11	Password	Enter the password when the Authentication option is enabled. Users must enter this password to create an IPP queue on the client computers. You can enter up to 127 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash). "password" is set as the default.

☐ Setting up FTP Print

 
In FTP Print, you can set the FTP Print options to enable the FTP print service.



	Item name	Description
1	Enable FTP Printing	Enable or disable FTP print service. [Disable] is set as the default.
2	Print User Name	Enter the user name if you want to request the log-in user name from someone who attempts FTP printing. You can enter up to 31 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash). If you leave this box blank, the default user name "Print" is used.
3	Print Password	Enter the password if you want to request the log-in password of users who attempt FTP printing. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \ (backslash).

☐ Setting up NetWare Print

 
In NetWare Print, you can set the NetWare print options to enable the Novell print service.



	Item name	Description
1	Print Server Name	Enter the print server name that is created in the NetWare file server. You can enter up to 47 alphanumerical characters and symbols other than =,; (semicolon), #, and \ (backslash). The MFP name is set as the default.
2	2 Password	Enter the password that is set to the print server, if required. You can enter up to 31 alphanumerical characters and symbols other than =, ; (semicolon), #, and \setminus (backslash).
3	Print Queue Scan Rate	Enter how frequently to scan the print queues for print jobs. This should be entered in seconds. You can enter between 1 to 255. "30" is set as the default.

☐ Setting up Email Print

In Email Print, you can set how the E-mail print jobs are printed.

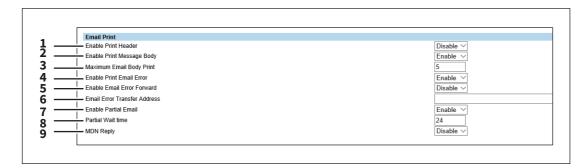

	Item name	Description
1	Enable Print Header	Select whether to print the E-mail header when receiving E-mail print jobs. [Disable] is set as the default.
2	Enable Print Message Body	Select whether to print the body message when receiving E-mail print jobs. [Enable] is set as the default.
3	Maximum Email Body Print	Enter the maximum number of pages to print the body strings of the received E-mail print job. You can enter between 1 to 99. "5" is set as the default.
4	Enable Print Email Error	Select whether to print the report when an error occurs for E-mail printing. [Enable] is set as the default.
5	Enable Email Error Forward	Select whether to send an error message to an administrative E-mail address when E-mail printing cannot be completed. [Disable] is set as the default.
6	Email Error Transfer Address	If enabling the Email Error Forward, enter an administrative E-mail address where the error message is sent. You can enter up to 192 alphanumerical characters and symbols other than =, ; (semicolon) , #, and \ (backslash).
7	Enable Partial Email	Select whether to print E-mail jobs that are partially received. [Enable] is set as the default.
8	Partial Wait time	Enter how long this equipment should wait before printing a partial E-mail job. Specify within the range from 1 to 168 hours. "24" is set as the default.
9	MDN Reply	Select whether to send an MDN message reply or not when the equipment receives an E-mail print job with an MDN request. [Disable] is set as the default.

☐ Setting up USB Cable Print



	Item name	Description
1	USB Cable Print Mode	Select the mode used for printing via a USB connection. IPP Over USB — Normally use this mode. Legacy USB (Win) — Use this mode when you are already using our MFPs and want to grant priority to the compatibility with them.

☐ Setting up Multi Station Print


For the operation of the setting, see the following. P.435 "Setting Multi Station Print"

Note

You need the Multi Station Print Enabler option to use the [Multi Station Print] function. Contact your service technician for details.

Tip

- Use this service in an environment where the number of PCs to connect to 1 MFP is 30 or less.
- You can connect up to 10 MFPs in a group and connect up to 5 groups including a group to which this MFP belongs: you can add 4 groups for the connection.

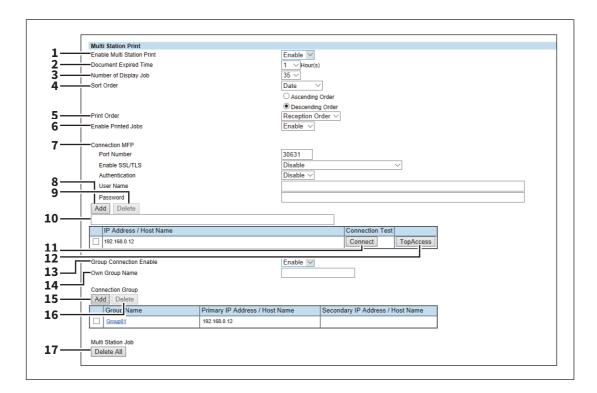

	Item name	Description
1	Enable Multi Station Print	Specify whether to enable or disable the Multi Station Print service.
2	Document Expired Time	Specify the retention period of the printed document.
3	Number of Display Job	Specify the number of jobs to be displayed.
4	Sort Order	Specify the display order.
5	Print Order	Specify the print order.
	Tip When you select [Indication Ordinated setting at the item 4.	der] from [Print Order], documents are printed according to the [Sort Order]
6	Enable Printed Jobs	Specify whether to enable or disable reprinting.

	Item name	Description
7	Connection MFP	Specify the following communication settings for the multi station print.
		• Port Number — Enter the port number.
		• Enable SSL/TLS — Select the SSL/TLS setting for the multi station print.
		 <u>Disable</u> — Select this to disable SSL/TLS. Verify with imported CA certification(s) — Select this to use CA certificates for connection. You need to export the certificate from each MFP and import it into all MFPs. Accept all certificates without CA — Select this to accept all certificates without CA. There is no need to import the certificate of each MFP.
		• Authentication — Select [Disable] or [Basic] for authentication. [Disable] is set as the default.
		• User Name — Enter the user name. You can enter up to 127 alphanumerical
		characters and symbols except = ; # @ \.
		• Password — Enter the password of the user. You can enter up to 127
		alphanumerical characters and symbols except = ; # \.
	Note	
	Tip Although the multi station pri connected to other MFPs: the	nt is available even if the user authentication is disabled, this MFP cannot be job list is not shared.
8	[Add] button	Allows you to add the device to connect.
9	[Delete] button	Allows you to delete the selected device.
10	Connection MFP entry field	Enter the IP address or host name of the MFP you want to register.
	Tip If the user authentication is di [Connection MFP] settings are	isabled with more than one address registered in the [Connection MFP] list, the enot displayed.
11	[Connect] button	Tests the connection with the specified MFP to check if the communications can be established.
	Note Be sure to save the Multi Stati the [Connect] button.	on Print settings with the [Save] button before you test the MFP connection with
12	[TopAccess] button	Starts TopAccess.
13	Group Connection Enable	Select whether to connect the MFP groups. [Disable] is set as the default.
14	Own Group Name	Enter a group name to which this MFP belongs. You can enter up to 12 characters.
	Note All groups should share the sa	ame name of each group for the connection.

	Item name	Description
15	[Add] button	Allows you to add a group. Click this button to show the [Add Connection Group Information] screen. Set the following information and click [Save] to save the settings. To edit the information, click the name of the group added in the list.
		Group Name — Enter the name of the connection group. You can enter up
		to 12 characters.
		• Primary IP Address / Host Name — Enter the IP address or host name of the
		primary device which represents the connection group. You can enter up to
		256 characters. This device accesses the specified primary device first to
		retrieve the job list.
		• Secondary IP Address / Host Name — Enter the IP address or host name of
		the secondary device which represents the connection group. You can enter
		up to 256 characters. If the access to the primary device fails, this device
		accesses the specified secondary device next to retrieve the job list.
16	[Delete] button	Allows you to delete the selected group.
17	[Delete All] button	Deletes all of the multi station print jobs.

■ ICC Profile settings

You can set up profiles used in printing functions.

- P.274 "Setting up RGB Source Profile"
- P.274 "Setting up CMYK Source Profile"
- P.275 "Setting up Destination Profile"
- P.275 "Setting up Customized RGB Profile"

Note

This setting is available only for some models.

 
The [ICC Profile] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

☐ Setting up RGB Source Profile


Select an input profile to be used for RGB color space conversion when you print RGB data.



	Item name	Description
1	Default Profile	Select an RGB source profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among the RGB source profiles already registered in this equipment.
2	[Maintenance] button	Click this to perform maintenance of RGB source profiles. The Maintenance RGB Source Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following: P.299 "Importing profiles" P.300 "Exporting profiles" P.301 "Deleting profiles"

☐ Setting up CMYK Source Profile

 Select an input profile to be used for CMYK color space conversion when you print CMYK data.




	Item name	Description
1	Default Profile	Select an CMYK source profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among CMYK source profiles already registered in this equipment.

	Item name	Description
2	[Maintenance] button	Click this to perform maintenance of CMYK source profiles. The Maintenance CMYK Source Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following: P.299 "Importing profiles" P.300 "Exporting profiles" P.301 "Deleting profiles"

☐ Setting up Destination Profile


Select an output profile to be used for color space conversion when you print color data.

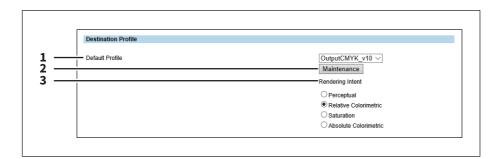

	Item name	Description
1	Default Profile	Select a destination profile to be displayed as a default setting of the color profile setting of a printer driver. You can select among destination profiles already registered in this equipment.
2	[Maintenance] button	Click this to perform maintenance of destination profiles. The Maintenance Destination Profile page is displayed as you click this. You can import profiles into this equipment, or export or delete the registered profiles. For the details, see the following: P.299 "Importing profiles" P.300 "Exporting profiles" P.301 "Deleting profiles"
3	Rendering Intent	Select from [Perceptual], [Relative Colorimetric], [Saturation], and [Absolute Colorimetric] for the Rendering Intent of the Destination Profile.

☐ Setting up Customized RGB Profile

 Contact your service technician for details on Customized RGB Profile.



	Item name	Description
1	Default Profile	Specify the Customized RGB Profile to be displayed as the default for the color profile setting of the printer driver when printing. You can select from the Customized RGB Profiles registered in this equipment.

	Item name	Description
2	[Maintenance] button	Click this button when maintaining the Customized RGB Profile. When you click, the Customized RGB Profile maintenance page is displayed that allows you to import the profile into this equipment, or delete the registered profiles. See the following for details. P.299 "Importing profiles" P.300 "Exporting profiles" P.301 "Deleting profiles"

■ Print Data Converter settings

For the details of the print data converter, contact your service technician.

Tip

The [Print Data Converter] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

P.15 "Access Policy Mode"

P.165 "[Setup] Item List"



	ltem name	Description
1	Print Data Converter	Select whether the print data converter function is enabled or disabled. You cannot enable the function if the converter setting file has not been imported.
2	Import New Converter	Import the converter setting file.
	Tip Click the [Browse] button to s Check the file name and click th	elect the file to import and click [Open]. ne [Import] button.
3	Current Converter	Display the imported converter setting file.

■ Embedded Web Browser settings

You can set the EWB (Embedded Web Browser) function to display a web page on the touch panel.

- P.277 "Setting up Home Page Setting"
- P.277 "Setting up Proxy Setting"
- P.278 "Setting up EWB History Setting"
- P.278 "Setting up Server Registration Setting"
- P.279 "Setting up URL List for Home screen"
- P.279 "[Add New URL] screen"

Tip

The [EWB] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

Note

- The External Interface Enabler is required to use the EWB (Embedded Web Browser) function.
- This setting is available only for some models.
- When an error page appears due to a network failure while being connected to the internet, this may continue to be displayed even after recovery has taken place. In that case, reboot the equipment.

☐ Setting up Home Page Setting

You can specify the home page for the EWB function.



	Item name	Description
1	Home Page	Enter the URL of the home page.
2	Enforcement automatic screen change	Specify whether or not the screen is automatically changed to [JOB STATUS] when a job cannot be performed due to paper empty or toner empty, etc. while the EWB screen is displayed.
		• Enable — Select this to change the screen to [JOB STATUS].
		• Disable — Select this not to change the screen.

■ Setting up Proxy Setting

You can set the proxy for the EWB function.



		ltem name	Description
1	L	Host Name	Enter the host name of the proxy server.

	Item name	Description
2	Port Number	Enter the port number of the proxy server.
3	Exception URL	Enter URLs which do not use the proxy server delimited with a semicolon (;).
4	Use automatic configuration script	Enable or disable the automatic configuration script.
5	URL	Specify the location of the PAC file by URL for the automatic configuration script.

Note

Note the following points for the PAC file.

- Be sure to enter the protocol.
- Do not use functions.

☐ Setting up EWB History Setting


You can set the history conditions for the EWB function.



	Item name	Description
1	EWB History	Specify whether to restrict the size of the recorded history information. The size is restricted to 100MB if you restrict.

☐ Setting up Server Registration Setting


You can register the address of the server used for the EWB function.

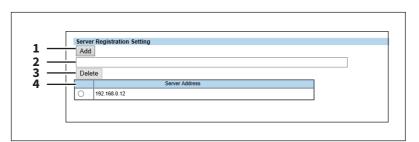

	Item name	Description
1	[Add] button	Registers the server address entered in the entry column into the list.
2	Entry column	Enter the server address.
3	[Delete] button	Deletes the selected server address from the list.
4	Server Address list	Lists the registered server addresses.

☐ Setting up URL List for Home screen

 You can register URLs to be displayed in the Home screen on the touch panel.



	Item name	Description
1	[Add] button	Registers a URL to be displayed on the touch panel. P.279 "[Add New URL] screen"
2	[Delete] button	Deletes the URL that you have selected from the URL list for Home screen.
3	URL list	Lists URLs which are displayed on the touch panel.

☐ [Add New URL] screen



	Item name	Description
1	[Save] button	Registers the entered URL name and URL.
2	[Cancel] button	Cancels adding a URL.
3	URL Name	Enter the URL name to be registered.
4	URL	Enter the URL to be registered.
5	Enforcement automatic screen change	Specify whether or not the screen is automatically changed to [JOB STATUS] when a job cannot be performed due to paper empty or toner empty, etc. while the EWB screen is displayed.

■ Off Device Customization Architecture settings

Set ODCA (Off Device Customization Architecture) when you are linking external application software to services provided by this equipment.

For details, refer to the application software manual.

- P.280 "Setting up Network"
- P.280 "Setting up Configuration"
- P.280 "Notification Events"


Tip

The [ODCA] submenu can be accessed from the [Setup] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Setup] menu:


- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

■ Setting up Network

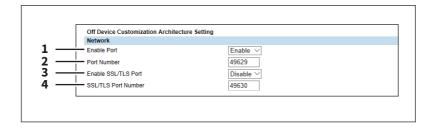


	Item name	Description
1	Enable Port	Select whether the external connection is enabled or disabled.
2	Port Number	Specify the port number where the external connection is enabled.
3	Enable SSL/TLS Port	Select whether SSL/TLS is enabled or disabled for the external connection.
4	SSL/TLS Port Number	Specify the SSL/TLS port number where the external connection is enabled.

 Setting up Configuration



	Item name	Description
1	Session Timeout(60-99999)	Specify the duration to maintain the connection.

 ■ Notification Events



	Item name	Description
1	[Delete All] button	Deletes all notification events registered with external application software.


■ Version

The screen displays version information, depending on the model.

Tip

The [Version] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"

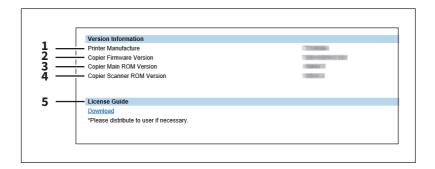

	Item name	Description
1	Printer Manufacture	Displays the manufacturer name of your equipment.
2	Copier Firmware Version	Displays the firmware version of your equipment.
3	Copier Main ROM Version	Displays the main ROM version information of your equipment.
4	Copier Scanner ROM Version	Displays the copier scanner ROM version information of your equipment.
5	License Guide	The License Guide can be downloaded.

[Setup] How to Set and How to Operate

This section describes how to set up the equipment using TopAccess. P.282 "Setting up General settings" P.284 "Setting up Network settings" P.285 "SNMP V3 settings" P.288 "Setting up Copier settings" P.289 "Setting up Fax settings" P.290 "Setting up Save as file settings" P.292 "Setting up E-mail settings" P.293 "Setting up InternetFax settings" P.294 "Setting up Printer/e-Filing settings" P.295 "Setting up Printer settings" P.297 "Setting up Print Service settings" P.298 "Setting up ICC Profile settings" P.302 "Setting up Print Data Converter settings" P.303 "Configuring the EWB function" P.304 "Setting up Off Device Customization Architecture settings" P.305 "Displaying version information"

Note

The paper size for each drawer cannot be set from TopAccess. Set from the touch panel of the equipment. For instructions on how to set the paper size for each drawer, refer to the **Paper Preparation Guide**.

Setting up General settings


You can configure general settings such as Device Information, Energy Save, Date & Time, and Web General Setting from the [General] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


Setting the General settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [General] submenu.

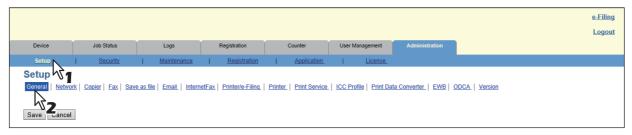

The General submenu page is displayed.

In the General submenu page, set the General settings as required. 4

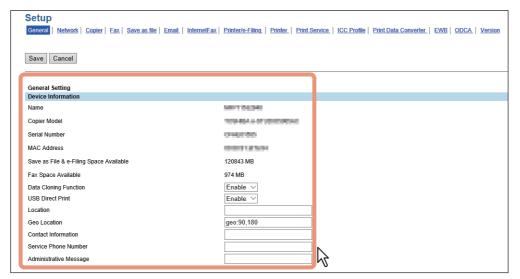

You can set the following in this page.

- P.166 "Setting up Device Information"
- P.167 "Setting up Functions"
- P.168 "Long File Name Setting"
- P.168 "Setting up e-Filing Notification Events"
- P.168 "Setting up Job Skip Control"
- 🖳 P.169 "Setting up Restriction on Address Book Operation by administrator / AddressbookRemoteOperator"
- P.169 "Restriction of Destination Selection Method"
- P.169 "Setting up Confidentiality Setting"
- P.170 "Setting up Energy Save"
- P.173 "Shutdown Setting"
- P.173 "Setting up Date & Time"
- P.174 "Setting up SNTP Service"
- P.174 "Setting up Daylight Savings Time Setting"
- P.175 "Setting up WEB General Setting"
- P.175 "Home Setting"
- P.177 "Assignment for Programmable Button"
- P.177 "OCR Setting"
- P.178 "PDF/A Fileformat Setting"

Click [Save].

The confirmation dialog box appears.



When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

 
Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

Setting up Network settings


You can configure TCP/IP, Filtering, IPX/SPX, AppleTalk, Bonjour, LDAP, SMB, NetWare, HTTP, SMTP Client, SMTP Server, POP3, SNTP Settings, FTP Client, FTP Server, SNMP, Security Setting, and others from the [Network] submenu under the [Setup] menu.

- Setting the network settings
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Network] submenu.



The Network submenu page is displayed.

In the Network submenu page, click link or scroll the page to find the setting table, and click the function name of the setting to set the network settings as required.

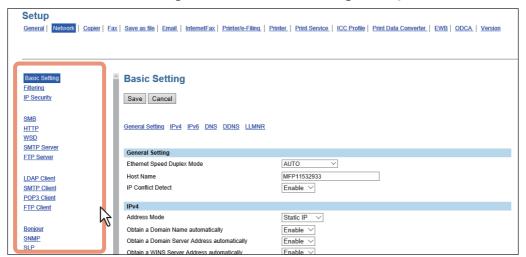

You can set the following in this page.

- P.180 "Basic Setting"
- P.188 "Setting up Filtering"
- P.189 "Setting up IP Security"
- P.201 "Setting up SMB"
- P.205 "Setting up HTTP"
- P.206 "Setting up WSD"
- P.208 "Setting up SMTP Server"
- P.209 "Setting up FTP Server"
- P.210 "LDAP Client settings"
- P.214 "Setting up SMTP Client"
- P.216 "Setting up POP3 Client"
- P.218 "Setting up FTP Client"
- P.219 "Setting up Bonjour"
- P.220 "Setting up SNMP"
- P.223 "Setting up SLP"
- P.224 "Setting up LLTD"
- P.224 "Syslog Setting"
- P.225 "Setting up IPX/SPX"
- P.226 "Setting up NetWare"

- P.226 "Setting up AppleTalk"
- P.227 "VNC Setting"

Click [Save].

The confirmation dialog box appears.

Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

This equipment starts initializing the network interface card to apply the changes.

Note


During the initialization of the network interface card, the network will not be available. A message is displayed to inform you that it will reconnect to TopAccess after a while. Also, the touch panel on this equipment displays a message to inform you that the network is not ready. When this message disappears, TopAccess will once again be available.

■ SNMP V3 settings

- P.285 "Registering or editing SNMP V3 user information"
- P.286 "Exporting SNMP V3 user information"
- P.287 "Deleting SNMP V3 user information"


☐ Registering or editing SNMP V3 user information

- Click the [SNMP] from the [Network] submenu under the [Setup] menu. 1
- Click [New] to create new SNMP V3 user information, or click the desired user name on the list to edit SNMP V3 user information already registered.

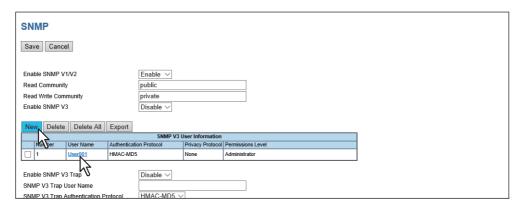

The Create SNMP V3 User Information page is displayed.

Specify the following items and click [Save]. 3

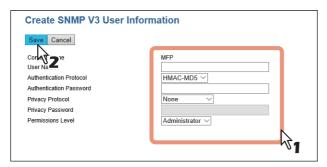

You can set the following in this page.

P.222 "[Create SNMP V3 User Information] screen"

The Create SNMP V3 User Information page is closed and the newly created user information is registered on the SNMP V3 user information list.

The confirmation dialog box appears.


Tip

Clicking [Save] on the [Create SNMP V3 User Information] screen instantly registers the SNMP V3 user information, enabling the registered user to access this equipment via SNMP over a network.

The specified or modified content is registered.

■ Exporting SNMP V3 user information

- Click the [SNMP] from the [Network] submenu under the [Setup] menu.
- Select the check box of SNMP V3 user information that you want to export from the corresponding list, and then click [Export].

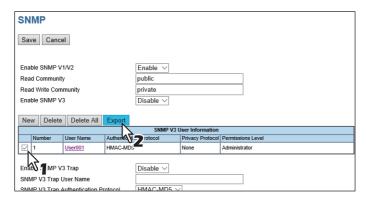


The Export page is displayed.

Note


If a message to prompt you to save the network setting is displayed, click [Save] on the Network submenu page, and then export.

 Click the link for the file name of user information to be exported.



The file is downloaded.

Close the Export SNMP V3 User Information page. 4

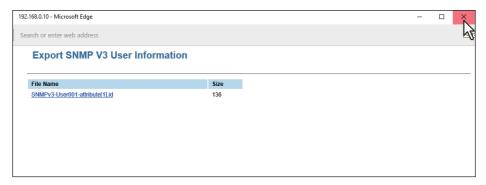

Note


The export operation may be unstable if administrators are accessing this equipment from multiple computers simultaneously in the access policy mode to export information. Be sure that the administrator accesses this equipment from only one computer when exporting.

□ Deleting SNMP V3 user information

- Click the [SNMP] from the [Network] submenu under the [Setup] menu.
- Select the check box of SNMP V3 user information that you want to delete from the SNMP V3 user information list, and then click [Delete].

Tip

Click [Delete All] to delete all the SNMP V3 user information.

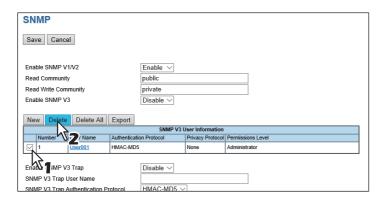

The confirmation dialog box appears.

Click [OK].

The SNMP V3 user information is deleted.

Setting up Copier settings

You can configure copy operation settings from the [Copier] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


Setting the copier setting

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Copier] submenu.



The Copier submenu page is displayed.

In the Copier submenu page, set the copier settings as required.

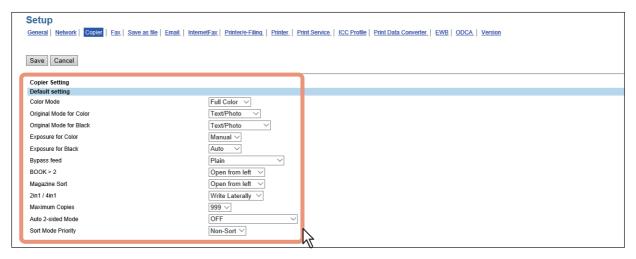

You can set the following in this page.

- P.228 "Setting up Default setting"
- P.231 "Setting up Copy Job Enforcement Continue"

Click [Save].

The confirmation dialog box appears.

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

■ Setting up Fax settings

You can configure the fax device and fax operation settings from the [Fax] submenu under the [Setup] menu.

Note

- Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.
- The [Fax] submenu in the [Setup] menu is available only when the Fax Unit is installed.


Setting the fax settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Fax] submenu.



The Fax submenu page is displayed.

In the Fax submenu page, set the fax settings as required.

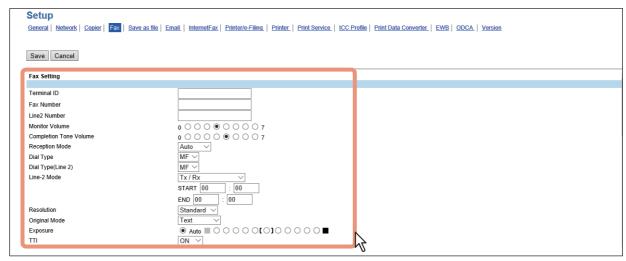

You can set the following in this page.

P.232 "Setting up Fax Setting"

Click [Save].

The confirmation dialog box appears.

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

■ Setting up Save as file settings

You can configure file saving operations and the Save as File function by the N/W-Fax driver from the [Save as file] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


☐ Setting the Save as file settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Save as file] submenu.



The Save as file submenu page is displayed.

In the Save as file submenu page, set the Save as file settings as required.

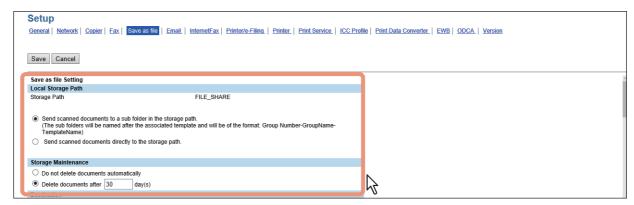

You can set the following in this page.

- P.238 "Setting up Local Storage Path"
- P.239 "Setting up Storage Maintenance"
- P.239 "Setting up Destination"
- P.240 "Setting up Folder Name"
- P.240 "Setting up Format"
- P.241 "Setting up Single Page Data Saving Directory"
- P.242 "Setting up File Composition"
- P.242 "Setting up User Name and Password at User Authentication for Save as File"
- P.243 "Setting up Searching Interval"
- P.243 "Setting up Remote 1 and Remote 2 Settings"
- P.247 "Setting up N/W-Fax Destination"
- P.247 "Setting up N/W-Fax Folder"

Click [Save].

The confirmation dialog box appears.

Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

When using Internet Explorer, the changes may not be reflected on the Save as file page immediately after changing the settings and clicking [Save]. If that happens, click the [Save as file] submenu to refresh the page.

■ Setting up E-mail settings


You can configure E-mail transmission operations from the [E-mail] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


Setting the E-mail settings

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Email] submenu.

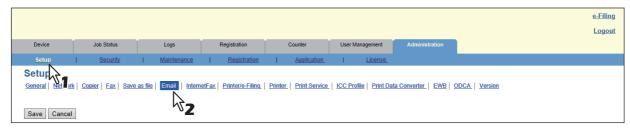

The Email submenu page is displayed.

In the Email submenu page, set the E-mail settings as required.

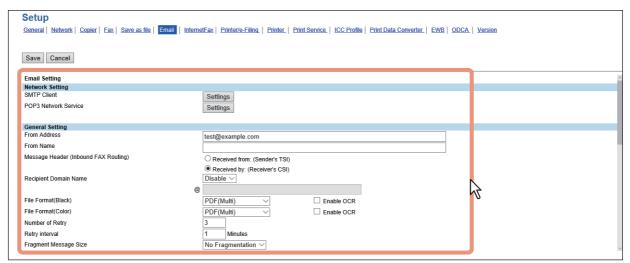

You can set the following in this page.

P.249 "Email settings"

Click [Save].

The confirmation dialog box appears.



When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

Setting up InternetFax settings

You can configure Internet Fax operations from the [InternetFax] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


Setting the Internet Fax settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [InternetFax] submenu.



The InternetFax submenu page is displayed.

In the InternetFax submenu page, set the Internet Fax settings as required.

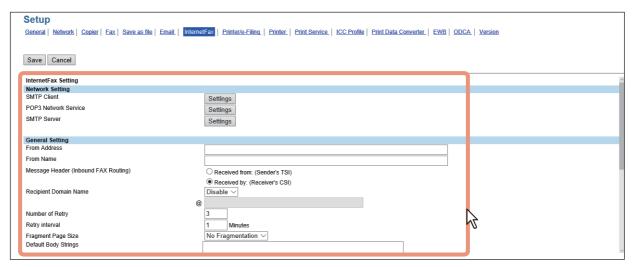

You can set the following in this page.

P.255 "Setting up InternetFax Setting"

Click [Save].

The confirmation dialog box appears.



When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

Setting up Printer/e-Filing settings

You can configure how to continue print jobs and e-Filing jobs from the [Printer/e-Filing] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an time period.

Setting the Printer/e-Filing settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Printer/e-Filing] submenu.



The Printer/e-Filing submenu page is displayed.

In the Printer/e-Filing submenu page, set the Printer/e-Filing settings as required.



You can set the following in this page.

P.258 "Setting up Printer/e-Filing Job Enforcement Continue"

Click [Save].

The confirmation dialog box appears.

Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.


Setting up Printer settings

You can configure printer operations and printer options for RAW print jobs from the [Printer] submenu under the [Setup] menu.

P.296 "Setting up Raw Job Setting"


Setting the Printer settings

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Printer] submenu.

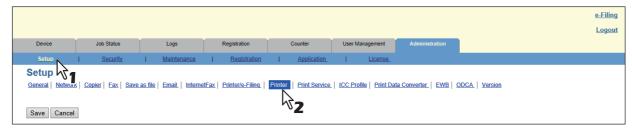

The Printer submenu page is displayed.

In the Printer submenu page, set the Printer settings as required.

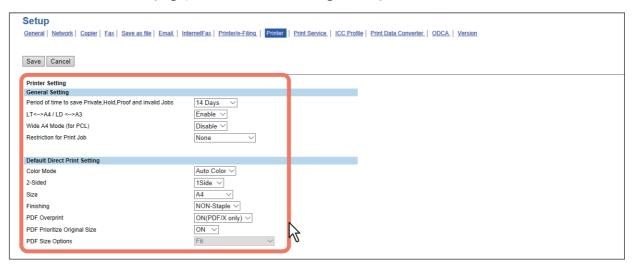

You can set the following in this page.

- P.259 "Setting up General Setting"
- P.260 "Setting up Default Direct Print Setting"
- P.261 "Setting up Driver Customization Packages Setting"
- P.262 "Setting up Default Raw Job Setting"
- P.263 "Setting up Raw Job Setting"

Click [Save].

The confirmation dialog box appears.

Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

 
☐ Setting up Raw Job Setting

In Raw Job Setting, you can add up to 16 LPR queue names and specify the raw job setting for each queue. These queue names can be used when printing without a printer driver, such as printing from UNIX workstation. You can add, edit, or delete an LPR queue.

- P.296 "Adding or editing an LPR queue"
- P.296 "Deleting an LPR queue"


Adding or editing an LPR queue

To add a new LPR queue, click [Add] in Raw Job Setting. To edit an existing LPR queue, select a radio button of a queue that you want to edit and click [Edit].



The Add New LPR Queue page is displayed.

Enter the following items as required.

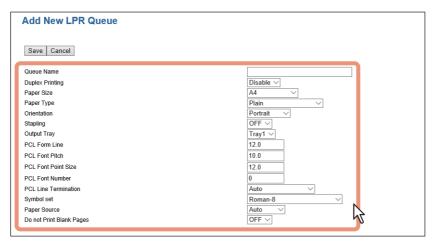


You can set the following in this page. P.263 "Setting up Raw Job Setting"

Click [Save].

The queue name is added to the list.

Deleting an LPR queue

 Select a radio button of a queue that you want to delete and click [Delete].



The confirmation dialog box appears.

Click [OK].

The selected queue is deleted.

Setting up Print Service settings


You can configure print services such as Raw TCP Print, LPD Print, IPP Print, FTP Print, NetWare Print, Email Print, and Multi Station Print from the [Print Service] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after saving them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.


Setting the Print Service settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Print Service] submenu.

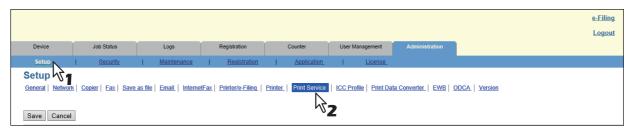

The Print Service submenu page is displayed.

In the Print Service submenu page, set the Print Service settings as required.

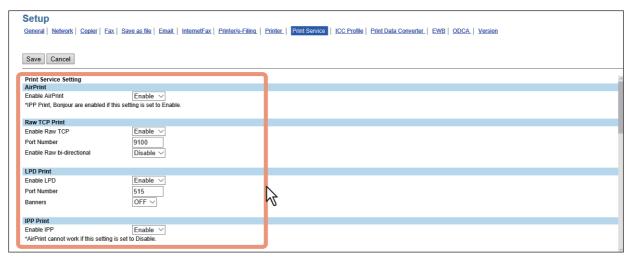

You can set the following in this page.

- P.266 "Setting up Raw TCP Print"
- P.267 "Setting up LPD Print" P.267 "Setting up IPP Print"
- P.269 "Setting up FTP Print"
- P.269 "Setting up NetWare Print"
- P.270 "Setting up Email Print"
- P.271 "Setting up Multi Station Print"

Click [Save].

The confirmation dialog box appears.

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

■ Setting up ICC Profile settings


You can configure profiles for printer functions from the [ICC Profile] submenu under the [Setup] menu. P.299 "Configuring the source profile"

Note

This setting is available only for some models.


Setting the ICC Profile settings

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [ICC Profile] submenu.

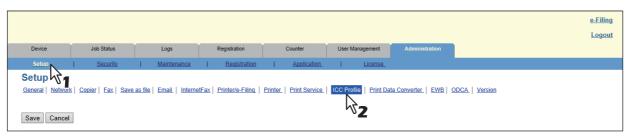

The ICC Profile submenu page is displayed.

In the ICC Profile submenu page, set the ICC Profile settings as required.

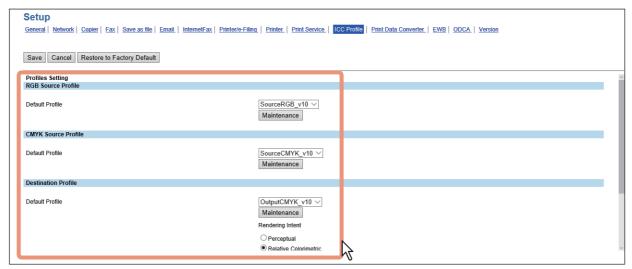

You can set the following in this page.

- P.274 "Setting up RGB Source Profile"
- P.274 "Setting up CMYK Source Profile"
- P.275 "Setting up Destination Profile"
- P.275 "Setting up Customized RGB Profile"

Click [Save].

The confirmation dialog box appears.

- When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. Click this to clear all the changes made and return the settings to the current ones.
- Click [Restore to Factory Default] to return the settings to the factory default.

Click [OK] to apply the changes.

Note


The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

☐ Configuring the source profile

- P.299 "Importing profiles"
- P.300 "Exporting profiles"
- P.301 "Deleting profiles"


Importing profiles

Click [Maintenance] of the desired profile.

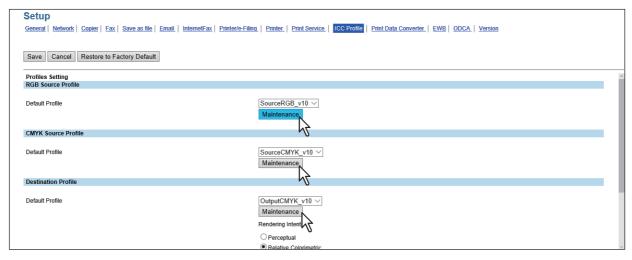


The Maintenance Profile page of the selected profile is displayed.

Click [Browse] in [Import new Profile] to select the file of the selected profile, and then click [Import].

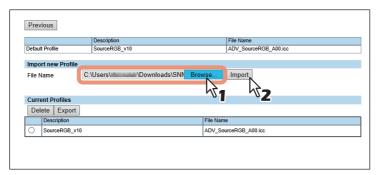

Importing starts.


The profile is imported. Click [Previous] to close the Maintenance Profile page. 3

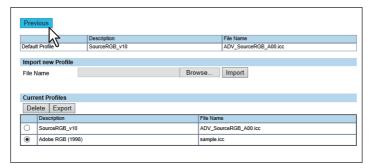

The imported profile is added to the [Current Profiles] list.


Exporting profiles

Click [Maintenance] of the desired profile. 1

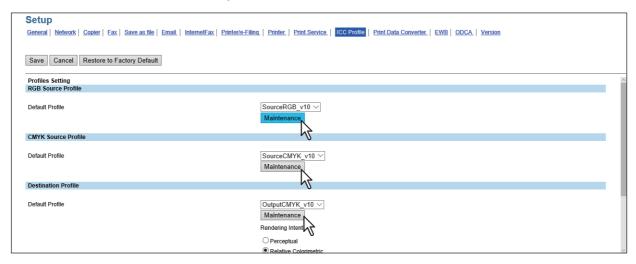

The Maintenance Profile page of the selected profile is displayed.

Select the desired profile in the [Current Profiles] list, and then click [Export].

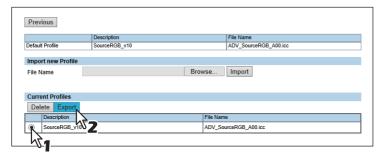


The Export page is displayed.

Note

Profiles registered as a factory default cannot be exported.

 Click the [File Name] link of a profile to be exported.




The file is downloaded.

Click [Close] to close the Export page.




Click [Previous] to close the Maintenance Profile page.

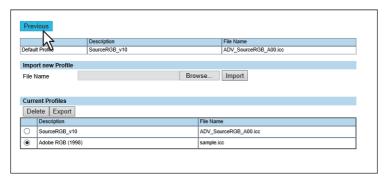


Deleting profiles

Click [Maintenance] of the desired profile. 1

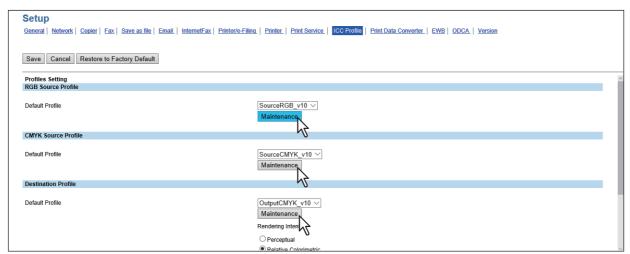

The Maintenance Profile page of the selected profile is displayed.

Select the desired profile in the [Current Profiles] list, and then click [Delete]. 2

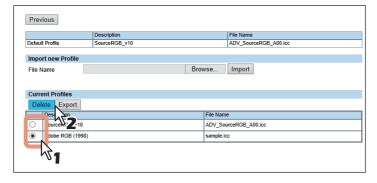

The confirmation dialog box appears.


Note

Profiles registered as a factory default cannot be deleted.

3 Click [OK].

The Profile is deleted.

▲ Click [Previous] to close the Maintenance Profile page.

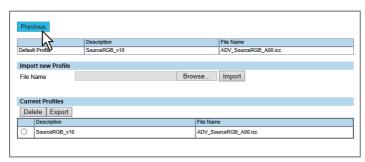

The profile is deleted from the [Current Profiles] list.

■ Setting up Print Data Converter settings

For information on Print Data Converter, contact your service technician.
You can configure Print Data Converter from the [Print Data Converter] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

- ☐ Setting the Print Data Converter settings
- 1 Start TopAccess access policy mode.

 P.15 "Access Policy Mode"
- 2 Click the [Administration] tab.
- **2** Click the [Setup] menu and [Print Data Converter] submenu.



The Print Data Converter submenu page is displayed.

In the Print Data Converter submenu page, set the Print Data Converter settings as required.



You can set the following in this page.

P.276 "Print Data Converter settings"

Click [Save].

The confirmation dialog box appears.



When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

■ Configuring the EWB function

You can configure the EWB (Embedded Web Browser) function which displays web pages on the touch panel from the [EWB] submenu under the [Setup] menu.

- P.303 "Registering a server"
- P.304 "Deleting a server"

Note

- The EWB function is available only when the External Interface Enabler is installed on this equipment.
- This setting is available only for some models.

☐ Registering a server

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [EWB] submenu.



The EWB submenu page is displayed.

To register a server for the EWB function, enter the server address and then click [Add].




The server is registered.

To register more than one server, repeat this procedure.

- Deleting a server
- Start TopAccess access policy mode.


P.15 "Access Policy Mode"

- Click the [Administration] tab.
- Click the [Setup] menu and [EWB] submenu.

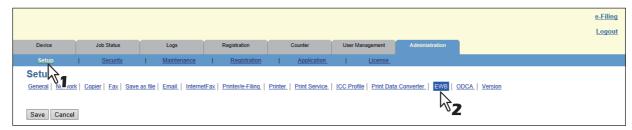

The EWB submenu page is displayed.

 To delete a server registered for the EWB function, select the server that you want to delete, and then click [Delete].



Click [OK].

The server is deleted.

Setting up Off Device Customization Architecture settings

For the details of ODCA (Off Device Customization Architecture), contact your service technician. You can configure ODCA (Off Device Customization Architecture) from the [ODCA] submenu under the [Setup] menu.

Note

Some settings may not be reflected on the touch panel immediately after changing them. The settings will be updated by pressing the [FUNCTION CLEAR] button on the control panel or after an Auto Clear time period.

- Setting the Off Device Customization Architecture settings
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [ODCA] submenu.



The ODCA submenu page is displayed.

In the ODCA submenu page, set the Off Device Customization Architecture settings as required.



You can set the following in this page.

- P.280 "Setting up Network"
- P.280 "Setting up Configuration"
- P.280 "Notification Events"

Click [Save].

The confirmation dialog box appears.

Tip

When you click [Cancel] before saving the setting changes, they will not be saved and will return to the current settings. Note that they will not be returned to the factory default by clicking [Cancel]. This can only clear the changes and restore the current settings before saving the changes.

Click [OK] to apply the changes.

Note

 
The setting value may not be reflected on the screen even after changing the setting by clicking [Save] if you are using Internet Explorer; however, the new setting is properly applied. In such a case, click the submenu to refresh the screen and display the current setting status.

Displaying version information

You can check the system software version information of this equipment from the [Version] submenu under the [Setup] menu.

☐ Displaying the version information

- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Setup] menu and [Version] submenu.



The Version submenu page is displayed.

In the Version submenu page, you can confirm the version information of the system software. 4



[Security] Item List

- P.307 "Authentication settings"
- P.318 "Certificate management settings"
- P.322 "Password Policy settings"
- P.325 "Security Stamp Setting"

Tip

Users who are granted administrator privileges in access policy mode can access the [Security] menu from the [Administration] tab.

See the following pages for how to access it:

P.15 "Access Policy Mode"

Authentication settings

You can restrict user operations using the authentication function of your equipment.

- P.307 "Setting up Department Setting"
- P.309 "Setting up User Authentication Setting"
- P.315 "Setting up Email Authentication"
- P.316 "Setting up Email Address Setting"
- P.317 "Setting up Single Sign On Setting"
- P.317 "Setting up Home Directory Setting"

Tip

The [Authentication] submenu can be accessed from the [Security] menu on the [Administration] tab. See the following pages for how to access it and information on [Security] menu:

- P.15 "Access Policy Mode"
- P.307 "[Security] Item List"


■ Setting up Department Setting

When you want to manage the counters for every department, enable department management. If this is done, the department code input screen will be displayed on the computer and the touch panel when copying, scanning, faxing, faxing via the Internet, and operating on e-Filing to enable you to manage operations by departments.

Note

The following applications can access your equipment regardless of the department setting.

- · AddressBook Viewer
- Backup/Restore Utility
- TWAIN Driver
- File Downloader

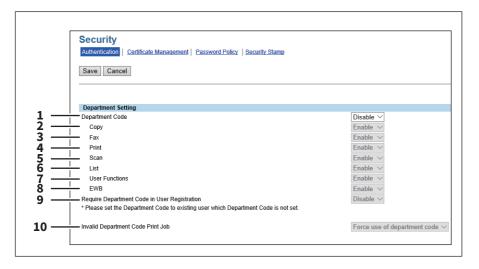


	Item name	Description
1	Department Code	Select whether or not to enable department management. [Disable] is set as the default.
2	Сору	When this function is enabled, the following counters are managed in each department. - Number of copied sheets - Number of originals scanned while copying [Enable] is set as the default.
3	Fax	When this function is enabled, the following counters are managed in each department. - Number of transmitted fax pages - Number of original pages scanned while transmitting faxes - Number of received fax pages - Number of received fax pages which are printed* [Enable] is set as the default.
4	Print	When this function is enabled, the number of outputs in printing (for printing, received E-mail and Internet Fax) is managed in each department. [Enable] is set as the default.
5	Scan	When this function is enabled, the number of originals scanned such as when they are stored in the shared folder is managed in each department. [Enable] is set as the default.
6	List	When this function is enabled, the number of system page outputs is managed in each department. [Enable] is set as the default.
7	User Functions	When this function is enabled, operations in the USER FUNCTION menu are managed in each department. [Enable] is set as the default.
8	EWB	Specify whether or not to enable the EWB (Embedded Web Browser) function. You need the External Interface Enabler option to use EWB.
9	Require Department Code in User Registration	Select whether or not to register the department code when registering a user. [Disable] is set as the default.
10	Invalid Department Code Print Job	 Select whether or not to print jobs without a department code or with an invalid department code when department management is enabled. Force use of department code — Select this to force the entry of the department code when printing. Print — Select this to print jobs with an invalid department code. Delete — Select this to delete jobs with an invalid department code.

While SNMP communication is disabled in the printer driver, if the Invalid Department Code Print Job is set to Force use of department code and an invalid department code is entered in the printer driver, a printing job will be registered in Invalid department code print job list.

The number of outputs are only counted for received faxes, in which the department code needs to be entered, such as manual reception, polling reception or the printing of originals stored in the confidential mailbox and the bulletin mailbox.

☐ Setting up User Authentication Setting

You can configure user authentication to access your equipment.

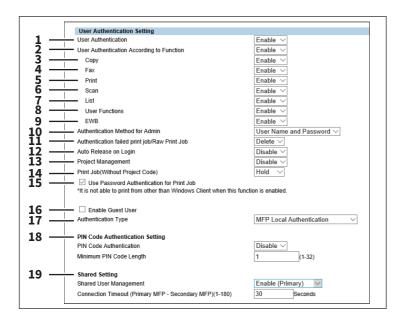

	Item name	Description
1	User Authentication	Select whether or not to enable user authentication. [Disable] is set as the default.
	Note	
	<u> </u>	l authentication" if you enable user authentication.
	• The No Limit Black function becomes unavailable if you enable user authentication. For details of the No Limit Black function, refer to the MFP Management Guide .	
2	User Authentication According To Function	Specify whether or not to authenticate users for each function.
3	Сору	Enable or disable user authentication when the Copy function is used. [Enable] is set as the default.
4	Fax	Enable or disable user authentication when the FAX function is used. [Enable] is set as the default.
	Note When you want to set [Disable] your service technician.	for this function, use the latest version of a N/W-Fax driver. For details, contact
5	Print	Enable or disable user authentication when the Print function is used. [Enable] is set as the default.
	Note When you want to set [Disable] your service technician.	for this function, use the latest version of a printer driver. For details, contact
6	Scan	Enable or disable user authentication when the Scan function is used. [Enable] is set as the default.
7	List	Enable or disable user authentication when the List function is used. [Enable] is set as the default.
8	User Functions	Enable or disable user authentication when the User Functions are used. [Enable] is set as the default.


	Item name	Description
9	EWB	Specify whether or not to enable the EWB (Embedded Web Browser) function. You need the External Interface Enabler option to use EWB.
10	Authentication Method for Admin	 Select the administrator authentication method. User Name and Password —Select this to authenticate an administrator with a user name and a password. Only Password —Select this to authenticate an administrator with a password.
11	Authentication failed print job/Raw Print Job Note	Select whether or not to print jobs which have failed user authentication. • Hold — Select this to register in the hold print job. • Print — Select this to print jobs which failed authentication. • Delete — Select this to delete jobs which failed authentication. d, selecting [Hold] deletes the job.
12	Auto Release on Login	 Specify whether to process private jobs and hold jobs at login. Disable — Select this not to print at login. Enable — Select this to print at login.
13	Project Management	Specify whether or not to enable project management.
14	Print Job(Without Project Code)	Specify whether or not to print the print jobs without project codes when Project Management is enabled. • Hold — Registers print jobs to Hold. • Print — Prints print jobs that failed authentication. • Delete — Deletes print jobs that failed authentication.
15	Use Password Authentication for Print Job	Performs user authentication for each print job. The user name and password are required to execute printing.
16	Enable Guest User	Enables operations by the guest user.
17	Authentication Type	Select the authentication method. • MFP Local Authentication You can manage network users with the MFP local authentication of your equipment when you do not have a user authentication system in your environment. When MFP local authentication is enabled, users must enter the user name and password that is registered in the equipment to operate the touch panel. • Windows Domain Authentication You can manage network users with Windows domain authentication when you already manage your network using Windows domains. When Windows domain authentication is enabled, users must enter the user name and password that is registered in the Windows domain to operate the touch panel. □ P.312 "Windows Domain Authentication" • LDAP Authentication You can manage network users with LDAP authentication when you already manage your network using LDAP. When LDAP authentication is enabled, users must enter the user name and password that is registered in the LDAP server to operate the touch panel. □ P.314 "LDAP Authentication"

	Item name	Description
18	PIN Code Authentication Setting	 PIN Code Authentication — Select the PIN code authentication method. Disable — Select this no to use the PIN code authentication. Use the user name and password for authentication. Enable — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication.
		Minimum PIN Code Length — Enter a figure that specifies the minimum digits for the PIN code.
19	Shared Setting	Shared User Management — Specify whether this equipment should act as a Primary or a Secondary when synchronizing with other MFP.
		Disable — Does not synchronize.
		• Enable(Primary) — Synchronizes as a primary.
		• Enable(Secondary) — Synchronizes as a secondary.
		Connection Timeout —Enter the timeout time to stop communicating if you cannot connect to the primary or secondary MFP. You can set 1 to 180 seconds.

Note

- Although the maximum number of users is 10,000 to synchronize user information, it is recommended to keep the number of users within 2,000.
- Secondary MFPs cannot perform user information registration, update, or delete from the user management screen.

Windows Domain Authentication

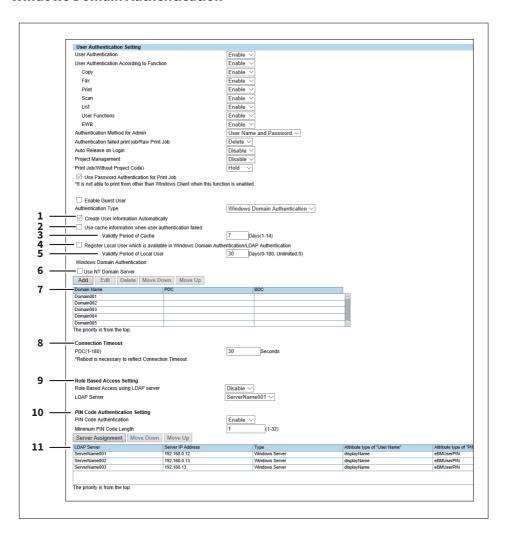


	Item name	Description
1	Create User Information Automatically	Select whether or not to register user information automatically to this equipment. This item is selected as the default. By registering user accounts to the printer, you can manage counters and quotas for each user.
	Tip	
	_	ser while printing from the printer driver, enable [Use Password
	Authentication for Print Job] or P.309 "Setting up User Auth	n the [User Authentication Setting] screen. entication Setting"
2	Use cache information when user authentication failed	Either of the following data is saved according to the authentication method. Password, Card number, Domain name, PIN code, Home Directory information or RBAC information.
	Tip	
	The cache information will be u	pdated if user authentication succeeds with the authentication server.
	However, if a user is authentica	ted with the cache information, it is not updated.
3	Validity Period of Cache	Enter the number of days to maintain the cache information. 1 to 14 days can be set from the latest update.
4	Register Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.

	Item name	Description
5	Validity Period of Local User	Enter the number of valid days for local users. Up to 180 days can be set from the user creation day. If 0 is set, the number of valid days will be indefinite.
6	Use NT Domain Server	Select this check box if you are managing the domain using the NT domain controller.
7	Domain List	Displays a list of domains that are assigned for Windows Domain Authentication. Click [Add] and enter the following items in the displayed screen to register a domain. Select the domain and click [Edit] to edit a domain. Use [Move Up] and [Move Down] to change the priority order in the list. Delete the selected domain using [Delete] button. Domain Name — Enter the domain name. PDC — Enter the server name or IP address of the Primary Domain Controller (PDC). You can enter up to 128 alphanumerical characters and symbols. BDC — Enter the server name or IP address of the Backup Domain Controller (BDC) as required. You can enter up to 128 alphanumerical characters and symbols.
		domain controller is specified, the [OK] in the user authentication screen on while this equipment searches for the primary or backup domain controller for
8	Connection Timeout	Enter the timeout period for quitting communication when no response is received from the PDC or BDC server. Specify within the range from 1 to 180 seconds.
9	Role Based Access Setting	Configure role based access using an LDAP server. Role Based Access using LDAP server — Select whether enable or disable role based access. [Disable] is set as the default. LDAP Server — Select the LDAP server that manages the Role Based Access Control.
10	PIN Code Authentication Setting	 PIN Code Authentication — Select the PIN code authentication method. <u>Disable</u> — Select this no to use the PIN code authentication. Use the user name and password for authentication. Enable — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication. Minimum PIN Code Length — Enter a figure that specifies the minimum
11	LDAP Server List	Displays a list of servers that are assigned for PIN Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list. P.210 "LDAP Client settings"
	attribute type of user name is e	as an LDAP server for the PIN code or IC card authentication, the following employed for the one at the login and the one of the user which is automatically information Automatically] is enabled.

• If Kerberos is selected to access the LDAP server: sAMAccountName

• If Digest-MD5, CRAM-MD5, Login, Plain or Simple Bind is selected to access the LDAP server: displayName

LDAP Authentication

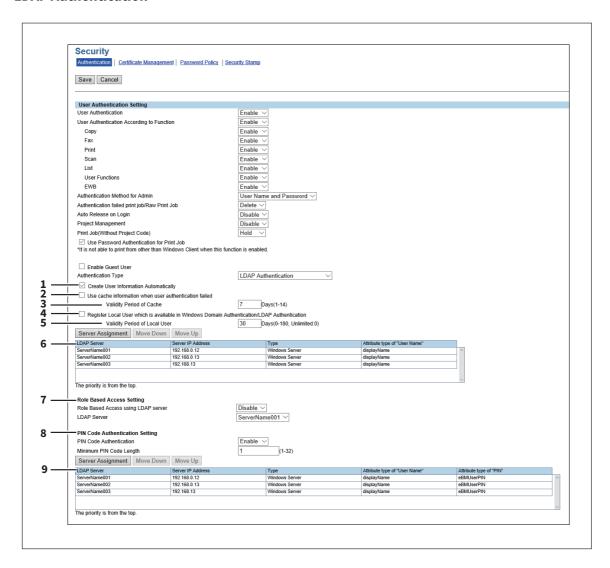

	Item name	Description
1	Create User Information Automatically	Select whether or not to register user information automatically to this equipment. This item is selected as the default. By registering user accounts to the printer, you can manage counters and quotas for each user.
	Tip	
	When automatically adding a u for Print Job] on the [User Auth P.309 "Setting up User Auth	6 -
2	Use cache information when user authentication failed	Either of the following data is saved according to the authentication method. Password, Card number, Domain name, PIN code, Home Directory information or RBAC information.
	Tip	
		updated if user authentication succeeds with the authentication server.
	However, if a user is authentica	ted with the cache information, it is not updated.
3	Validity Period of Cache	Enter the number of days to maintain the cache information. 1 to 14 days can be set from the latest update.

	Item name	Description
4	Register Local User which is available in Windows Domain Authentication/LDAP Authentication	Select this to register a local user who can log in with MFP Local Authentication using the cache information for an MFP managed with external authentication.
5	Validity Period of Local User	Enter the number of valid days for local users. Up to 180 days can be set from the user creation day. If 0 is set, the number of valid days will be indefinite.
6	LDAP Server List	Displays a list of servers that are assigned for LDAP Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list. P.210 "LDAP Client settings"
7	Role Based Access Setting	Configure role based access using an LDAP server. Role Based Access using LDAP server — Select whether enable or disable role based access. [Disable] is set as the default. LDAP Server — Select the LDAP server that manages the Role Based Access Control.
8	PIN Code Authentication Setting	 PIN Code Authentication — Select the PIN code authentication method. Disable — Select this no to use the PIN code authentication. Use the user name and password for authentication. Enable — Select this to use the PIN code authentication. Instead of the PIN code, it is possible to use the user name and password for authentication. Minimum PIN Code Length — Enter a figure that specifies the minimum digits for the PIN code.
9	LDAP Server List	Displays a list of servers that are assigned for PIN Authentication. Click [Server Assignment] and add the server in the displayed screen to assign a server. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list. P.210 "LDAP Client settings"

If [Windows Server] is selected as an LDAP server for the PIN code or IC card authentication, the following attribute type of user name is employed for the one at the login and the one of the user which is automatically registered while [Create User Information Automatically] is enabled.

- If Kerberos is selected to access the LDAP server: sAMAccountName
- If Digest-MD5, CRAM-MD5, Login, Plain or Simple Bind is selected to access the LDAP server: displayName

☐ Setting up Email Authentication


When E-mail authentication is enabled, users must enter the user name and password before performing Scan to Email.



	Item name	Description
1	Email Authentication	Select whether or not to enable E-mail authentication.
	Note	
	You must carry out "E-mail address setting" to use E-mail authentication.	
	P.316 "Setting up Email Address Setting"	

☐ Setting up Email Address Setting

You can configure the E-mail address when E-mail authentication is enabled.

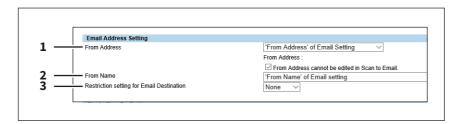

	Item name	Description
1	From Address	Specify the From Address.
		'From Address' of Email Setting:
		Select this to set the From Address in E-mail settings.
		User Name + @ + Mail Domain Name:
		Select this to specify the From Address in the "User Name + @ + Mail Domain Name" format.
		The authenticated user name is employed as the "User Name".
		The domain name specified in the [Domain Name] box is used as the "Mail Domain Name".
		When this is selected, enter the domain name in the [Domain Name] box. 'User Name' of LDAP:
		Select this to set the From Address with the one you have selected from LDAP addresses.
		When you select this function, a list of servers assigned for LDAP
		authentication is displayed to allow you to select one.
		Specify the mail domain name to be used in the case the LDAP server search fails in the [Domain Name] box.
		The equipment searches the authenticated user name in [Attribute type of "User Name"] of the LDAP server. If the registered user name has been found in the specified schema, the schema value set in [Attribute type of "Email Address"] becomes the sender address. If the registered user name has not been found in the specified schema, the format set in [User Name + @ + Mail Domain Name] becomes the sender address.
		You can assign up to 4 registered LDAP servers to search. Click the [Server Assignment] button and add the server in the displayed screen to change the assignment. Register the available server as [LDAP Client]. Use [Move Up] and [Move Down] to change the priority order in the list.
		P.210 "LDAP Client settings"
		Use Email Address which was registered Local User:
		Specify the Email Address that is registered to the user information.
		From Address cannot be edited in Scan to Email.: Select this check box if you do not want to allow users to edit the From Address.

	Item name	Description
2	From Name	Specify the From Name. Account Name of From Address + From Name of Email Setting: Select this to specify the From Name in the "Account Name of From Address + From Name of Email Setting" format. 'From Name' of Email setting: Select this to set the From Name which has been specified in E-mail settings. 'User Name' of LDAP: If the "From Address" is already set to "'User Name' of LDAP", "From Name" is also automatically set to "'User Name' of LDAP" and used as the sender of the e-mail to the selected LDAP address. Login User Name: Specify the Login User Name that is registered to the user information.
3	Restriction setting for Email Destination	 When User Authentication or Email Authentication is enabled, select whether to set the From Address of the authenticated user as a destination. None — Not used as a destination. Fixed To — Only the From Address of the authenticated user is used for "To". To — The From Address of the authenticated user is added to "To". Cc — The From Address of the authenticated user is added to "Cc". Bcc — The From Address of the authenticated user is added to "Bcc".

☐ Setting up Single Sign On Setting

Normally users are required to enter the user name and password for E-mail authentication and Scan to Email; however, you can enable the single sign on setting to eliminate these operations.



	Item name	Description
1	Single Sign On for Scan to Email	Select whether or not to enable single sign on. [Disable] is set as the default.

☐ Setting up Home Directory Setting

You can configure the home directory when home directory is enabled.



	Item name	Description
1	Home Directory	Select whether or not to enable home directory.

	Item name	Description
2	Home Directory Server	Specify the home directory server.
		• Use User Authentication Server — Select this to use the user
		authentication server as the home directory server.
		Use User Authentication Server(Use specific server for Card
		Authentication) — Select this to use the user authentication server as the
		home directory server. However, use the specified server as the home
		directory server in the case of Card Authentication.
		• User Specific Server — Select this to specify the home directory server.
		If you select "Use User Authentication Server (Use specific server for Card Authentication)" or "User Specific Server", the LDAP server list appears on the screen. You can set up to 3 servers. Click the "Primary" button to select the primary server. Click the LDAP server name on the list to open the Home Directory Server Setting screen. Select the home directory server for each server name. If you do not specify the server, select "Disable".

■ Certificate management settings

You can manage device certificates and client certificates.

- P.318 "Setting up Device Certificate"
- P.320 "Setting up Client Certificate"
- P.321 "Setting up Certificate Setting"
- P.321 "Setting up CA Certificate"
- P.322 "Setting up Certificate Files"


Tip

The [Certificate Management] submenu can be accessed from the [Security] menu on the [Administration] tab. See the following pages for how to access it and information on the [Security] menu:

- P.15 "Access Policy Mode"
- P.307 "[Security] Item List"

■ Setting up Device Certificate

You can configure the device certificate for encrypted communications using wireless LAN, IEEE 802.1X authentication, IPsec, or SSL/TLS.

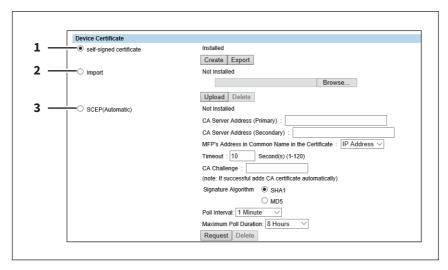

	Item name	Description
1	self-signed certificate	Creates a certificate for encrypted communications using SSL/TLS on your device. [Create] button — Displays the [Create self-signed certificate] screen. Specify items necessary for the certificate to create the self-signed certificate. P.319 "[Create self-signed certificate] screen" [Export] button — Exports the created self-signed certificate.
2	Import	Import the certificate for encrypted communications using wireless LAN, IEEE 802.1X authentication, IPsec, or SSL/TLS. [Browse] button — Allows you to select the certificate file. [Upload] button — Uploads the selected certificate file. [Delete] button — Deletes the registered certificate file.
3	SCEP(Automatic)	Automatically acquires the certificate for encrypted communications using IP sec or SSL/TLS. CA Server Address (Primary) — Enter the IP address of FQDN of the CA server. You can enter up to 128 alphanumerical characters and symbols. CA Server Address (Secondary) — Enter the IP address of FQDN of the CA server. You can enter up to 128 alphanumerical characters and symbols. MFP's Address in Common Name in the Certificate — Select whether you use the IP address or FQDN as the address of this equipment to be entered in the [Common Name] box of the certificate. [IP Address] is set as the default. Timeout — Enter a timeout period for quitting communication when no response is received from the CA server. Specify within the range from 1 to 120 seconds. "10" is set as the default. CA Challenge — Enter the password for the CA challenge. You can enter up to 32 alphanumerical characters. You need to enter a maximum of 32 alphanumerical characters for the first time when you extend the password length. Signature Algorithm — Select SHA1 or MD5 as the signature algorithm. Poll Interval — Specify the polling interval. [1 Minute] is set as the default. Maximum Poll Duration — Specify the polling duration. [8 Hours] is set as the default. [Request] button — Click this button to request the certificate. [Delete] button — Deletes the registered certificate.

[Create self-signed certificate] screen



	Item name	Description
1	[Save] button	Saves the self-signed certificate.
2	[Cancel] button	Cancels creating the certificate.
3	Country/Region Name	Enter the country or region name using two alphanumerical characters and symbols. (Example: JP)

	Item name	Description
4	State or Province Name	Enter the state or province name with alphanumerical characters and symbols. You can enter up to 128 characters.
5	Locality Name	Enter the city or town name with alphanumerical characters and symbols. You can enter up to 128 characters.
6	Organization Name	Enter the organization name with alphanumerical characters and symbols. You can enter up to 64 characters.
7	Organizational Unit Name	Enter the organizational unit name with alphanumerical characters and symbols. You can enter up to 64 characters.
8	Common Name	Enter the FQDN or IP address of this equipment with alphanumerical characters and symbols. You can enter up to 64 characters.
9	Email Address	Enter the E-mail address with alphanumerical characters and symbols. You can enter up to 64 characters.
10	Validity Period	Enter the number of months in the validity period of the self-signed certificate.

☐ Setting up Client Certificate



	Item name	Description
1	Client Certificate	Creates the client certificate. [Create] button — Displays the [Create Client Certificate] screen. Specify items necessary for the certificate to create the client certificate. P.320 "[Create Client Certificate] screen"

[Create Client Certificate] screen



	Item name	Description
1	[Save] button	Saves the Client certificate.
2	[Cancel] button	Cancels creating the certificate.
3	Country/Region Name	Enter the country or region name using two alphanumerical characters and symbols. (Example: JP)
4	State or Province Name	Enter the state or province name with alphanumerical characters and symbols. You can enter up to 128 characters.

	Item name	Description
5	Locality Name	Enter the city or town name with alphanumerical characters and symbols. You can enter up to 128 characters.
6	Organization Name	Enter the organization name with alphanumerical characters and symbols. You can enter up to 64 characters.
7	Organizational Unit Name	Enter the organizational unit name with alphanumerical characters and symbols. You can enter up to 64 characters.
8	Common Name	Enter the FQDN or IP address of this equipment with alphanumerical characters and symbols. You can enter up to 64 characters.
9	Validity Period	Enter the number of months in the validity period of the self-signed certificate.
10	Password	Enter the password of the certificate with alphanumerical characters and symbols. You can enter up to 64 characters.


☐ Setting up Certificate Setting



	Item name	Description
1	Signature Algorithm	Select the signature algorithm to be used in Certificate.
		SHA1 — Select this to use SHA1.
		SHA256 — Select this to use SHA256.
		SHA384 — Select this to use SHA384.
		SHA512 — Select this to use SHA512.
	Tip Select a signature algorithm fro	om SHA256, SHA384, and SHA512 to create a self-signed certificate.
2	Public Key	Select the public key to be used in Certificate.
	,	RSA1024 — Select this to use RSA1024.
		RSA2048 — Select this to use RSA2048.
	Tip	
	Select "RSA2048" for the public	key to create a self-signed certificate.

☐ Setting up CA Certificate

 When you want to enable SSL/TLS and verify with a CA certificate for the SMTP Client, POP3 Network Service, FTP Client, Directory Service, or Syslog Setting, you must install the CA certificate. You can install up to 10 CA certificates in this equipment.



	Item name	Description
1	CA Certificate(PEM)	Selects the certificate in the PEM format. [Upload] button — Uploads the certificate. [Delete] button — Deletes the registered certificate.

	Item name	Description
2	CA certificate (DER)	Selects the certificate in the DER format. [Upload] button — Uploads the certificate. [Delete] button — Deletes the registered certificate.

☐ Setting up Certificate Files

You can display a list of registered certificate files.

■ Password Policy settings

You can configure policies for the password to register.

- P.322 "Setting up Policy for Users"
- P.323 "Setting up Policy for Administrator, Auditor"
- 🕮 P.324 "Setting up Policy for e-Filing Boxes, Template Groups, Templates, SecurePDF, SNMPv3, Cloning, Secure Receive"

Tip

The [Password Policy] submenu can be accessed from the [Security] menu on the [Administration] tab.

See the following pages for how to access it and information on [Security] menu:


- P.15 "Access Policy Mode"
- P.307 "[Security] Item List"

■ Setting up Policy for Users

You can configure policies for user registration.

Tip

If you change the settings, they become effective from the next login.

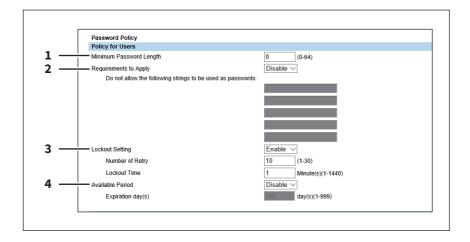


	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 0 to 64. "0" is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. Restrictions
		The user name and password cannot be the same.
		The same password cannot be used again.
		• A password consisting of sequences of the same characters cannot be used.
		A password containing the characters entered in the restricted character text box cannot be used.

	Item name	Description	
3	Lockout Setting	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Enable] is set as the default. Number of Retry — Specify the number of incorrect password entry times to lock out the user. Specify within the range from 1 to 30 times. "10" is set as the default. Lockout Time — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. "1" is set as the default.	
	Due to a change in the number of retry times, a user may lock out in the next login. The history of lockouts is registered in the log.		
4	Available Period	Select [Enable] to specify how long the password is valid before its expiry. [Disable] is set as the default. Expiration day(s) — Specify how long the password is valid before its expiry. Specify within the range from 1 to 999 days. "180" is set as the default.	
	Tip When the number of days set in [Expiration day(s)] elapses, a screen that prompts the user to change the password will appear the next time the user logs in.		

☐ Setting up Policy for Administrator, Auditor

You can configure policies for administrator and auditor registration.

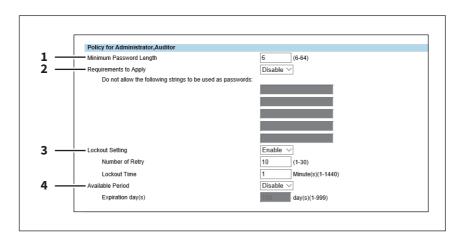


	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 6 to 64. "6" is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. Restrictions
		The user name and password cannot be the same.
		The same password cannot be used again.
		• A password consisting of sequences of the same characters cannot be used.
		A password containing the characters entered in the restricted character text box cannot be used.

	Item name	Description
3	Lockout Setting	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Enable] is set as the default. Number of Retry — Specify the number of incorrect password entry times to lock out the user. Specify within the range from 1 to 30 times. "10" is set as the default. Lockout Time — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. "1" is set as the default.
	•	of retry times, a user may lock out in the next login. The history of lockouts is
	registered in the log.	
4	Available Period	Select [Enable] to specify how long the password is valid before its expiry. [Disable] is set as the default.
		Expiration day(s) — Specify how long the password is valid before its expiry. Specify within the range from 1 to 999 days. "180" is set as the default.
	Tip	
	When the number of days set in password will appear the next	n [Expiration day(s)] elapses, a screen that prompts the user to change the time the user logs in.

☐ Setting up Policy for e-Filing Boxes, Template Groups, Templates, SecurePDF, **SNMPv3, Cloning, Secure Receive**

You can configure policies for passwords for operations and applications on your equipment.

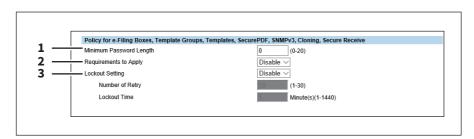


	Item name	Description
1	Minimum Password Length	Specify the minimum number of digits for the password. Specify within the range from 0 to $20.^{*1}$ "0" is set as the default.
2	Requirements to Apply	Select [Enable] to set restrictions on the character strings that can be used in passwords. [Disable] is set as the default. Restrictions
		• The file name and password cannot be the same.*2
		The same password cannot be used again.
3	Lockout Setting*3	Specify whether or not to enable the lockout setting when the user failed to supply the correct password. [Disable] is set as the default. Number of Retry — Specify the number of incorrect password entry times to lock out the user. "10" is set as the default. Lockout Time — Specify the duration to lock out the user. Specify within the range from 1 to 1440 minutes. "1" is set as the default.

- *1 With SNMPv3 and encrypted PDF files, a password of at least one character is required.
- *2 With Cloning, you can also register the same password as the file name.
- *3 The Lockout Setting is enabled only when you are using e-Filing Boxes.

registered in the log.

■ Security Stamp Setting

You can add information such as the date, time and user name at the edge of the print output or transmission images.

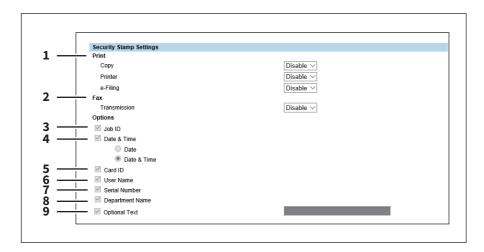

	Item name	Description
1	Print	Copy — Specify whether or not to add information to copy jobs. [Disable] is set as the default. Printer — Specify whether or not to add information to print jobs. [Disable] is set as the default. e-Filing — Specify whether or not to add information to e-Filing jobs. [Disable] is set as the default.
2	Fax	Transmission — Specify whether or not to add information to fax transmission jobs. [Disable] is set as the default.
3	Job ID	Specify whether or not to include the job ID in the stamp.
4	Date & Time	Specify whether or not to include the date and time in the stamp. • Date: Prints the date. • Date & Time: Prints the date and time.
5	Card ID	Specify whether or not to include the card ID in the stamp.
6	User Name	Specify whether or not to include the user name in the stamp.
7	Serial Number	Specify whether or not to include the serial number in the stamp.
8	Department Name	Specify whether or not to include the department name in the stamp.
9	Optional text	Specify whether or not to include optional text in the stamp. You can enter up to 32 alphanumeric characters.

Note

If you add both the TTI and security stamp, the TTI is added as the first line and the security stamp is added as the second line

Security stamps are added at the top 5mm of the fax image; therefore, the top 5mm of the image is not printed at the recipient.

Tip

When including the date and time in the stamp, the transmission date and time of the first page is printed on all pages for security stamps. Whereas the transmission date and time of each page is printed for TTI.

[Security] How to Set and How to Operate

In the Security Service page, you can install a wireless LAN certificate for authentication with the and export a device certificate to enable SSL/TLS and set up its SCEP (automatic installation), ir and install certificates for IEEE 802.1X authentication and set up its SCEP. P.326 "Installing a device certificate" P.332 "Creating/Exporting a client certificate" P.333 "Installing CA certificate"	-
■ Installing a device certificate To enable SSL/TLS for HTTP setting, FTP server setting, IPP Print Service, Web Services Print, or	r Off Device

iustomization Architecture settings, you must install a device certificate for each. To install these device certificates, you need to create a self-signed certificate, install them from an authentication

agency or the CA server. You can also install them automatically from the CA server using SCEP.

	P.326	"Creating/	exporting/	a self-signed	certificate"
--	-------	------------	------------	---------------	--------------

- P.328 "Installing an imported device certificate"
- P.329 "Deleting an imported device certificate"
- P.330 "Installing a device certificate automatically"
- P.331 "Deleting a device certificate installed automatically"

Tip

When you want to enable SSL/TLS for HTTP setting, FTP Server, IPP Print, Web Services Print, or Off Device Customization Architecture settings, the certificates required to install to the equipment and the client PC are as follows:

Use SSL/TLS	Required Certificate for this equipment		Required Certificate for Client PC			
for	Device Certificate		CA	Self-signed	Client	CA
	Self-signed Certificate	Device certificates installed from authentication agency / CA server	Certificate Certif	Certificate	Certificate	Certificate
HTTP, FTP, IPP	Required	-	-	(Required)	-	-
Print, Off Device Customization Architecture*	-	Required	-	-	-	(Required)
Web Service	-	Required	Required	-	Required	Required
Print	Required	-	-	Required	-	-

In the HTTP Network Service, FTP Server, IPP Print, and Off Device Customization Architecture settings, if you create a self-signed certificate for the equipment, you need to install the self-signed certificate to the client PC. If you select to install an imported device certificate to the equipment, also install the CA certificate to the client PC.

P.333 "Installing CA certificate"

Note


When you install the User Certificate in this equipment, it is recommended to connect this equipment and a client computer using a crossing cable for ensuring security.

☐ Creating/exporting a self-signed certificate

Start TopAccess access policy mode. P.15 "Access Policy Mode"

Click the [Administration] tab.

Click the [Security] menu and [Certificate Management] submenu. 3

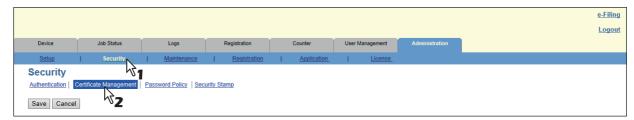

The Certificate Management page is displayed.

Select [self-signed certificate] under [Device Certificate] and click [Create].



The Create self-signed certificate page is displayed.


Enter the following items and click [Save].



You can set the following in this page.

P.319 "[Create self-signed certificate] screen"

- Click [OK].
- A self-signed certificate is created. Click the [Export] button if you are exporting.

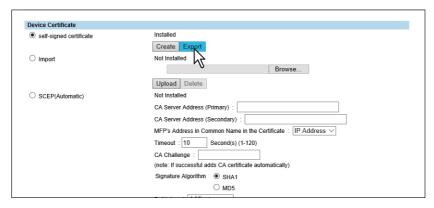

Click the link for the file name of the certificate to be exported.




The file is downloaded.

- Then you can enable SSL/TLS for the following network settings.
 - P.205 "Setting up HTTP"
 - P.206 "Setting up WSD"
 - P.209 "Setting up FTP Server"
 - P.210 "LDAP Client settings"
 - P.214 "Setting up SMTP Client"
 - P.216 "Setting up POP3 Client"
 - P.267 "Setting up IPP Print"
 - P.280 "Off Device Customization Architecture settings"


☐ Installing an imported device certificate

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

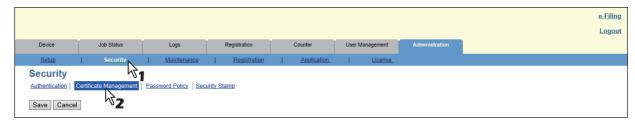


The Certificate Management page is displayed.

Click [Browse] of [Import] in [Device Certificate] to select a device certificate file, and then click [Upload].

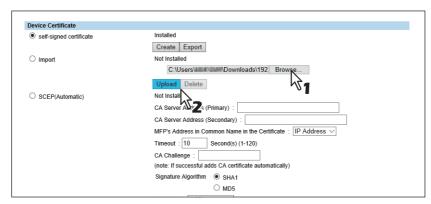


The alert message dialog box appears.

 Enter the password for the device certificate, and then click [OK].




The device certificate is imported.

- Click [Save] on the [Certificate Management] submenu.
- Then you can enable SSL/TLS for the following network settings.
 - P.205 "Setting up HTTP"
 - P.206 "Setting up WSD"
 - P.209 "Setting up FTP Server"
 - P.210 "LDAP Client settings"
 - P.214 "Setting up SMTP Client"
 - P.216 "Setting up POP3 Client"
 - P.267 "Setting up IPP Print"
 - P.280 "Off Device Customization Architecture settings"
- Deleting an imported device certificate
- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

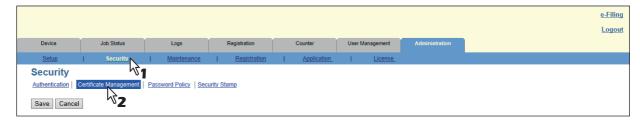

The Certificate Management page is displayed.

Click [Delete] of [Import] in [Device Certificate]. 4

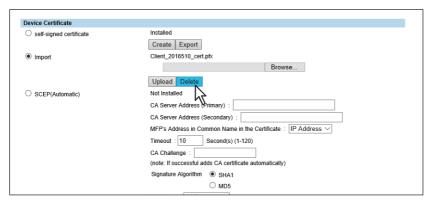


The confirmation dialog box appears.

If no device certificate has been imported, you cannot delete it.

Click [OK].


The device certificate is deleted.

- Click [Save] on the [Certificate Management] submenu.
- ☐ Installing a device certificate automatically
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

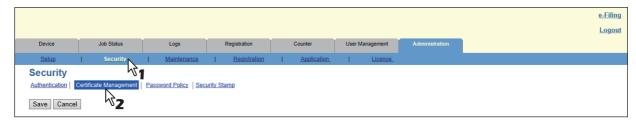

The Certificate Management page is displayed.

Enter the following items in [SCEP(Automatic)] of [Device Certificate], and then click [Request].

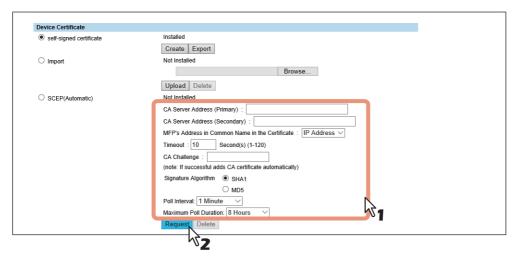

CA Server Address (Primary)	Enter the IP address or FQDN of the CA server. You can enter up to 128 characters.
CA Server Address (Secondary)	Enter the IP address or FQDN of the CA server. You can enter up to 128 characters.
MFP's Address in Common Name in the Certificate	Select whether to use the IP address or FQDN as the address of this equipment to be entered in the [Common Name] box of the certificate.
Timeout	Enter a timeout period for quitting communication when no response is received from the CA server.
CA Challenge	Enter the CA challenge.
Signature Algorithm	Select SHA1 or MD5 as the signature algorithm.
Poll Interval	Specify the polling interval.
Maximum Poll Duration	Specify the polling duration.

Note


- If FQDN is used in [CA Server address], you need to configure a DNS server and enable DNS settings.
- If [FQDN] is selected in [MFP's Address in Common Name in the Certificate], the IP address of this equipment must be registered in the DNS server.

A device certificate is installed.

Note


A CA certificate is installed automatically as well as a device certificate. If a CA certificate is already installed, delete the existing one by clicking [DELETE] of SCEP in [Device Certificate]. Then click [Request] to install a new CA certificate.

- Click [Save] on the [Certificate Management] submenu.
- Then you can enable SSL/TLS for the following network settings.
 - P.205 "Setting up HTTP"
 - P.206 "Setting up WSD"
 - P.209 "Setting up FTP Server"
 - P.210 "LDAP Client settings"
 - P.214 "Setting up SMTP Client"
 - P.216 "Setting up POP3 Client"
 - P.267 "Setting up IPP Print"
 - P.280 "Off Device Customization Architecture settings"
- ☐ Deleting a device certificate installed automatically
- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

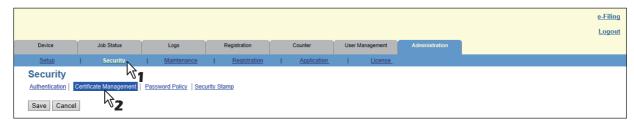

The Certificate Management page is displayed.

Select [SCEP(Automatic)] in [Device Certificate], and then click [Delete].

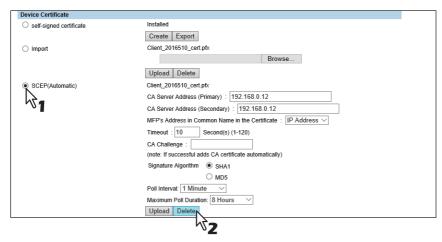

The confirmation dialog box appears.

Note


- A CA certificate already installed automatically will be deleted as well as the device certificate.
- Deleting is disabled when no device certificate has been installed automatically.
- Click [OK].

The device certificate is deleted.

Click [Save] on the [Certificate Management] submenu.

■ Creating/Exporting a client certificate

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

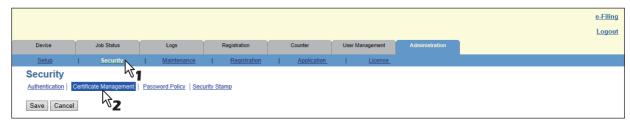


The Certificate Management page is displayed.

Click [Create] under [Client Certificate].



The Create Client Certificate page is displayed.

Enter the following items and click [Save].

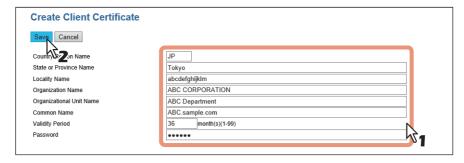

You can set the following in this page.

P.320 "[Create Client Certificate] screen"

Click [OK].

Click the link for the file name of the certificate to be exported.



The file is downloaded.

Tip

If you have not installed a client certificate, enter the password in [Password] and click [Create] to create a certificate.


■ Installing CA certificate

When you want to enable SSL/TLS and verify with a CA certificate for the SMTP Client, POP3 Network Service, FTP Client, Directory Service, or Syslog Setting, you must install the CA certificate. You can install up to 10 CA certificates in this equipment.

- P.333 "Installing CA certificate"
- P.334 "Deleting CA certificate"


☐ Installing CA certificate

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

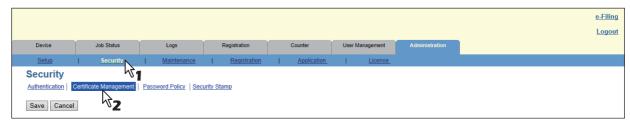

The Certificate Management page is displayed.

 
Select the encryption of CA certificate and click [Browse] to select a CA certificate file. Then click [Upload].



The CA certificate is installed.

- Click [Save] on the [Certificate management] submenu. 5
- Then you can enable SSL/TLS by selecting [Verify with imported CA certification(s)] for the following network settings.
 - P.206 "Setting up WSD"
 - P.210 "LDAP Client settings"
 - P.214 "Setting up SMTP Client"
 - P.216 "Setting up POP3 Client"
 - P.218 "Setting up FTP Client"
 - P.224 "Syslog Setting"
 - P.280 "Off Device Customization Architecture settings"

- ☐ Deleting CA certificate
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Security] menu and [Certificate Management] submenu.

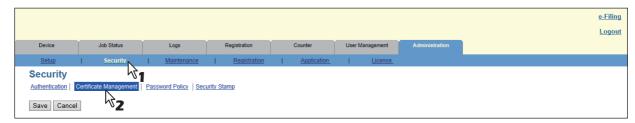

The Certificate Management page is displayed.

Select the CA certificate file that you want to delete in the [Certificate Files] list, and click [Delete].



The confirmation dialog box appears.

- Click [OK].
 - The CA certificate is deleted.
- Click [Save] on the [Certificate Management] submenu.

[Maintenance] Item List

- P.335 "Upload Software settings" P.337 "Remove Software settings" P.338 "Create Clone File settings" P.341 "Install Clone File settings" P.344 "Import settings" P.346 "Export settings" P.348 "Delete Files settings" P.348 "Notification settings" P.352 "Languages settings" P.354 "Data Backup" P.356 "User Paper Type" P.357 "System Updates settings"
- Tip

Users who are granted administrator privileges in access policy mode can access the [Maintenance] menu from the [Administration] tab.

See the following pages for how to access it:

P.15 "Access Policy Mode"


P.358 "Reboot settings" P.358 "Panel View"

■ Upload Software settings


You can update client software embedded in your equipment. Users can download client software on their computers using the TopAccess [Install Software] link.

The [Upload Software] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

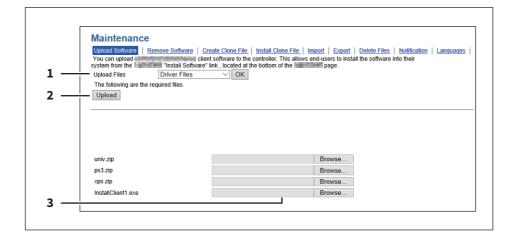

When [Driver Customization Packages] is selected:

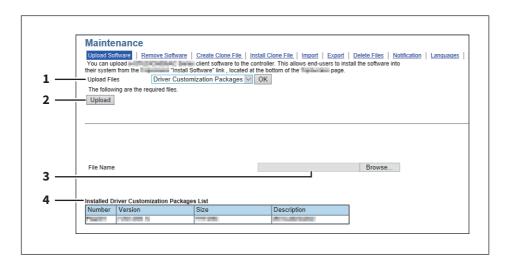


	Item name	Description		
1	Upload Files	Select the software you want to upload to the equipment.		
		• Driver Files — Select this to upload the setup files.		
		Macintosh PPD Files — Select this to upload the PPD file which is used by		
		Mac OS X 10.6 or later.		
		• Unix Filters — Select this to upload the tar files that contain filters for each		
		UNIX workstation.		
		Driver Customization Packages — Select this to upload the custom		
		package file for the printer driver.		
		[OK] button — Confirms the selected software.		
	Tip			
	See the following for how to ob	o obtain and upload software.		
	P.361 "Uploading the client software"			
2	[Upload] button	Uploads the browsed setting file.		
3	Browse box	Browses the setting file to be uploaded.		
		Select the corresponding setting file.		
4	Installed Driver Customization Packages List	Displays a list of installed custom package files.		

■ Remove Software settings

You can delete the software uploaded to the equipment.

The [Remove Software] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

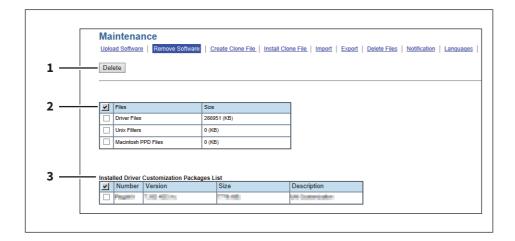

	Item name	Description
1	[Delete] button	Deletes the selected software. Select and click the software to be deleted from the software list.
2	Software list	Displays a list of software uploaded to your equipment. Select the software files you want to delete.
3	Installed Driver Customization Packages List	Displays a list of the installed custom package files. Select the files you want to delete.

■ Create Clone File settings

You can create a clone file of the environment on your equipment.

You can implement a cloned environment by installing the created clone file on another equipment.

For the details of the clone file and how to use it, contact your service technician.

- P.339 "Setting up Clone File"
- P.339 "Setting up Category Setting"

Note

- The clone files are compatible with other equipment units. For details about the available models, contact your service representative.
- When an end-user (either an individual or an entity) intends to clone data (font, ICC profile, or any data downloaded or added by the end-user) stored in TTEC products (copier, MFP), the end-user shall investigate, review and confirm terms of use for such data and intellectual property rights thereof. The end-user shall perform such cloning at your own risk and responsibility.

TTEC AND ITS AFFILIATES HEREBY DISCLAIM ANY WARRANTY OF ANY KIND, WHETHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF QUALITY AND PERFORMANCE OF TTEC PRODUCTS, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT OF THIRD PARTIES INTELLECTUAL PROPERTY RIGHTS, IN THE USE OF CLONING BY THE END-USER.

IN NO EVENT WILL TTEC BE LIABLE TO THE END-USER NOR ANY THIRD PARTY FOR ANY DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE, INCLUDING WITHOUT LIMITATION ANY LOST PROFITS, LOST DATA OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF CLONING BY THE END-USER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW.

When you clone the LDAP role, make sure of the consistent LDAP settings between the equipment units.

Tip

The [Create Clone File] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"



	Item name	Description
1	[Create] button	Creates the clone file of the category selected in the category setting. When you click this button, a screen is displayed to set a password on the clone file.

☐ Setting up Clone File




	Item name	Description
1	Device Name	Displays the device name of the created clone file. Click the device name to download the clone file.
2	Copier Model	Displays the copier model of the created clone file.
3	Version	Displays the system ROM version of the created clone file.
4	Date Created	Displays the created date of the clone file.

☐ Setting up Category Setting

Select the category for the clone file.

Tip

The clone file will include the settings listed in "Description" that make up the category you select.

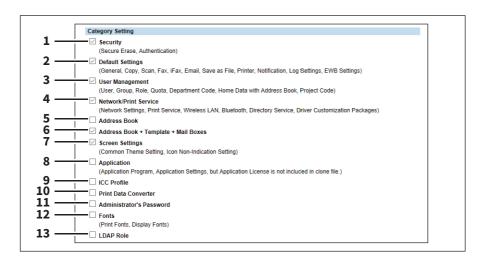

	Item name	Description
1	Security	Includes secure erase and authentication settings in the clone file.
2	Default Settings	Includes the general, copy, scan, fax, ifax, E-mail, save as file, printer, notification, log settings, and EWB settings in the clone file.
3	User Management	Includes the user, group, role, quota, department code, home data with address book, and project code in the clone file.
4	Network/Print Service	Includes network, print service, wireless LAN, Bluetooth, directory service, and driver customization packages settings in the clone file.
5	Address Book	Includes the address book in the clone file.
6	Address Book + Template + Mail Boxes	Includes the address book, template, and mail boxes in the clone file.
7	Screen Settings	Includes the common theme setting and the icon display setting in the clone file.

	Item name	Description			
8	Application	Includes the application program and application setting (except licenses) in the clone file.			
9	ICC Profile	Includes ICC profiles installed from TopAccess in the clone file.			
	Note				
	• You can select ICC profiles or	es only for color models.			
	• You are required to have the	license to use some ICC profiles.			
10	Print Data Converter	Includes print data converter settings in the clone file.			
11	Administrator's Password	Includes the password of the default administrator in the clone file.			
12	Fonts	Includes downloaded fonts for print and display in the clone file.			
	Note				
	You are required to have the license to use some fonts.				
13	LDAP Role	Includes information about the LDAP role in the clone file.			

■ Install Clone File settings

You can install the created clone file.

You can implement a cloned environment by installing the clone file created on another equipment.

- P.342 "Setting up File Upload"
- P.342 "Setting up Clone File Information"
- P.342 "Setting up Setting data included in Clone File"

Note

- · Before the clone file is installed, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. If any jobs do remain, the installation of the clone files cannot be carried out.
 - P.24 "[Job Status] Tab Page Overview"
- After the clone file has been installed, reboot this equipment in accordance with the guidance. Manually reboot this equipment if you did not do so by closing the installation execution screen. See the following pages for the details of the rebooting.
 - P.372 "Rebooting the equipment"
- · After you do cloning between the color and monochrome models, the sleep mode action might be changed. If the equipment is turned off unexpectedly or the sleep mode does not work as you like, check the Sleep Mode setting. P.170 "Setting up Energy Save"

Tip

- The [Install Clone File] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:
 - P.15 "Access Policy Mode"
 - P.335 "[Maintenance] Item List"
- When the installation of the clone file is complete, the screen shows the reference link so that you can click it to download a file that records the result of the installation.




	Item name	Description
1	[Install] button	Installs the selected clone file. When you click this button, a dialog box is displayed to prompt you to enter the password you specified when creating the clone file.

☐ Setting up File Upload




		Item name	Description
	1	[Browse] button	Select a clone file.
:	2	[Upload] button	Displays information on the selected clone file and what is included in the clone file.

 ☐ Setting up Clone File Information



	Item name	Description
1	Device Name	Displays the device name of the created clone file.
2	Copier Model	Displays the copier model of the created clone file.
3	Version	Displays the system ROM version of the created clone file.
4	Date Created	Displays the created date of the clone file.

lacksquare Setting up Setting data included in Clone File

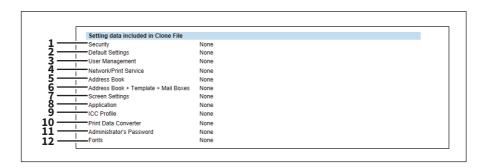

	Item name	Description
1	Security	Displays if secure erase and authentication settings are included.
2	Default Settings	Displays if the general, copy, scan, fax, ifax, E-mail, save as file, printer, notification, log settings, and EWB settings are included.

	Item name	Description
3	User Management	Displays if the user, group, role, quota, department code, home data with address book, and project code are included.
	Tip	
	Select whether or not to include the address book information when user management is included but the address book is not. When excluding the address book has been selected, it is necessary to input again the addresses registered from the address book.	
4	Network/Print Service	Displays if network, print service, wireless LAN, Bluetooth, directory service, and driver customization packages settings are included.
5	Address Book	Displays if the address book is included.
6	Address Book + Template + Mail Boxes	Displays if the address book, template, and MailBox are included.
7	Screen Settings	Displays if the common theme setting and the icon display setting are included.
8	Application	Displays if the application program and application setting (except licenses) are included.
9	ICC Profile	Displays if the ICC profiles installed from TopAccess are included. This item appears only for color models.
10	Print Data Converter	Displays if the print data converter settings are included.
11	Administrator's password	Displays if the password of the default administrator is included.
12	Fonts	Displays if downloaded fonts for print and display are included.

■ Import settings

You can import address book data and department code information exported from another equipment.

- P.344 "Setting up Address Book"
- P.345 "Setting up MailBoxes"
- P.345 "Setting up Template"
- P.345 "Setting up Combined (Template + Address Book + MailBoxes)"

Tip

The [Import] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

 
Note

Before the data are imported, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. You cannot import data if there are these jobs.

If import is taking too long, try importing data after your equipment has entered sleep mode.


P.24 "[Job Status] Tab Page Overview"

■ Setting up Address Book




	Item name	Description
1	Import Method	Specify the import method of the address book. Addition — Select this to append the imported information to the existing data. Overwrite — Select this to replace the existing data with the imported information.
2	Address Book Type	Select "Local" or "Shared" as the import source when using the Shared Address Book function.
3	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
4	File Name	Select the address book file to be imported. [Browse] button — Allows you to select the address book file. [Import] button — Imports the selected address book file.

 ☐ Setting up MailBoxes




	Item name	Description
1	File Name	Select the mailbox file to be imported.
		[Browse] button — Allows you to select the mailbox file.
		[Import] button — Imports the selected mailbox file.

 ☐ Setting up Template



	Item name	Description
1	Import Method	Specify the import method of the template. Addition — Select this to append the imported information to the existing data. Overwrite — Select this to replace the existing data with the imported information.
2	File Name	Select the template file to be imported. [Browse] button — Allows you to select the template file. [Import] button — Imports the selected template file.

 ☐ Setting up Combined (Template + Address Book + MailBoxes)



	Item name	Description
1	File Name	Select the combined (template + address book + mailboxes) file to be imported. [Browse] button — Allows you to select the combined file. [Import] button — Imports the selected combined file.

■ Export settings

You can export the address book, mailboxes, templates and so on.

- P.346 "Setting up Address Book"
- P.346 "Setting up MailBoxes"
- P.347 "Setting up Template"
- P.347 "Setting up Combined (Template + Address Book + MailBoxes)"


Tip

The [Export] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

■ Setting up Address Book

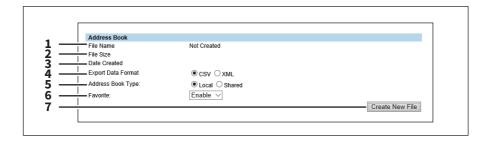

	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	Export Data Format	Format Select the file format of the export file. • CSV — Select this to create the file in the CSV format. • XML — Select this to create the file in the XML format.
5	Address Book Type	Specify "Local" or "Shared" as the export source when using the Shared Address Book function.
6	Favorite	Specify whether or not to enable Favorite information. The default is [Enable].
7	[Create New File] button	Creates the export file.

☐ Setting up MailBoxes




	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.

☐ Setting up Template



	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.

 ☐ Setting up Combined (Template + Address Book + MailBoxes)



	Item name	Description
1	File Name	Displays the file name of the created export files. Click a file name to download.
2	File Size	Displays the file size of the created export files.
3	Date Created	Displays the created date of the export files.
4	[Create New File] button	Creates the export file.


■ Delete Files settings

You can delete information such as scanned data, transmission data, and reception data that are stored in the local folder using the Save as file function. It is recommended to delete the stored data periodically to maintain the internal storage device.

Tip

The [Delete Files] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

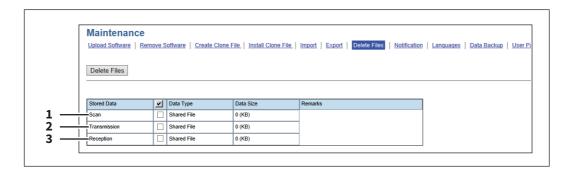

	Item name	Description
1	Scan	Deletes all scan data stored in the shared folder.
2	Transmission	Deletes all fax/ifax transmission data stored in the shared folder.
3	Reception	Deletes all fax/ifax reception data and mailbox/fax/ifax forwarding data in the shared folder.


■ Notification settings

You can receive information on your equipment by E-mail.

- P.349 "Setting up Email Setting"
- P.349 "Setting up System Message Notification Events"
- P.351 "Setting up Job Notification Events"
- P.351 "Setting up Application"
- P.351 "Setting up License"


The [Notification] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

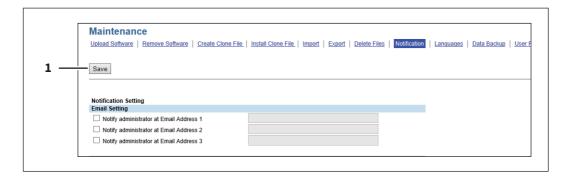


	Item name	Description
1	[Save] button	Stores settings for transmitting the report to the registered E-mail address.

 ☐ Setting up Email Setting



	Item name	Description
1	Notify administrator at Email Address 1	Register E-mail addresses for administrators who receive the notification. The notification is sent to the selected administrators by E-mail.
2	Notify administrator at Email Address 2	
3	Notify administrator at Email Address 3	

☐ Setting up System Message Notification Events

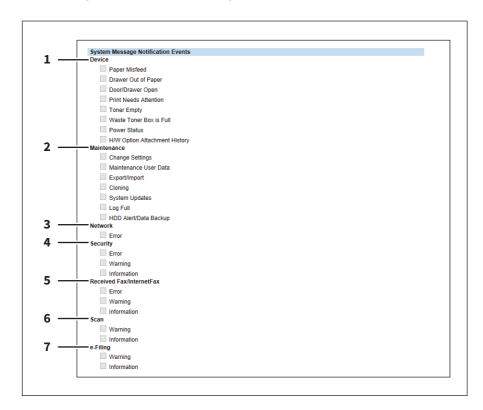


You can select the events to be notified of.

tenance	Paper Misfeed — Select this to be notified of paper misfeeds. Drawer Out of Paper — Select this to be notified when you are out of paper. Door/Drawer Open — Select this to be notified when a cover or drawer is open. Print Needs Attention — Select this to be notified when a job is printed. Toner Empty — Select this to be notified when a toner is empty. Waste Toner Box is Full — Select this to be notified when the waste toner box is full. Power Status — Select this to be notified when the power source status changes such as a power cut. H/W Option Attachment History — Select this to be notified when a hardware option is installed. Change Settings — Select this to be notified of setting changes. Maintenance User Data — Select this to be notified when user information is edited. Export/Import — Select this to be notified of an export or import. Cloning — Select this to be notified when a clone is made. System Updates — Select this to be notified of system updates. Log Full — Select this to be notified when the log has reached the maximum
tenance	Maintenance User Data — Select this to be notified when user information is edited. Export/Import — Select this to be notified of an export or import. Cloning — Select this to be notified when a clone is made. System Updates — Select this to be notified of system updates. Log Full — Select this to be notified when the log has reached the maximum
	size. HDD Alert/Data Backup — Select this to be notified when the backup or replacement of the internal storage device of this equipment is required due to its abnormality.
vork	Error — Select this to be notified of network errors.
rity	Error — Select this to be notified of security errors. Warning — Select this to be notified of security warnings. Information — Select this to be notified of security information.
ived Fax/InternetFax	Error — Select this to be notified of fax/Internet Fax reception errors. Warning — Select this to be notified of fax/Internet Fax reception warnings. Information — Select this to be notified of fax/Internet Fax reception information.
	Warning — Select this to be notified of the periodical deletion of scanned files or fax/Internet Fax transmission and reception data is successfully completed. Information — Select this to be notified of the deletion of scanned files or fax/Internet Fax transmission and reception data by the [Delete Files] function under the [Maintenance] menu is successfully completed.
ng	Warning — Select this to be notified when the available space in the e-Filing box is low or the preservation period of documents in the e-Filing box is expiring soon. Information — Select this to be notified when the e-Filing box is initialized.
n	g

e-Filing box operations are successfully completed. For information on how to set, see the **e-Filing Guide.**


☐ Setting up Job Notification Events

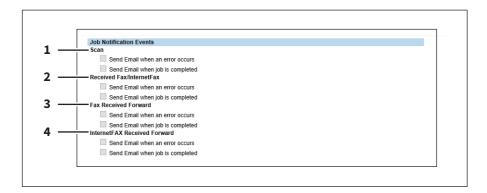

You can select jobs to be notified.

	Item name	Description
1	Scan	Send Email when an error occurs Send Email when job is completed
2	Received Fax/InternetFax	Send Email when an error occurs Send Email when job is completed
3	Fax Received Forward	Send Email when an error occurs Send Email when job is completed
4	InternetFAX Received Forward	Send Email when an error occurs Send Email when job is completed

 ☐ Setting up Application




You can select jobs to be notified.

	Item name	Description
1	Install	Notifies when the added application has been installed, uninstalled, or updated.
2	Start Up	Notifies when the application has failed to start or has been terminated abnormally.

□ Setting up License

 You can select jobs to be notified.



ſ		Item name	Description
	1	Install	Notifies when the added license has been installed, uninstalled, or updated.
	2	Term / Trial	Notifies when the trial term has been terminated.

■ Languages settings

You can specify the language for the touch panel of your equipment.

- P.352 "Setting up Install Language Pack"
- P.353 "Setting up Current Language Pack List"
- P.353 "Setting up Default Setting for PanelUI"

The [Languages] submenu can be accessed from the [Maintenance] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"




	ltem name	Description
1	[Save] button	Saves the registered language.

☐ Setting up Install Language Pack

You can install additional language packs.

 
P.353 "Setting up Current Language Pack List"



	Item name	Description
1	File Name	Select the language pack file to be installed.
		[Browse] button — Allows you to select the language pack file.
		[Import] button — Imports the selected language pack file.

☐ Setting up Current Language Pack List


Displays a list of installed language packs. You can delete unnecessary language packs.

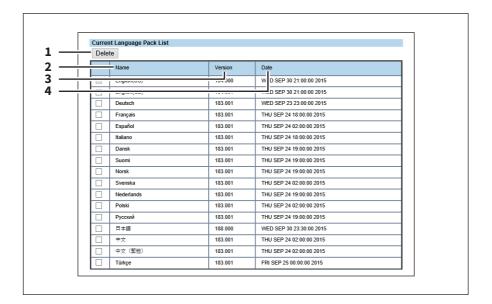

	Item name	Description
1	[Delete] button	Select unnecessary language packs and click the [Delete] button to delete them.
	Tip	
	You cannot delete [English(US)] or the language selected in [PanelUI Language].
2	Name	Displays the name of the language pack.
3	Version	Displays the version of the language pack.
4	Date	Displays the installed date of the language pack.

☐ Setting up Default Setting for PanelUI

 Select the display language for the touch panel.



	Item name	Description
1	PanelUI Language	Select the display language for the touch panel.
2	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
3	PanelUI Keyboard Layout	Select the panel keyboard layout displayed on the touch panel.


■ Data Backup

You can back up the data of the internal storage device embedded in your equipment.

The [Data backup] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"

■ Data Backup

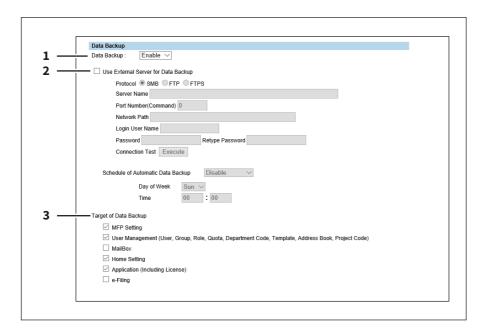

	Item name	Description
1	Data Backup	Select whether the Data backup function is enabled or disabled. [Enable] is set as the default.

	Item name	Description
	Use External Server for Data	-
2	Backup	Select this check box to store backed-up data of the internal storage device in an external server. Enter the following items to configure the external server to store the backed-up data of the internal storage device. Protocol
		Select the protocol to be used for storing the backed-up data of the internal storage device in an external server.
		• <u>SMB</u> — Select this to send the backed-up data of the internal storage device in an external server using the SMB protocol.
		• FTP — Select this to send the backed up data of the internal storage device
		in an FTP server.
		• FTPS — Select this to send the backed-up data of the internal storage device
		to an FTP server using FTP over SSL/TLS.
		Server Name When you select [FTP] as the protocol, enter an FTP server name or an IP address.
		You can enter up to 64 alphanumeric characters and symbols. Port Number(Command)
		When you select [FTP] as the protocol, enter the port number to be used for the controls. Generally, "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. You can enter a value in the range within from 0 to 65535 using numbers and hyphens (-). "-" is set as the default.
		Network Path When you select [SMB] as the protocol, enter the network path to the network folder.
		When you select [FTP] as the protocol, enter the directory in the specified FTP server.
		You can enter up to 128 alphanumeric characters and symbols. Login User Name
		Enter the log-in user name to access an SMB server or an FTP server, if required. When you select [FTP] as the protocol, an anonymous log-in is assumed if you leave this box blank. Enter the login user name to access an SMB server, an FTP server, or a NetWare server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and; (semicolon). A user name with only a single space is not possible.
		You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation),: (colon) and; (semicolon). A user name with only a single space is not possible. Password
		Enter the password to access an SMB server or an FTP server, if required. You can enter up to 32 alphanumeric characters, symbols and spaces. A single space only can also be entered. Retype Password
		Enter the same password again for a confirmation.
		Connection Test By clicking [Execute], a connection test is performed by using the specified network settings to check if the communications can be established.
<u></u>		and the communications can be communication.

	Item name	Description
2	Use External Server for Data Backup	Schedule of Automatic Data Backup Set the period of automatic backup. You can select the period from Disable, Weekly, Every 2 weeks and Monthly. • Day of Week: Select this to specify the day of week. • Time: Select this to specify the time. (24-hour display)
3	Target of Data Backup	Select the data to be backed up.

■ User Paper Type

You can set user paper types.




After you set user paper types, you need to restart the equipment.

Tip

- The [User Paper Type] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:
 - P.15 "Access Policy Mode"
 - P.335 "[Maintenance] Item List"
- For details on the registration of user paper types, consult your service representative.

■ User Paper Type

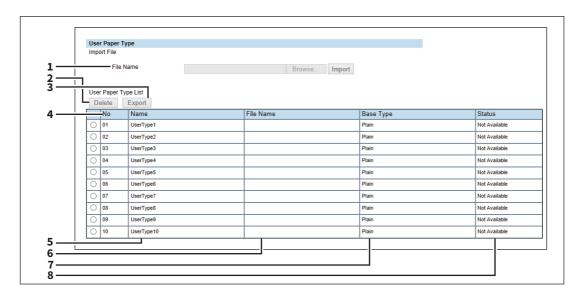

	Item name	Description
1	File Name	Select a file to install a user paper type.
		• [Browse] button — Select a file for the user paper type.
		• [Import] button — Click this button after you select a user type name in
		[User Paper Type List], so that the selected user paper type file is imported
		at the selected user type name.
2	[Delete] button	Click this button to delete the user paper type selected in [User Paper Type List].

	Item name	Description
3	[Export] button	Click this button to export the user paper type selected in [User Paper Type List].
	Tip	
	You can export the user paper t	ypes that have been imported with the [Import] button.
4	No	Indicates the number for the user paper type. You can import up to 10 files for user paper types.
5	Name	Shows the name of the user paper type. Click this to change the name.
6	File Name	Shows the file name for the user paper type.
7	Base Type	Shows the base paper type for the user paper type.
8	Status	Shows the status of the user paper type.

■ System Updates settings

You can update the system on your equipment.

You can also update the fax system when the FAX Unit is installed.

- P.357 "Setting up Install Software Package"
- P.358 "Setting up Current Software List"

Note

 
If a message appears to tell the data is invalid, download the updating file again.

Tip

The [System Updates] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

- P.15 "Access Policy Mode"
- P.335 "[Maintenance] Item List"


☐ Setting up Install Software Package



	Item name	Description
1	File Name	Select the software pack file to be installed. [Browse] button — Allows you to select the software pack file. [Install] button — Installs the selected software pack file.

☐ Setting up Current Software List

The screen displays information about the installed firmware, depending on the model.

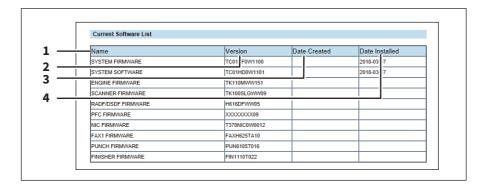

	Item name	Description
1	Name	Displays the name of the System Firmware.
2	Version	Displays the version of the System Firmware.
3	Date Created	Displays the Created date of the System Firmware.
4	Date Installed	Displays the installed date of the System Firmware.

■ Reboot settings

You can reboot your equipment.

Tip

The [Reboot] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Maintenance] menu:

P.15 "Access Policy Mode"

P.335 "[Maintenance] Item List"

Panel View

You can customize the appearance on the control panel by showing the necessary buttons and lists and hiding the forbidden buttons and lists.


Note

After you change the settings, you need to restart the equipment.

Tip

- The [Panel View] submenu can be accessed from the [Maintenance] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:
 - P.15 "Access Policy Mode"
 - P.373 "[Registration] ([Administration] tab) Item List"

• Hidden functions does not appear but they are not disabled.

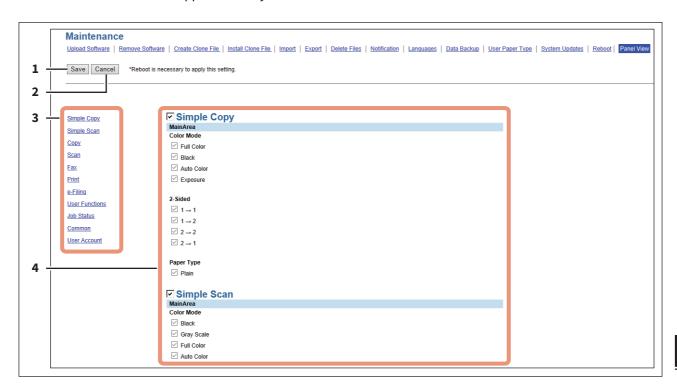

	Item name	Description
1	[Save] button	Saves the changed settings.
2	[Cancel] button	Cancels the changed settings.
3	Simple Copy Simple Scan Copy Scan Fax Print e-Filing User Functions Job Status Common User Account	Select the screen of the control panel that you want to customize.
4	Title Guidance MainArea	The target items are classified into categories. Select the check box for the item that you want to show on the selected screen of the control panel and clear the check box for the item that you want to hide.

[Maintenance] How to Set and How to Operate

stored P. P.	ection details procedures for maintaining this equipment. It covers backing up and restoring files, deleting files d in this equipment, and updating the software on TopAccess. 360 "About the maintenance functions" 361 "Uploading the client software"
	363 "Removing the client software" 364 "Deleting the data from local folder"
	365 "Setting the data from local folder
	367 "Importing and exporting"
	372 "Rebooting the equipment"
About	t the maintenance functions
	an carry out the following maintenance tasks in the [Maintenance] menu of the TopAccess access policy mode.
	loading the client software
An Th	administrator can upload client software that allows users to download to their computers from TopAccess. is maintenance feature is used to upload new versions of software in TopAccess. P.361 "Uploading the client software"
	moving the client software
An ma	administrator can remove client software that restricts users from downloading software from TopAccess. This intenance feature is used to disable specific software in TopAccess. P.363 "Removing the client software"
	cking up data in the internal storage device
An de	administrator can create backup files of the address book, mailboxes, and templates in the internal storage vice. This maintenance feature is used to create backup files before updating the system software or internal brage device replacement, etc.
	P.346 "Export settings"
	storing data from backup files
An ma	administrator can restore the address book, mailboxes, and templates data from the backup files. This intenance feature is used to restore the data after updating the system software or internal storage device
	placement, etc. P.344 "Import settings"
	leting files stored in the internal storage device
An Th	administrator can delete scanned data, transmission data, and reception data in the internal storage device. is maintenance feature must be operated periodically to maintain internal storage device space for future
	eration.
	P.364 "Deleting the data from local folder" tting up notification
An no	administrator can enable the E-mail notification function. The administrator can also specify which events to be tified of.
	P.365 "Setting up notification"
	porting or exporting address book data
ad	administrator can import address book data in a CSV file or XML file created by different applications. An ministrator can also export address book data in a CSV file or XML file for other applications. P.367 "Importing and exporting"
	booting the equipment
	administrator can reboot the equipment.
	P.372 "Rebooting the equipment"

■ Uploading the client software

An administrator can upload client software embedded in this equipment. Users can download the software on their computers using the TopAccess [Install Software] link.

- Installer (Setup files) for Client Utilities CD-ROM or Client Utilities/User Documentation DVD
- Macintosh PPD Files
- **UNIX Filters**

Note

Uploading new software overwrites the old version of software that had been uploaded.

The files for uploading are provided for each client software.

Driver Files

- Contact your dealer for information about obtaining driver files with the installer.
- You can create a driver file for uploading by compressing folders under "Client\Drivers" in the Client Utilities/User Documentation DVD in zip format.
- P.362 "Preparing a driver file for uploading"
- Macintosh PPD Files These files are stored in the "MacPPD\OSX\10_6-" folders in the Client Utilities/User Documentation DVD. The PPD file for duplex printing is stored in the "2-sided_default" folder, whereas the PPD file for simplex printing is stored in the "normal" folder.
- Unix Filters These filters are stored in the folder for each workstation in the "Admin\BW_Unix_Linux" folder (for black printing) or "Admin\Color_Unix_Linux" folder (for color printing) included in the Client Utilities/User Documentation DVD. The CUPS filter for duplex printing is stored in the "2-sided_default" folder whereas the one for simplex printing is in the "normal" folder.

Uploading new versions of client software in TopAccess

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Maintenance] menu and the [Upload Software] submenu.



The Upload Software submenu page is displayed.

Select the software that you are going to upload in the [Upload Files] box.



Driver Files	Uploads the client software installer files. See the following for how to create a driver file for uploading. P.362 "Preparing a driver file for uploading"
Macintosh PPD Files	Upload PD files for Mac OS X 10.6 and later. In addition, select this to upload the plug-in files used for Mac OS X 10.6 or later.
Unix Filters	Uploads tar files for unit workstations.
Driver Customization Packages	Uploads the custom package file for the printer driver.

Click [OK].

The bottom section in the page will be changed for selected software.

In each box displayed, click [Browse] to locate the setup files to be uploaded.



Note

At the left of each box, the file name will be displayed. Be sure to specify the same file for each box.

Click [Upload].

Specified files are uploaded in this equipment.

☐ Preparing a driver file for uploading

- Insert the Client Utilities/User Documentation DVD into the PC's CD-ROM or DVD-ROM drive.
- Open the folder where driver files and plug-in files are stored. They are stored in the "Client\Drivers" folder.
- Compress the folder in zip format to create the driver file for uploading.

Folder name	Name of the ZIP file to be created	Remarks
UNI	univ.zip	Universal printer driver
PS	ps3.zip	PS3 printer driver (PostScript)
XPS	xps.zip	XPS printer driver

Tip

- See the following for how to upload a driver file. P.361 "Uploading new versions of client software in TopAccess"
- Match the name of the ZIP file to be created with the file name displayed on the TopAccess screen. The file name is case sensitive. If the file name is different, you will not be able to upload it.

■ Removing the client software


You can remove client software from TopAccess so that it can no longer be installed from TopAccess.

- Removing the software from TopAccess
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Maintenance] menu and [Remove Software] submenu.



The Remove Software submenu page is displayed.

Select the check box of the software which you are going to remove and click [Delete].

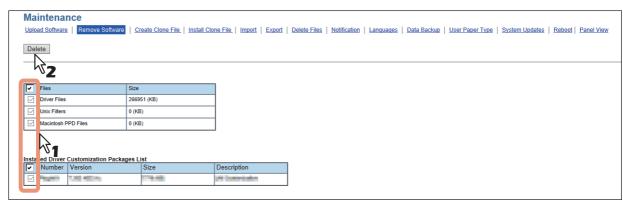


The selected software is deleted from this equipment.

■ Deleting the data from local folder

An administrator can delete information such as scanned data, transmission data, and reception data that are stored in the local folder using the Save as file function. It is recommended to delete the stored data periodically to maintain the internal storage device.


■ Deleting data

- Start TopAccess access policy mode.
 - P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Maintenance] menu and [Delete Files] submenu.

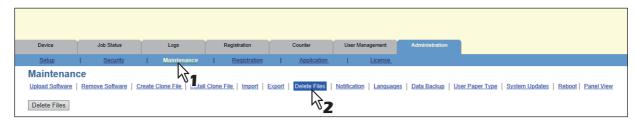

The Delete Files submenu page is displayed.

Select the check box of data that you want to delete and click [Delete Files].

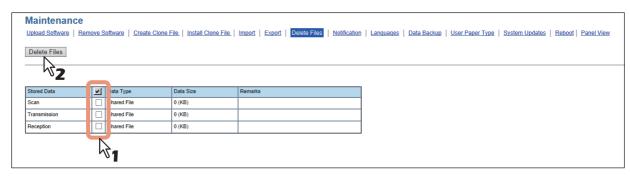

You can set the following in this page. P.348 "Delete Files settings"

The confirmation dialog box appears.

Click [OK].

The data are deleted.


■ Setting up notification

An administrator can configure notification to receive E-mail (mobile terminal can also be used) notifications when an error occurred or a job is complete.

Note


To enable the E-mail notification, the E-mail settings in the [Setup] menu page must be configured correctly. P.292 "Setting up E-mail settings"

- Setting up the notifications of system errors and events
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Maintenance] menu and [Notification] submenu.

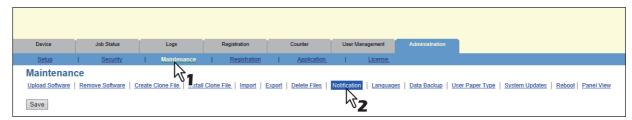


The Notification submenu page is displayed.

In Email Setting, select the check box [Notify administrator at Email Address 1 to 3] to enable the notifications, and enter the administrator's E-mail address where the notifications are to be sent.

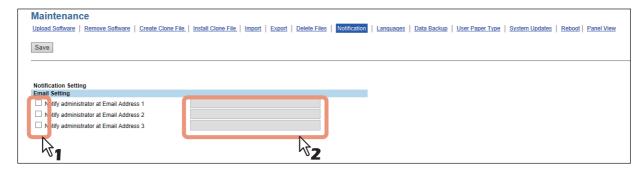

Select the check boxes of events you want to be notified in [System Message Notification Events], [Job Notification Events], [Application], or [License].

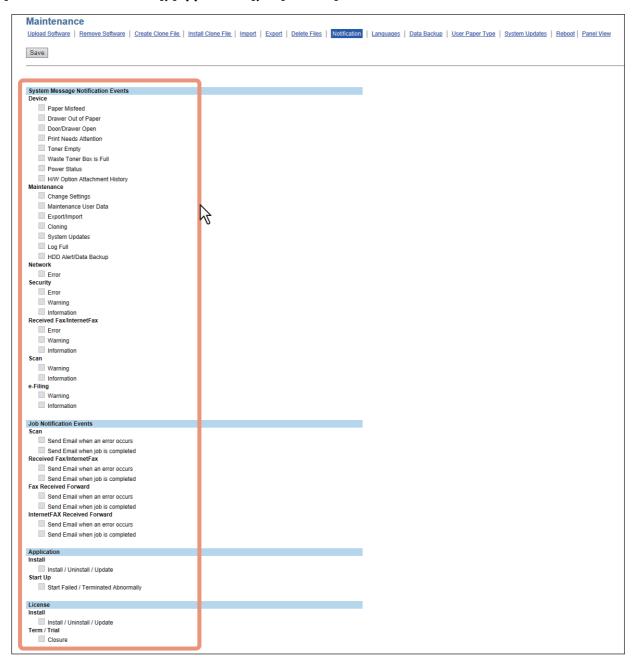

See the following for details of each event:

- P.349 "Setting up System Message Notification Events"
- P.351 "Setting up Job Notification Events"
- P.351 "Setting up Application"
- P.351 "Setting up License"

Click [Save].

Importing and exporting

You can import and export Address Book, MailBoxes, Template, and Combined (Template + Address Book + MailBoxes).

This section describes how to import and export Address Book. You can follow the same procedure to import and export MailBoxes, Template, and Combined (Template + Address Book + MailBoxes) except where you specify the file format of the export data.

P.367 "Importing the address book data"

P.370 "Exporting the address book data"

■ Importing the address book data

You can import address information exported from an address book on another equipment or a different address book program in the CSV or XML format.

The importing method of address book data is either adding imported data to the address book already registered in this equipment or deleting all the address book data already registered and replacing them with the imported data. It is recommended that you export an address book in the CSV or XML format and edit it when creating address book data.

Note

You cannot import an address book when it exceeds the number of characters specified on each item. Invalid characters are replaced with "!".

• Last Name: 32 characters • First Name: 32 characters

• Index: 64 characters

• Email Address: 192 alphanumerical characters

• Phone Number: 128 numbers • Tel Number 2: 128 numbers · Company: 128 characters • Department: 128 characters

Keyword: 256 characters

SUB: 20 characters

SID: 20 characters

• SEP: 20 characters

· PWD: 20 characters

Tip

The group data are not included in the imported address book data.

Importing address book data in the CSV/XML format

Note

Before the data are imported, confirm that no jobs in progress or under waiting remain by means of the [Job Status] tab. You cannot import data if there are these jobs.

If import is taking too long, try importing data after your equipment has entered sleep mode. P.24 "[Job Status] Tab Page Overview"

Start TopAccess access policy mode.

P.15 "Access Policy Mode"


Click the [Administration] tab.

3 Click the [Maintenance] menu and [Import] submenu.



The Import submenu page is displayed.


Select the import method.

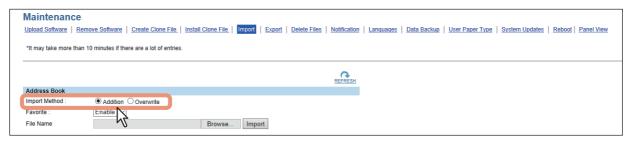


Addition — Select this to add the imported address book data into the address book already registered in this equipment.

Overwrite — Select this to delete all the address book data registered in this equipment and replace them with the imported address book data.

When using the Shared Address Book function, select "Local" or "Shared" as the import destination in [Address Book Type].

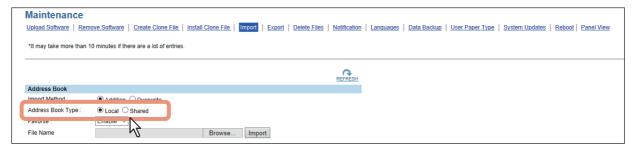

6 Specify whether or not to enable Favorite information of the Address Book.

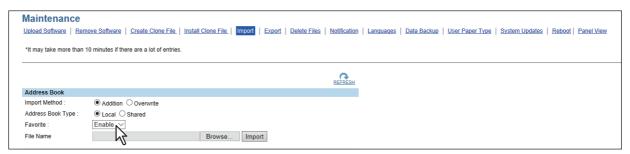


Click [Browse].




The Choose file dialog box appears.

Select the CSV/XML file that contains address book data and click [Open]. 8

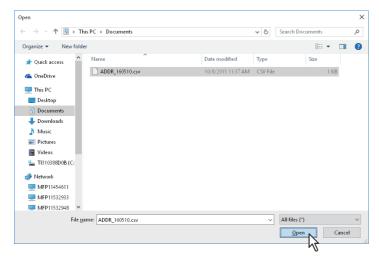

Click [Import].

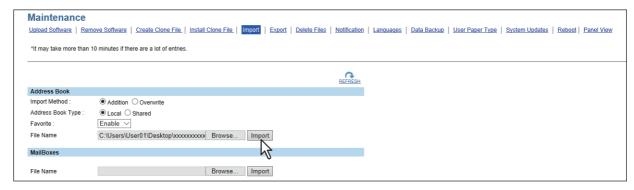

The data are imported to the address book.

■ Exporting the address book data


You can export address information for use in another TopAccess address book or another address book program.

Tip

The group data are not included in the exported address book data.

Exporting address book data in the CSV/XML format

- **Start TopAccess access policy mode.**P.15 "Access Policy Mode"
 - Click the [Administration] tab.
- Click the [Maintenance] menu and [Export] submenu.

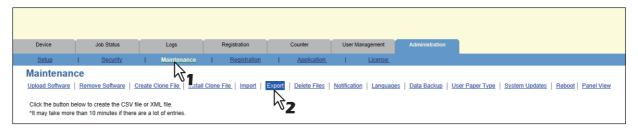


The Export submenu page is displayed.

When using the Shared Address Book function, select "Local" or "Shared" as the export data in [Address Book Type].



5 Select the file format of the address book.

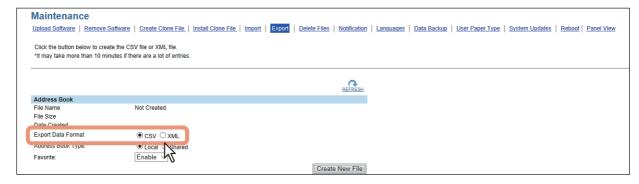


CSV — Select this to create the file in the CSV format

XML — Select this to create the file in the XML format.

Specify whether or not to enable Favorite information of the Address Book.



Click [Create New File].

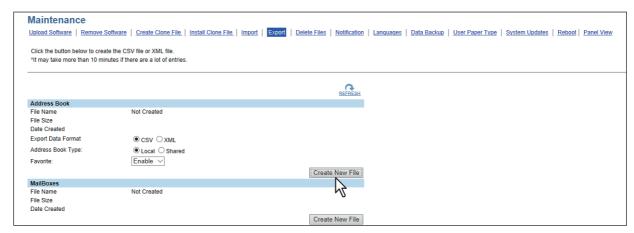


The exported file information is displayed.

Tip

If you previously exported address book data, the exported file link and information are displayed in the Address Book area. You can click the link to save the previously exported file.

Click the [File Name] link.

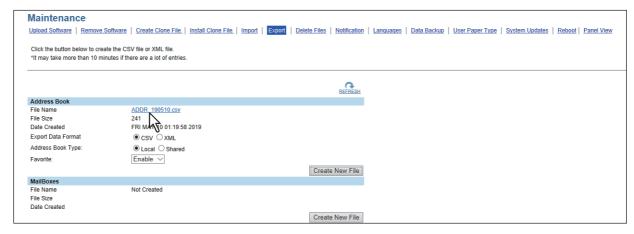

The file is downloaded.

■ Rebooting the equipment

An administrator can reboot the equipment. If rebooting is performed, warming-up may take longer than normally.

- Rebooting the equipment
- Start TopAccess access policy mode. P.15 "Access Policy Mode"
- Click the [Administration] tab.
- Click the [Maintenance] menu and [Reboot] submenu.



The Reboot submenu page is displayed.

Click [Reboot] to reboot the equipment.



The confirmation dialog box appears.

Click [OK].

The equipment is restarted.

Note

While the equipment is being restarted, the network will not be available. A message is displayed to inform you that it will reconnect to TopAccess after a while. Also, the touch panel on this equipment displays a message to inform you that the network is not ready. When this message disappears, TopAccess will once again be available.

[Registration] ([Administration] tab) Item List

- P.373 "Public Home"
- P.377 "Public Theme Settings"
- P.378 "Public Home Settings"
- P.379 "Default Home"
- P.379 "Default Home Settings"
- P.380 "Simple Screen Settings"
- P.381 "Image/Icon Management"
- P.382 "Home Data List"
- P.383 "Fax Received Forward and InternetFAX Received Forward settings"
- P.394 "Meta Scan"

Users who are granted administrator privileges in access policy mode can access the [Registration] menu from the [Administration] tab.

See the following pages for how to access it:

P.15 "Access Policy Mode"

■ Public Home


In Public Home, you can set the Home screen that is displayed when you press the [Home] button. You can register the functions used frequently as panel buttons.

P.374 "[Select Home Type] screen"

Tip

The [Public Home] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:


- P.15 "Access Policy Mode"
- P.373 "[Registration] ([Administration] tab) Item List"

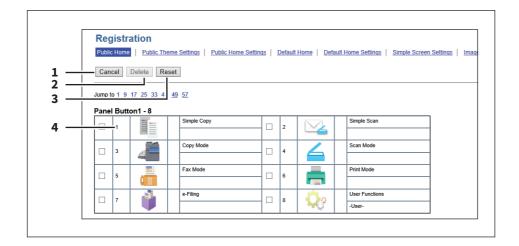

1 [Canc	el] button	Cancals the eneration
	-	Cancels the operation.
2 [Delet	e] button	Deletes the selected Panel Button.
3 [Reset	t] button	Deletes the current settings.
4 Panel	button list	Displays a list of panel buttons you can select for the shared home. Select the panel buttons you want to use. Click the link to edit the home type. P.374 "[Select Home Type] screen"


☐ [Select Home Type] screen

Select a home type to add to Public Home.

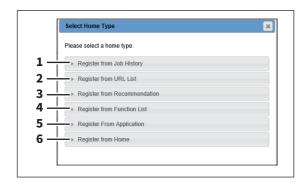


	Item name	Description
1	Register from Job History	Registers a panel button from the job history. P.374 "[Register from Job History] screen"
2	Register from URL List	Registers a panel button from the URL list. P.375 "[Register from URL List] screen"
3	Register from Recommendation	Registers a panel button from the recommendation list. P.375 "[Register from Recommendation] screen"
4	Register from Function List	Registers a panel button from the function list. P.375 "[Register from Function List] screen"
5	Register from Application	Registers a panel button from the application. □ P.376 "[Register from Application] screen"
6	Register from Home	Registers a panel button from the home screen. P.376 "[Register from Home] screen"

[Register from Job History] screen

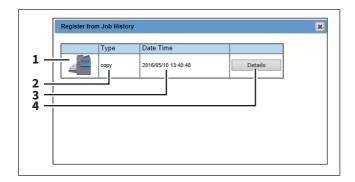


	Item name	Description
1	Button Icon	Displays the button icon.
2	Туре	Displays the job type.
3	Date Time	Displays the date and time that a job was performed.
4	[Details] button	Displays the job details.

[Register from URL List] screen

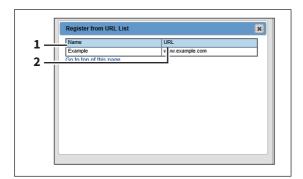


	Item name	Description
1	Name	Displays the name of the connection.
2	URL	Displays the URL.

[Register from Recommendation] screen

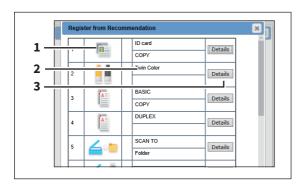

	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.
3	[Details] button	Displays the details for the function.

[Register from Function List] screen

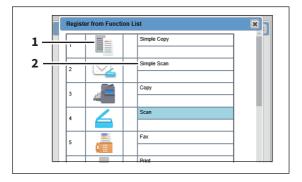

	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.

[Register from Application] screen



	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.

[Register from Home] screen


You can register from the Public Home or the User Home screen. The content displayed is the same for both.



	Item name	Description
1	Button Icon	Displays the button icon.
2	Name	Displays the name of the function.

■ Public Theme Settings


You can specify the theme of the shared home screen.

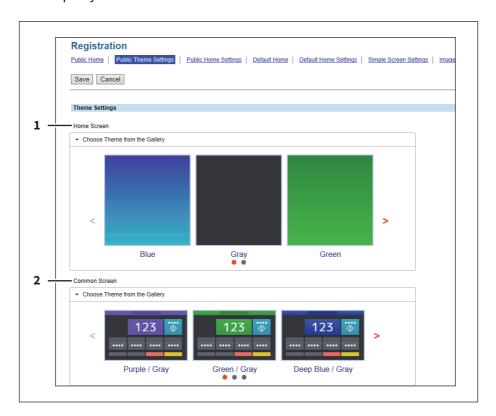

	Item name	Description
1	Home Screen	Specify the theme for Home screen. You can select the theme from a list if you select [Choose Theme from the Gallery].
2	Common Screen	Specify the theme for common screens. You can select the theme from a list if you select [Choose Theme from the Gallery].

■ Public Home Settings

You can specify the background, button size, and transparency of the shared home screen.

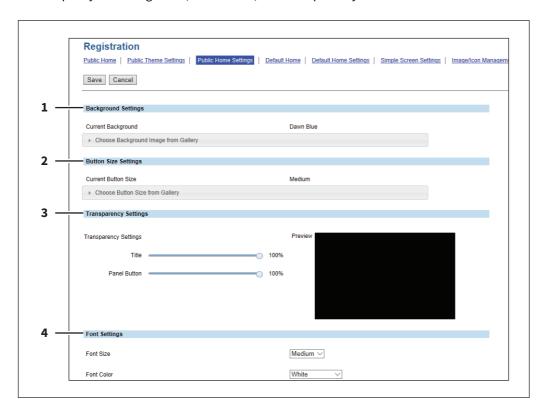

	Item name	Description
1	Background Settings	Specify the background of the home screen. You can select the background design from a list if you select [Choose Background Image from Gallery] at [Current Background].
2	Button Size Settings	Specify the button size. You can select the button size from a list if you select [Choose Button Size from Gallery] at [Current Button Size].
3	Transparency Settings	 Specify the transparency of the home screen. Title — You can specify the transparency of the title bar. Panel Button — You can specify the transparency of the buttons.
4	Font Settings	Specify the font used on the public home screen. • Font Size — You can specify the font size. • Font Color — You can specify the font color.


■ Default Home

You can use Default Home to specify the default status of the home screen that is displayed when you press the [Home] button on the control panel.

Tip

The [Default Home] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

- P.15 "Access Policy Mode"
- P.373 "[Registration] ([Administration] tab) Item List"

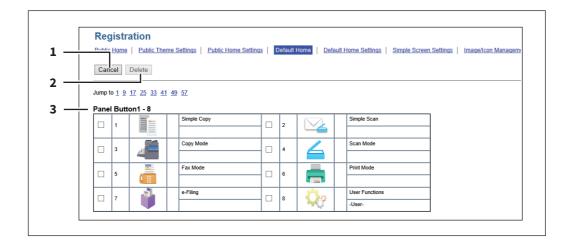

	Item name	Description
1	[Cancel] button	Cancels the operation.
2	[Delete] button	Deletes the selected panel button.
3	Panel button list	Displays a list of panel buttons you can select for the shared home. Select the panel buttons you want to use. Click the link to edit the home type. P.374 "[Select Home Type] screen"

■ Default Home Settings

You can specify the background, button size, and transparency of the initial home screen. Setting items are the same as [Public Home Settings].


P.378 "Public Home Settings"

■ Simple Screen Settings

You can select the background of the simple screen.

The [Simple Screen Settings] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

- P.15 "Access Policy Mode"
- P.373 "[Registration] ([Administration] tab) Item List"

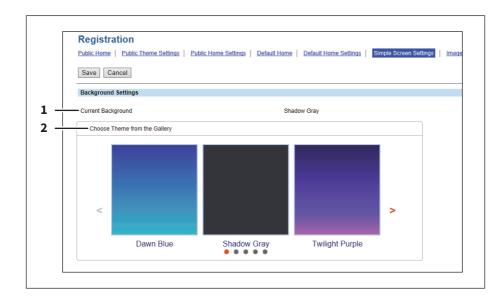


	Item name	Description
1	Current Background	Shows the name of the current background.
2	Choose Theme from the Gallery	Click this to show the list, so that you can select the background.

■ Image/Icon Management

You can manage background and icon images.

- P.381 "Panel Background Image"
- P.381 "Panel Icon Image"

☐ Panel Background Image

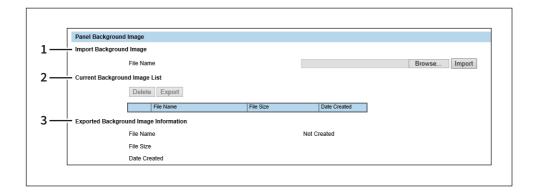


	Item name	Description
1	Import Background Image	Imports a background image.
		• [Browse] button — You can select an image file.
		• [Import] button — You can import the selected image file.
2	Current Background Image	Displays the list of the registered images and allows you to manage them.
	List	• [Delete] button — You can delete the selected image file.
		• [Export] button — You can export the selected image file.
3	Exported Background Image Information	Displays information on the selected image file.

You can import images in the following format.

- Image size: 1024 x 600 pixels (recommended size)
- Image format: png
- Color: 24 bits
- Maximum file size: 1.5MB

□ Panel Icon Image

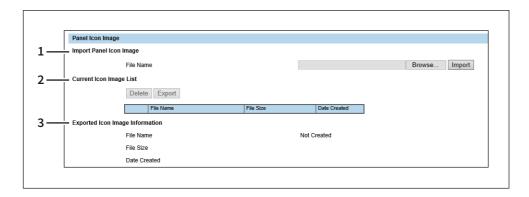

	Item name	Description
1	Import Panel Icon Image	Imports an icon image.
		• [Browse] button — You can select an image file.
		• [Import] button — You can import the selected image file.
2	Current Icon Image List	Displays the list of the registered images and allows you to manage them.
		• [Delete] button — You can delete the selected image file.
		• [Export] button — You can export the selected image file.
3	Exported Icon Image Information	Displays information on the selected image file.

You can import images in the following format.

- Image size: 193 x 128 pixels

- Image format: png - Color: 24 bits

- Maximum file size: 50KB

■ Home Data List

You can use Home Data List to display a list of all saved home screens and manage them.

The [Home Data List] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

P.15 "Access Policy Mode"

P.373 "[Registration] ([Administration] tab) Item List"



	Item name	Description
1	[Delete] button	Deletes the selected home screen.
2	[Delete All] button	Deletes all home screens.
3	Home screen list	Displays a list of registered home screens.

■ Fax Received Forward and InternetFAX Received Forward settings

- P.383 "Setting up Document Print (Fax/InternetFax Received Forward)"
- P.383 "Setting up Destination Setting (Fax/Internet Fax Received Forward)"
- P.384 "Setting up InternetFax Setting (Fax/Internet Fax Received Forward)"
- P.385 "Setting up Save as file Setting (Fax/InternetFAX Received Forward)"
- P.390 "Setting up Email Setting (Fax/InternetFAX Received Forward)"
- P.393 "Setting up Box Setting (Fax/InternetFAX Received Forward)"

Tip

The [Fax Received Forward]/[InternetFAX Received Forward] submenu can be accessed from the [Registration] menu on the [Administration] tab.

See the following pages for how to access it and information on the [Registration] menu:

- P.15 "Access Policy Mode"
- P.373 "[Registration] ([Administration] tab) Item List"

Note

- [Fax Received Forward] is available only when the Fax Unit is installed on this equipment.
- Two lines become available in [Fax Received Forward] by installing the 2nd Line for FAX Unit in the FAX Unit. It is possible to set the reception setting in each line.

■ Setting up Document Print (Fax/InternetFax Received Forward)

You can configure printing of forwarded documents.




	Item name	Description
1	Document Print	Always — Select this to always print forwarded document.
		ON ERROR — Select this to print the received document when an error
		occurred on all forwarding destinations. (For example, the document is not
		printed when the E-mail transmission only failed in a combined setting of
		Save as File and E-mail.)

☐ Setting up Destination Setting (Fax/Internet Fax Received Forward)

You can specify the destinations to which the received faxes or Internet Faxes are forwarded. You can only specify Email addresses as the destination.

You can specify the destination when you have selected [InternetFax] as the forwarding agent.


Recipient List

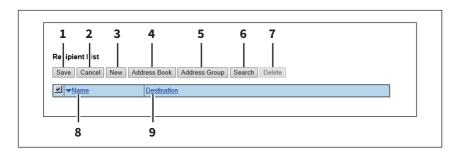

	Item name	Description
1	[Save] button	Saves recipient settings.
2	[Cancel] button	Cancels the settings.
3	[New] button	Displays a screen where you can register an E-mail address as the recipient. P.88 "[Create Destination information]/[Edit Destination information] screen"
4	[Address Book] button	Allows you to select a recipient from the address book.
5	[Address Group] button	Allows you to select an address book group as a destination.
6	[Search] button	Allows you to search a recipient from the address book. P.90 "[Search Contact] screen"
7	[Delete] button	Deletes the selected recipient.
8	Name	Displays the names registered to the address book.
9	Destination	Displays the E-mail addresses.

[Contact Property] screen

 
You can specify an E-mail address as the recipient.



	Item name	Description
1	[OK] button	Saves the recipient.
2	[Cancel] button	Cancels the settings.
3	[Reset] button	Deletes the entered E-mail address.
4	Destination	Enter the E-mail address.

☐ Setting up InternetFax Setting (Fax/Internet Fax Received Forward)


In the InternetFax Setting page, you can specify the content of the Internet Fax to be sent. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

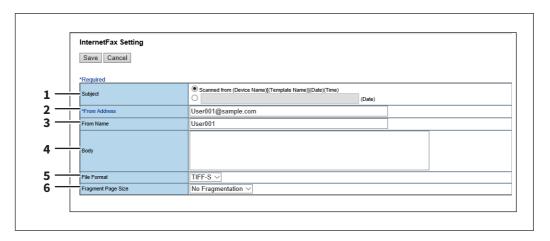

	Item name	Description
1	Subject	This sets the subject of the Internet Faxes. Select [Scanned from (Device Name) [(Template Name)] (Date) (Time)] to automatically apply the subject, or enter the desired subject in the box. If you manually enter the subject, the subject will be "(Subject) (Date)" by automatically adding the date.
2	From Address	Enter the E-mail address of the sender. When the recipient replies to a received document, the message will be sent to this E-mail address.
3	From Name	Enter the sender name of the Internet Fax.
4	Body	Enter the body message of the Internet Fax. You can enter up to 1000 characters (including spaces).
5	File Format	Select the file format of the scanned image. Only [TIFF-S] (TIFF-FX (Profile S)) format can be selected.
6	Fragment Page Size	Select the size of the message fragmentation.

☐ Setting up Save as file Setting (Fax/InternetFAX Received Forward)

In the Save as file Setting page, you can specify how and where a received document will be stored. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

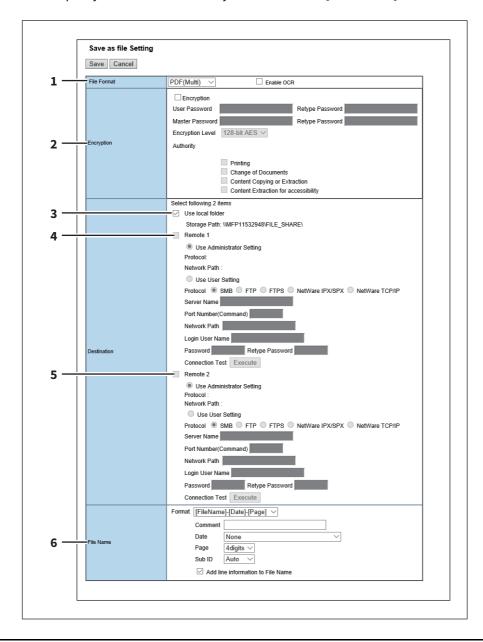

	Item name	Description
1	File Format	Select the file format to which the received document will be saved.
		• TIFF (Multi) — Select this to save scanned images as a Multi-page TIFF file.
		• TIFF (Single) — Select this to save scanned images separately as Single-
		page TIFF files.
		• PDF (Multi) — Select this to save scanned images as a Multi-page PDF file.
		• PDF (Single) — Select this to save scanned images separately as Single-
		page PDF files.
		• XPS (Multi) — Select this to save scanned images as a Multi-page XPS file.
		• XPS (Single) — Select this to save scanned images separately as Single-page XPS files.
		You can select whether to enable OCR by [Enable OCR].

Tip

- If the Forced Encryption setting is enabled, only PDF (Multi) and PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the **MFP Management Guide**.
- Files saved in an XPS format can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
- OCR processing is available only when the OCR Enabler is installed.

	Item name	Description
2	Encryption	Set this to encrypt PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.
		Encryption
		Select this if you want to encrypt PDF files. User Password
		00011 00011010
		Enter a password for opening encrypted PDF files. Master Password
		Enter a password for changing the Encrypt PDF setting.
		Encryption Level
		Select the desired encryption level.
		• 40-bit RC4 — Select this to set an encryption level to one compatible with
		Acrobat 3.0, PDF V1.1.
		• 128-bit RC4 — Select this to set an encryption level to one compatible with
		Acrobat 5.0, PDF V1.4.
		• 128-bit AES — Select this to set an encryption level to one compatible with
		Acrobat 7.0, PDF V1.6.
		Authority
		Select the desired types of authority for Encrypt PDF.
		• Printing — Select this to authorize users to print documents.
		Change of Documents — Select this to authorize users to change
		documents.
		• Content Copying or Extraction — Select this to authorize users to copy and
		extract the contents of documents.
		• Content Extraction for accessibility — Select this to enable the
		accessibility feature.

- If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the MFP Management Guide.
- The user password and the master password are not set at the factory shipment.
- Passwords must be from 1 to 32 one-byte alphanumerical characters.
- The user password must differ from the master password.

Note

These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the MFP Management Guide. Ask the administrator for resetting these passwords.

Destination — Use local folder | Select this to save a received document to the "FILE_SHARE" folder.

	Item name	Description
4	Destination — Remote 1	Select this check box to save a received document to Remote 1. How you can set this item depends on how you have set Remote 1 up in the [Save as file] submenu under the [Setup] menu. If you have selected [Allow the following network folder to be used as a destination], you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. If you have selected [Allow user to select network folder to be used as a destination], select [Use User Setting] and enter the following items to configure the destination to save files. Protocol Select the protocol to be used for uploading a received document to the network folder. • SMB — Select this to send a received document to the network folder using the SMB protocol. • FTP — Select this to send a received document to the FTP server. • FTPS — Select this to send a scanned file to the FTP server using FTP over SSL/TLS. • NetWare IPX/SPX — Select this to send a scanned file to the NetWare file server using the IPX/SPX protocol.
		Server Name When you select [FTP] as the protocol, enter the FTP server name or IP address to which a received document will be sent. For example, to send a received document to the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "192.168.1.1" in this box. When you select [NetWare IPX/SPX] as the protocol, enter the NetWare file server name or Tree/Context name (when NDS is available). When you select [NetWare TCP/IP] as the protocol, enter the IP address of the NetWare file server. Port Number(Command) Enter the port number to be used for controls if you select [FTP] as the protocol. Generally "-" is entered for the control port. When "-" is entered, the default port number, that is set for FTP Client by an administrator, will be used. If you do not know the default port number for FTP Client, ask your administrator and change this option if you want to use another port number. Network Path When you select [SMB] as the protocol, enter the network path to the network folder. For example, to specify the "users/scanned" folder in the computer named "Client01", enter "\\Client01\users\scanned". When you select [FTP] as the protocol, enter the directory in the specified FTP server. For example, to specify the "ftp://192.168.1.1/user/scanned" FTP folder in the FTP server, enter "user/scanned". When you select [NetWare IPX/SPX] or [NetWare TCP/IP] as the protocol, enter the folder path in the NetWare file server. For example, to specify the "sys\scan" folder in the NetWare file server, enter "\sys\scan". Login User Name Enter the login user name to access an SMB server, an FTP server, or a NetWare server, if required. When you select [FTP] as the protocol, an anonymous login is assumed if you leave this box blank. You can enter up to 32 alphanumerical characters and symbols other than <, >, " (double quotation), : (colon) and ; (semicolon). A user name with only a single space is not possible.

	Item name	Description
4	Destination — Remote 1	Password Enter the password to access an SMB server, an FTP server, or a NetWare server, if required. Retype Password Enter the same password again for a confirmation.
		[Execute] button Tests the connection using the specified network settings to check if the communications can be established.
5	Destination — Remote 2	Select this check box to save a received document to Remote 2. How you can set this item depends on how the 2nd Folder has been set up in the [Save as file] submenu in the [Setup] menu. If Remote 2 does not allow you to specify a network folder, you can only select [Use Administrator Setting]. The protocol and the network path are displayed below this item. If the Remote 2 allows you to specify a network folder, you can specify the network folder settings. See the description of the Remote 1 option for each item.
6	File Name	Format Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format. • [FileName]-[Date]-[Page]
		• [FileName]-[Page]-[Date]
		[Date]-[FileName]-[Page][Date]-[Page]-[Filename]
		• [Page]-[FileName]-[Date]
		• [Page]-[Date]-[FileName]
		• [FileName]_[Date]-[Page]
		Comment Enter the comment on the file. Date Select how you add "date and time" of the file name selected in [Format].
		• [YYYY][MM][DD][HH][mm][SS] — Year (4 digits), month, day, hour, minute
		and second are added.
		 [YY][MM][DD][HH][mm][SS] — Year (2 digits), month, day, hour, minute and second are added.
		• [YYYY][MM][DD] — Year (4 digits), month, and day are added.
		• [YY][MM][DD] — Year (2 digits), month, and day are added.
		• [HH][mm][SS] — Hour, minute and second are added.
		• [YYYY][MM][DD][HH][mm][SS][mm0] — Year (4 digits), month, day, hour,
		minute, second and random number (2 digits and "0") are added.
		• [None] — Date is not added.
		Page Select the number of digits of a page number applied to "Page" of the file name selected in [Format] from 3 to 6. [4digits] is set as the default. Sub ID
		This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [Auto]. [Auto] is selected by default. If [Auto] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name. Add line information to File Name
		Select this check box to add the incoming line information (Line 1, Line 2 $^{\star 1}$, and Internet Fax) to the file name. The "Add line information to File Name" check box is [ON] as the default.


*1 The 2nd line information is not available for the models without the 2nd line for FAX Unit.

Note

Up to 999 files that are sent from the same sender can be stored in the same destination. If 999 files that are sent from the same sender have already been stored in the specified destination, this equipment will print the received document from the same sender instead of storing them as files.

☐ Setting up Email Setting (Fax/InternetFAX Received Forward)

In the Email Setting page, you can specify the content of the E-mail document to be sent. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

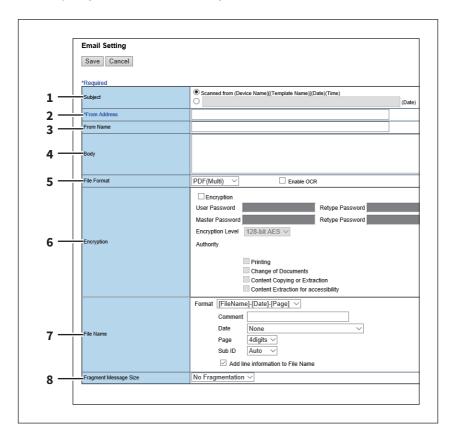

	Item name	Description
1	Subject	This sets the subject of the E-mail documents. Select [Scanned from (Device Name) [(Template Name)](Date)(Time)] to automatically apply the subject, or enter the desired subject in the box. If you manually enter the subject, the subject will be "(Subject) (Date)" by automatically adding the date.
2	From Address	Enter the E-mail address of the sender. When the recipient replies, the message will be sent to this E-mail address.
3	From Name	Enter the sender name of the E-mail document.
4	Body	Enter the body message of the E-mail document. You can enter up to 1000 characters (including spaces).

	Item name	Description
5	File Format	Select the file format to which the received document will be converted. • TIFF (Multi) — Select this to save scanned images as a Multi-page TIFF file. • TIFF (Single) — Select this to save scanned images separately as Single-page TIFF files. • PDF (Multi) — Select this to save scanned images as a Multi-page PDF file. • PDF (Single) — Select this to save scanned images separately as Single-page PDF files. • XPS (Multi) — Select this to save scanned images as a Multi-page XPS file. • XPS (Single) — Select this to save scanned images separately as Single-page XPS files.
		You can select whether to enable OCR by [Enable OCR].

Tip

- If the Forced Encryption setting is enabled, only the PDF (Multi) and the PDF (Single) are selectable for a file format. For the Forced Encryption function, refer to the MFP Management Guide.
- Files saved in an XPS format can be used in Windows 8.1 or later versions with Net Framework 3.0 installed.
- OCR processing is available only when the OCR Enabler is installed.

	Item name	Description
6	Encryption	Set this to encrypt PDF files if you have selected [PDF (Multi)] or [PDF (Single)] in the File Format setting.
		Encryption
		Select this if you want to encrypt PDF files. User Password
		Enter a password for opening encrypted PDF files.
		Master Password
		Enter a password for changing the Encrypt PDF setting.
		Encryption Level Select the desired encryption level.
		40-bit RC4 — Select this to set an encryption level to one compatible with
		Acrobat 3.0, PDF V1.1.
		• 128-bit RC4 — Select this to set an encryption level to one compatible with
		Acrobat 5.0, PDF V1.4.
		• 128-bit AES — Select this to set an encryption level to one compatible with
		Acrobat 7.0, PDF V1.6.
		Authority
		Select the desired types of authority for Encrypt PDF.
		• Printing — Select this to authorize users to print documents.
		Change of Documents — Select this to authorize users to change
		documents.
		• Content Copying or Extraction — Select this to authorize users to copy and
		extract the contents of documents.
		Content Extraction for accessibility — Select this to enable the
		accessibility feature.

- If the Forced Encryption setting is enabled, you cannot clear the [Encryption] check box. For the Forced Encryption function, refer to the MFP Management Guide.
- The user password and the master password are not set at the factory shipment.
- Passwords must be from 1 to 32 one-byte alphanumerical characters.
- The user password must differ from the master password.


Note

These passwords can be re-entered only by an authorized user. Users cannot change the settings of the [Encryption Level] box and the [Authority] box if they are not authorized to change the master password. The setting of the encryption will become available when either the user password or the master password is entered. For the details of the encryption setting, refer to the MFP Management Guide. Ask the administrator for resetting these passwords.

	Item name	Description
7	File Name	Format Select the format of the file name. Information such as file name, date and time or page number is added according to the selected format.
		• [FileName]-[Date]-[Page]
		• [FileName]-[Page]-[Date]
		• [Date]-[FileName]-[Page]
		• [Date]-[Page]-[Filename]
		• [Page]-[FileName]-[Date]
		• [Page]-[Date]-[FileName]
		• [FileName]_[Date]-[Page]
		Comment Enter the comment on the file. Date Select how you add "date and time" of the file name selected in [Format]. • [YYYY][MM][DD][HH][mm][SS] — Year (4 digits), month, day, hour, minute
		and second are added.
		• [YY][MM][DD][HH][mm][SS] — Year (2 digits), month, day, hour, minute and second are added.
		• [YYYY][MM][DD] — Year (4 digits), month, and day are added.
		• [YY][MM][DD] — Year (2 digits), month, and day are added.
		• [HH][mm][SS] — Hour, minute and second are added.
		• [YYYY][MM][DD][HH][mm][SS][mm0] — Year (4 digits), month, day, hour,
		minute, second and random number (2 digits and "0") are added.
		• [None] — Date is not added.
		Page Select the number of digits of a page number applied to "Page" of the file name selected in [Format] from 3 to 6. [4digits] is set as the default. Sub ID This equipment automatically adds a sub ID (identification number) to the name of a file that you are saving the same file name exists. You can select the number of digits of this sub ID from 4 to 6 or [Auto]. [Auto] is selected by default. If [Auto] is selected, a sub ID (4 to 6 digits, selected randomly) is added according to the status of the file name.
8	Fragment Message Size	Select the size of the message fragmentation.

☐ Setting up Box Setting (Fax/InternetFAX Received Forward)

In the Box Setting page, you can specify how a received document will be stored in the Box. You can specify the destination when you have selected [InternetFax] as the forwarding agent.

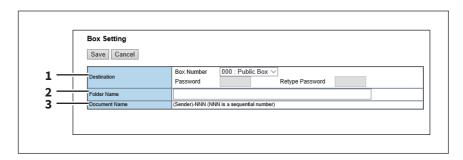

	Item name	Description
1	Destination	Specify the destination box number for e-Filing.
		Box Number
		Enter the Box number where a received document will be stored.
		Password
		Enter the password if the specified Box number requires a password.
		Retype Password
		Enter the same password again for a confirmation.
2	Folder Name	Enter the name of the folder where a received document will be stored.
3	Document Name	Display how the received document will be named. You cannot change the document name.

■ Meta Scan

You can set meta data which is attached to images scanned with the Meta Scan function.

You can register up to 100 extended field definitions.

- P.395 "[Extended Fields] screen"
- P.395 "Setting up Definition Information"
- P.395 "Setting up Extended Field settings"
- P.396 "[Extended Fields Properties] screen"
- P.398 "Definition Properties"


Tip

The [Extended Field Definition] submenu can be accessed from the [Registration] menu on the [Administration] tab. See the following pages for how to access it and information on the [Registration] menu:

- P.15 "Access Policy Mode"
- P.373 "[Registration] ([Administration] tab) Item List"

Note

The Meta Scan Enabler is required to use the Meta Scan function. For the details, contact your distributor or service technician.

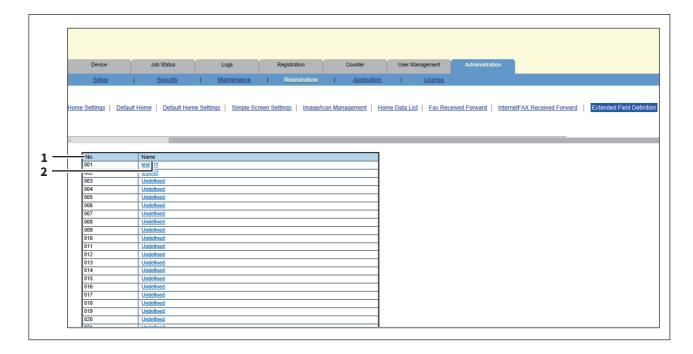

	Item name	Description
1	No.	Displays the extended field definition number.

	Item name	Description
2	Name	Displays the extended field definition name. Click a registered name to check and edit the existing extended field definition. P.395 "[Extended Fields] screen" Click [Undefined] to register a new extended field definition. P.398 "Definition Properties"

☐ [Extended Fields] screen


You can set the information entered from the touch panel when using meta scan. P.427 "Registering Extended Field Definition"

☐ Setting up Definition Information



	Item name	Description
1	[Edit] button	Allows you to edit the extended field definition. □ P.398 "Definition Properties"
2	[Reset] button	Allows you to delete the extended field definition.
3	No.	Displays the extended field definition number.
4	Name	Displays the extended field definition name.

☐ Setting up Extended Field settings

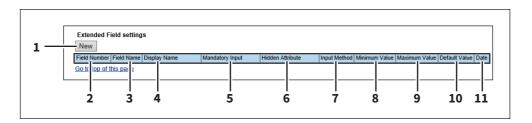


	Item name	Description
1	[New] button	Allows you to add a extended field property. P.396 "[Extended Fields Properties] screen"
2	Field Number	Displays the extended field property number.
3	Field Name	Displays the extended field property name.
4	Display Name	Displays the caption of the extended field property for the display on the touch panel.
5	Mandatory Input	Displays whether the extended field property is a mandatory entry or not.
6	Hidden Attribute	Displays whether the extended field property is a hidden item on the touch panel.

	Item name	Description
7	Input Method	Displays the type of the extended field property.
8	Minimum Value	Displays the minimum value for the extended field property.
9	Maximum Value	Displays the maximum value for the extended field property.
10	Default Value	Displays the default value for the extended field property.
11	Date	Displays the default date for the extended field property.

☐ [Extended Fields Properties] screen

You can register up to 25 extended field properties. P.431 "Registering templates for Meta Scan"

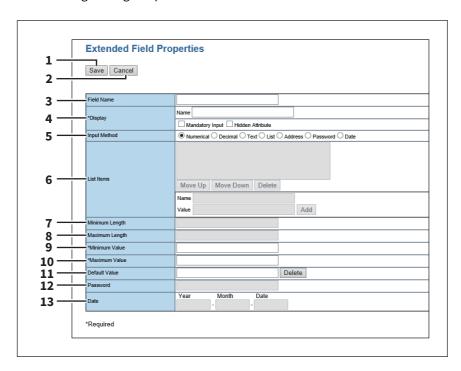

	Item name	Description
1	[Save] button	Creates an extended field property with the entered data.
2	[Cancel] button	Cancels the settings.
3	Field Name	Specify the extended field name.
4	Display	Specify how to display the extended field on the touch panel. Name Enter the caption of the extended field name for the display on the touch panel. You can enter up to 256 characters. Enter the Box number where a received document will be stored. Mandatory Input Select this check box if the extended field is a mandatory entry item. Hidden Attribute Select this check box if the extended field is a hidden item on the touch panel.


	Item name	Description
5	Input Method *	Select the type of an extended field.
	•	• Numerical — Select this to create an extended field as an integer value.
		Decimal — Select this to create an extended field as a decimal value.
		• Text — Select this to create an extended field as a character string.
		• List — Select this to create an extended field as a list selection.
		• Address — Select this to create an extended field as an address.
		• Password — Select this to create an extended field as a password.
		Date — Select this to create an extended field as a date.
6	List Items	Specify list items to be selected for the extended field. The registered list items are listed in the List items. When you register a list item, enter [Name] and [Value], and then click [Add]. If you select an item and click [Move Up], the selected item moves up in the list. Click [Move Down] to move it down. Select an item and click [Delete] to delete an unnecessary item from the list. Name Enter the name of the item. Value
		Enter a value or text to be applied for the selected item.
	 You cannot exceed the total You cannot use a semicolon	number of characters displayable in the List Items (127). in [Name] or [Value].
7	Minimum Length	Specify the minimum number of characters that can be entered in the extended field if the field is a character string.
8	Maximum Length	Specify the maximum number of characters that can be entered in the extended field if the field is a character string.
9	Minimum Value	Specify the minimum numerical value that can be entered in the extended field if the field is a numerical value.
10	Maximum Value	Specify the maximum numerical value that can be entered in the extended field if the field is a numerical value.
11	Default Value	Specify the default value for the extended field.
12	Password	Specify the default password for the extended field if the field is a password.
13	Date	Specify the default date for the extended field if the field is a date.

The following shows the types and settable items of an extended field for each [Input Method]. (*) is displayed for mandatory setting items.

Input method (Extended field type)	Mandatory setting items	Optional setting items
Numerical value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999 to 999,999,999,999	[Default Value]
Decimal value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999.999999 to 999,999,999,999.999999 Contact your service technician if you want to input a value with more than two decimal places.	[Default Value]
Text	[Maximum Length], [Minimum Length] Settable value: 0 to 256	[Default Value]

Input method (Extended field type)	Mandatory setting items	Optional setting items
List	[List Items] You can register up to 30 [List Items]. You can set from 1 to 126 characters in [Name]. You can set from 1 to 126 characters in [Value]. However, the total number of characters set in	[Default Value] Select from the registered selection items.
Address	[Name] and [Value] must be from 2 to 127. None	[Default Value]
Password	None Settable value: 0 to 256	[Default Value]
Date	None	[Default Value]

□ Definition Properties

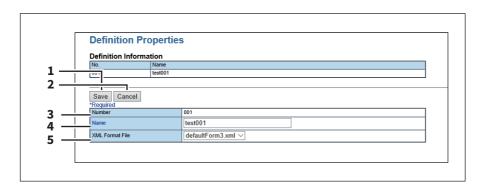

	Item name	Description
1	[Save] button	Creates an extended field definition with the entered data.
2	[Cancel] button	Cancels adding new.
3	Number	Displays the extended field definition number.
4	Name	Specify the extended field definition name.
5	XML Format File	Select the XML format file for meta data.

[Registration] ([Administration] tab) How to Set and How to Operate

You can register relay transmissions of received faxes/Internet Faxes in the [Registration] menu in the TopAccess access policy mode.

 Fax Received Forward, Internet Fax Received Forward An administrator can register an agent which forwards all received faxes/Internet Faxes to a specified destination. This enables the administrator to check all faxes received by this equipment.

The Fax Received Forward can be registered only when the Fax Unit is installed.

- Extended Field Definition
 - P.394 "Meta Scan"
- XML format file
 - P.423 "Editing XML format file"
 - P.427 "Registering XML format file"

■ Registering Fax and Internet Fax received forward

P.399 "Registering Fax and Internet Fax received forward"

You can forward received faxes and Internet Faxes to a specified address using fax received forward and Internet Fax received forward functions. You can check all faxes and Internet Faxes received by this equipment using these functions.

- P.399 "Registering the Fax or Internet Fax received forward"
- P.402 "Setting up Destination Setting (Fax/Internet Fax Received Forward)"

Note

- You can also forward using the F-code communications function on this equipment when communicating with a fax which supports the F-code communications function. You need to create a mailbox in advance. Also, you can use the TSI (sender information) forwarding function by making the counterpart fax number as a box number and forwarding documents in the box (mailbox) to a specified saving location.
 - P.115 "Managing mailboxes"
- The Fax Received Forward can be registered only when the Fax Unit is installed.
- When the 2nd line board is installed, the received faxes are forwarded to the specified destinations according to the Fax Received Forward setting regardless of whether the faxes are received through line 1 or line 2.

The received fax and Internet Faxes can be transmitted to the following destinations:

- Other Internet Fax devices
- Local folder in this equipment or network folders
- E-mail addresses
- · Box in this equipment

■ Registering the Fax or Internet Fax received forward

Tip

The procedures to register the Fax Received Forward and Internet Fax Received Forward are almost the same. This section describes how to register in both cases.

Start TopAccess access policy mode. P.15 "Access Policy Mode"

Click the [Administration] tab.

Click the [Registration] menu. Click the [Fax Received Forward] submenu to register the Fax 3 Received forward, or click the [InternetFAX Received Forward] submenu to register the Internet Fax Received forward.



- When you click the [Fax Received Forward] submenu, the Fax Received Forward submenu page is displayed.
- When you click the [InternetFax Received Forward] submenu, the Internet Fax Received Forward submenu page is displayed.

Select the desired agents.




InternetFax	Forwards received faxes or received Internet Faxes to another Internet Fax device. This agent can be combined with the Save as file agent or Store to e-Filing agent.
Save as file	Forwards received faxes or received Internet Faxes to a shared folder on the equipment or a network folder. This agent can be combined with another agent.
Email	Forwards received faxes to an E-mail address. This agent can be combined with the Save as file agent or Store to e-Filing one.
Store to e-Filing	Forwards received faxes to e-Filing on the equipment. This agent can be combined with another one.

Note

The image quality of the file that is stored by Save as file, E-mail, and Store to e-Filing is different from the output of the received fax when it is printed.

Select whether or not to print the forwarded documents in the [Document Print] box. 5

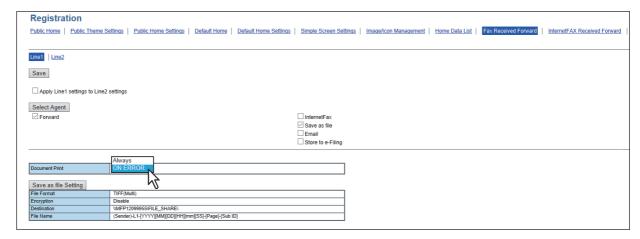

Always	Select this always to print forwarded documents.
ON ERROR	Select this to print the received document when an error has occurred on all forwarding destinations. (For example, the document is not printed when E-mail transmission only failed in a combined setting of save as file and E-mail.)

Click each button displayed in the page to specify or edit the associated properties.

[Destination Setting] [TO: Destination Setting] [CC: Destination Setting] [BCC: Destination Setting]	Specify the destination. This can be set only when registering the Internet Fax, or Email agent. P.402 "Setting up Destination Setting (Fax/Internet Fax Received Forward)"
[InternetFax Setting]	Specify how the Internet Fax is transmitted. This can be set only when registering the Internet Fax agent. P.384 "Setting up InternetFax Setting (Fax/Internet Fax Received Forward)"
[Email Setting]	Specify how the documents are transmitted as E-mail messages. This can be set only when registering the Email agent. P.390 "Setting up Email Setting (Fax/InternetFAX Received Forward)"
[Save as file Setting]	Specify how the documents are saved in a shared folder on this equipment or a network folder. This can be set only when registering the Received to File agent. P.385 "Setting up Save as file Setting (Fax/InternetFAX Received Forward)"
[Box Setting]	Specify how the documents are saved in e-Filing. This can be set only when registering the Store to e-Filing agent. P.393 "Setting up Box Setting (Fax/InternetFAX Received Forward)"

After configuring the desired properties, click [Save].

The Fax or Internet Fax Received Forward properties are registered.

☐ Setting up Destination Setting (Fax/Internet Fax Received Forward)

In the Recipient List page, you can specify the destinations to which the received faxes or Internet Faxes will be transmitted. You can only specify an E-mail address as the destination.

 
You can specify the destinations by entering E-mail addresses manually, selecting destinations from the address book, selecting destination groups from the address book, or searching for destinations in the LDAP server.

- P.402 "Entering the destinations manually"
- P.402 "Selecting the destinations from the address book"
- P.403 "Selecting the groups from the address book"
- P.404 "Searching for destinations in the LDAP server"
- P.405 "Removing the destinations from the Recipient List"

Entering the destinations manually

Using this method, you can add a destination manually to the Recipient List.

- 1 Click [Destination Setting] to open the Recipient List page.
- **7** Click [New].



The Contact Property page is displayed.

2 Enter the E-mail address of the destination, in the [Destination] box.



∧ Click [OK].

Entered destination is added to the Recipient List page.

Repeat step 2 to 4 to add all destinations you require.

Tip

You can remove destinations that you have added to the Recipient List before saving the destination settings.

P.405 "Removing the destinations from the Recipient List"

6 Click [Save].



The contacts are added as destinations.

Selecting the destinations from the address book

By this method, you can select destinations from the address book.


1 Click [Destination Setting] to open the Recipient List page.

Click [Address Book]. 2



The Address Book page is displayed.

Select the [Email] check boxes of users you want to add as the destinations.

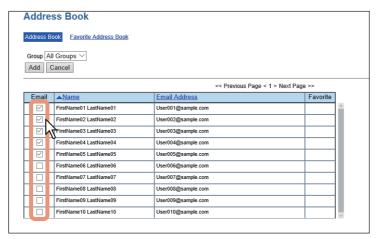

If you want to sort the Recipient List by a specific group, select the desired group name in the [Group] box.

Click [Add].

The selected destinations are added to the Recipient List page.

You can remove destinations that you have added to the Recipient List before saving the destination settings. P.405 "Removing the destinations from the Recipient List"

Click [Save]. 5

 


The contacts are added as destinations.

Selecting the groups from the address book


By this method, you can select groups from the address book.

- Click [Destination Setting] to open the Recipient List page.
- Click [Address Group].



The Address Group page is displayed.

Select the [Group] check boxes that contain the desired destinations. 3

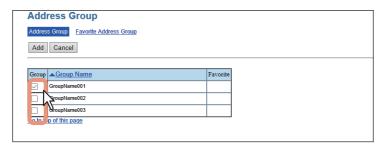

Click [Add].

All destinations in the selected groups are added to the Recipient List page.



You can remove destinations that you have added to the Recipient List before saving the destination settings. P.405 "Removing the destinations from the Recipient List"

Click [Save].

 


The contacts are added as destinations.

Searching for destinations in the LDAP server


You can search for destinations in the registered LDAP server. You can also search for destinations in the address book on this equipment.

- Click [Destination Setting] to open the Recipient List page.
- Click [Search].



The Search Contact page is displayed.

Select the directory service name that you want to search for in the [Directory Service Name] box, and enter the search terms in the boxes that you want to search.

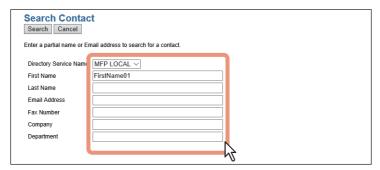

Note

Enter a search string in [Email Address] or [Fax Number] to search a destination using an LDAP server. A search will not be carried out correctly if you enter a search string in other columns.

- If you select the model name of this equipment at the [Directory Service Name] box, you can search for destinations in the address book of this equipment.
- TopAccess will search for destinations which match the entries.
- Leaving the box blank allows wild-card searching. (However, you must specify at least one.)

Click [Search].

A search for the destination using the LDAP server starts. When the search is complete, the Search Address List page will display the results.

Select the [Email] check boxes of users you want to add.

Click [Research] to return to step 3 so that you can change the search criteria and execute the search again.



Note

The value of [company] and [department] will depend on the settings determined by the administrator.

Click [Add].

The selected destinations are added to the Recipient List page.

You can remove destinations that you have added to the Recipient List before saving the destination settings. P.405 "Removing the destinations from the Recipient List"

Click [Save].



The contacts are added as destinations.

Removing the destinations from the Recipient List

Select the check boxes of the destinations that you want to remove from the Recipient List, and click [Delete].



The selected destinations are removed from the Recipient List.

Click [Save].

[Application] Item List

P.406 "Application List"

P.408 "Settings"

Users who have been granted administrator authority in access policy mode can access the [Application] menu from the [Administration] tab.


See the following for details on accessing.

P.15 "Access Policy Mode"

■ Application List

Displays the application list that is already installed.

You can manage operations for each application such as opening/closing, setting the startup method, and uninstalling/installing.

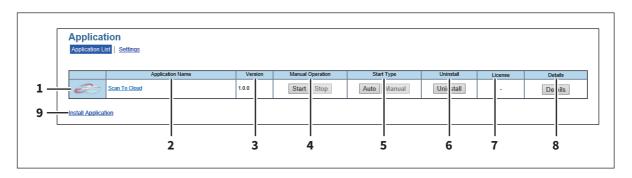

	Item name	Description
1	Application Icon	Displays the application icon.
2	Application Name	Displays the application name. Click the application name to display the application settings page.
3	Version	Displays the application version.
4	Manual Operation	Allows you to start and stop the application manually. This is displayed only when the application package includes the background application.
		• Start — Select this to start the application.
		• Stop — Select this to close the application.
5	Start Type	Changes the applications startup method. This is displayed only when the application package includes the background application. • Auto — Select this to start the application automatically after it has been
		installed or the MFP starts.
		Manual — Select this to start the application manually.
6	Uninstall	Uninstalls the application. Click this button to display the uninstallation page for the application.
7	License	 Displays the installation status of license files to utilize applications. - — Installation of a license file is not necessary. Invalid — An application cannot be used since its license file is not installed. Contact your service technician if you want to use an application with an invalid license. Valid — An application can be used since its license file is installed.

	Item name	Description
8	Details	Displays the Application Details screen. By clicking this button, Name, Version, Framework Version, Application ID, Product ID, Authentication, License, Status, Summary, Vendor Name, URL, License Agreement, ReadMe, and Language of an application are displayed. You can set the department or user authentication at the startup of each application. Click [Details] to open [Details] screen, select [Enable] at [Authentication], and click [Save], so that the authentication screen appears at the startup of the application. Select [Disable] and click [Save] not to show the authentication screen. Click [Cancel] to cancel the setting. This [Authentication] setting works at the next startup of the application. It does not appear for the background application.
	 Tip To authenticate users at the application startup, enable "User Authentication According To Function". P.309 "Setting up User Authentication Setting" You cannot change [Authentication] for applications that require the authentication and applications that do not have the authentication setting. The contents of the license agreement are displayed by clicking "Display" in License Agreement. "Language" is displayed when the application contains the language pack. 	
9	Install Application	Installs the application. Click this link to display the installation page for the application. You can

- Tip
- Installing or using application(s) constitutes your acceptance of the terms and conditions. If you do not accept those terms and conditions, uninstall the application(s). Terms and conditions for each application is available through application details link.

specify the file name for the distribution package on this page, and then

• You need to acquire the application's distribution package in advance.


install.

- When installing multiple application packages, install them one at a time.
- If a message appears to tell the framework version is old when you install an application, update the system of this equipment. For details, contact your service technician.

■ Settings

You can perform operations such as application settings, proxy settings, and debugging levels for all of the applications that are installed.


- P.408 "Application Setting"
- P.409 "Proxy Setting"
- P.409 "Install Language Pack"

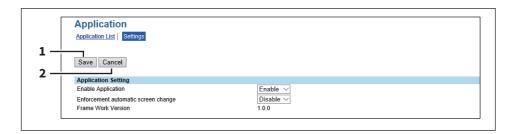

	Item name	Description
1	[Save] button	Saves changes made to the settings.
2	[Cancel] button	Cancels changes made to the settings.

□ Application Setting

 
You can enable or disable application functions.



	Item name	Description
1	Enable Application	Sets the application to enable/disable.
		Enable — Select this to enable application.
		Disable — You cannot install, uninstall, start, or make settings for the
		application on the [Application List] screen. Also, you cannot start the
		application from the MFP's touch panel.
2	Enforcement automatic screen change	When a warning occurs during the Home application, set whether or not to automatically switch to the [JOB STATUS] screen.
3	Frame Work Version	Displays the frame work version.
4	Home Button Auto Registration	Sets whether or not automatically to register a button of an application on the Home screen when it is installed.

□ Proxy Setting

 You can set a proxy for the application.




	Item name	Description
1	Host Name	Enter a host name for the proxy server.
2	Port Number	Enter a port number for the proxy server.
3	Exception URL	Enter URLs that proxy server is not used by dividing them using semicolons (;).

Note

The proxy settings for Proxy Setting and the "EWB (Embedded Web Browser) function" for application functions have a mutual effect on each other, so that when one is changed the other is also changed.

☐ Install Language Pack

 You can install the language packs for the applications.



	Item name	Description
1	File Name	Select the language pack file that you install.
		• [Browse] button — Allows you to select the language pack file.
		• [Import] button — Imports the selected language pack file.

[License] Item List

- P.410 "License List"
- P.411 "Activate"

Note

- Before you install licenses, make sure that the equipment is not in operation.
- If you have any unclear issues about licenses, contact your service technician or representative.


Tip

Users who are granted administrator privileges in access policy mode can access the [License] menu from the [Administration] tab. See the following pages for how to access it:

P.15 "Access Policy Mode"

■ License List

You can check the list of the installed licenses.

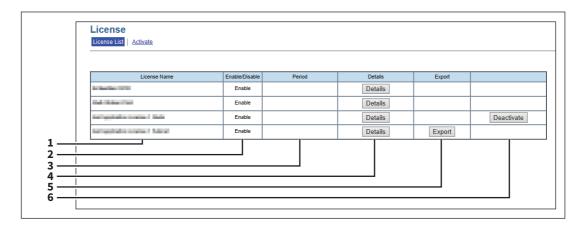

	Item name	Description
1	License Name	Displays the license name.
2	Enable/Disable	Displays the status (Enable or Disable) of the license.
3	Period	Displays the validation period of the license.
4	Details	Displays the details on the license.
5	Export	Exports the license file.
6	Deactivate	Deactivates the license.

■ Activate

You can activate the license with the activation key or the license file.



	Item name	Description
1	Activation Key	Enter the acquired activation key to activate the license.
2	License File	Click [Browse] and select the license file to activate the license.
3	Import	Imports the selected license file.

[My Account] Tab Page

Using TopAccess, end users can display their own account information	
[My Account] Tab Page Overview	414
[My Account] Item list	

[My Account] Tab Page Overview


The [My Account] tab is displayed if [User Authentication] is enabled in the [Administration] tab under [Security] - [Authentication] - [User Authentication Setting].

It displays the account information of the user who is accessing TopAccess. Also, you can change the display language and keyboard layout on the touch panel.

P.414 "[My Account] Item list"

■ [My Account] Item list

- P.416 "[Change Password] screen"
- P.416 "[Home Screen setting] screen"
- P.417 "[View Home] screen"
- P.418 "[Theme Settings] screen"
- P.419 "[Settings] screen"
- P.420 "[Confirm Permission] screen"

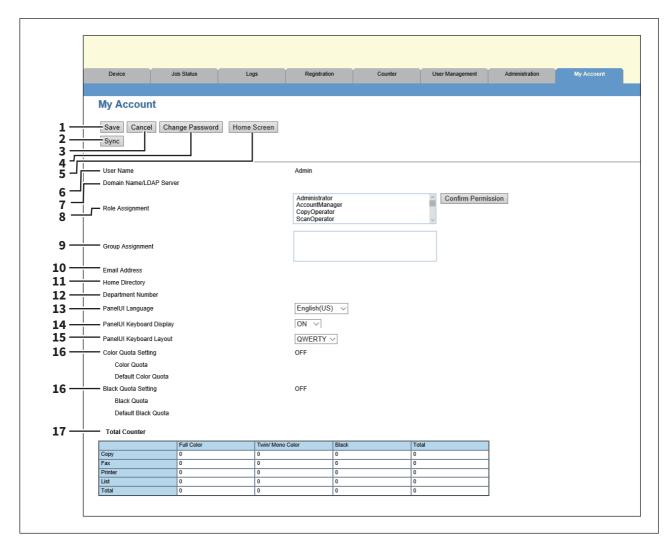


	Item name	Description
1	[Save] button	Saves the content of the account.
2	[Sync] button	When this printer is set as the primary MFP in [Shared Setting] from [Setting up User Authentication Setting], you can synchronize the user information on the printer with other secondary MFPs. P.161 "[Shared Settings] Item list <access mode="" policy="">" P.309 "Setting up User Authentication Setting"</access>
3	[Cancel] button	Cancels the operation.

	Item name	Description
4	[Change Password] button	Changes the password of the user who is accessing TopAccess. P.416 "[Change Password] screen"
5	[Home Screen] button	Click the [Home] button on the control panel and perform the settings on the Home screen. In the [My Account] tab, set the Home screen of the user who is accessing TopAccess. P.416 "[Home Screen setting] screen"
6	User Name	Displays the name of the user who is accessing TopAccess.
7	Domain Name/LDAP Server	Displays the domain name or LDAP server of the user who is accessing TopAccess.
8	Role Assignment	Displays the role assigned to the user who is accessing TopAccess. Click the [Confirm Permission] button to display the [Confirm Permission] screen and check the detailed role information. P.420 "[Confirm Permission] screen"
9	Group Assignment	Displays the group assigned to the user who is accessing TopAccess.
10	Email Address	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the Email address of the user or select it from the address book. You can enter up to 192 half-width alphanumerical characters and symbols.
11	Home Directory	This can be configured when [MFP Local Authentication] is selected in [Authentication Method]. Enter the network path to the home directory. You can enter up to 128 halfwidth alphanumerical characters and symbols. For example, enter "\192.168.1.1\users\name" to specify the folder called "users\name" on the computer whose server address is "192.168.1.1".
12	Department Number	Displays the department number registered by the user who is accessing TopAccess.
13	PanelUI Language	Select the display language for the touch panel.
14	PanelUI Keyboard Display	Select whether to display the soft-keyboard when entering characters with the touch panel.
15	PanelUI Keyboard Layout	Select the keyboard layout on the touch panel.
16	Quota Setting	You can specify this item if you have selected "Job Quota" for "Quota Setting". • OFF — Not setting quota. • ON — Setting quota. P.130 "[Quota Setting] screen <access mode="" policy="">"</access>
	Quota	Displays the quota amount. This value decreases according to the weight in [Quota Setting], and output is restricted when the value becomes 0.00. The quota can be manually modified to any amount.
	Default Quota	Enter the default amount to assign to users. You can enter a value up to 99,999,999.99.
17	Total Counter	Displays the total counter of the user who is accessing TopAccess.

☐ [Change Password] screen

Changes the password of the user who is accessing TopAccess.

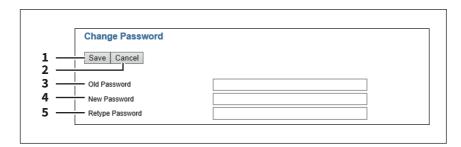


	Item name	Description
1	[Save] button	Saves the password changes.
2	[Cancel] button	Cancels the operation.
3	Old Password	Enter the current password.
4	New Password	Enter the new password.
5	Retype Password	Enter the same password again for a confirmation.

☐ [Home Screen setting] screen

You can set the Home screen of the user who is accessing TopAccess.

The Home screen is displayed by pressing the [Home] button on the control panel. You can register frequently used templates and template groups, and External Interface Enabler shortcuts.

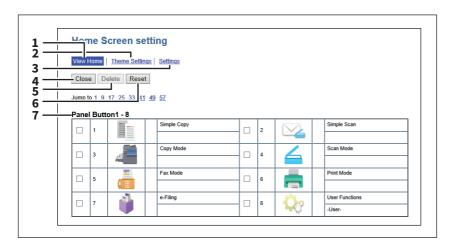


	Item name	Description
1	View Home	Displays the settings for the home screen. □ P.417 "[View Home] screen"
2	Theme Settings	Specify the theme of the home screen. P.418 "[Theme Settings] screen"
3	Settings	Specify the background, button size, and transparency of the home screen. P.419 "[Settings] screen"
4	[Close] button	Closes the [Menu Setting] screen.
5	[Delete] button	Deletes the selected menu settings.
6	[Reset] button	Deletes the current settings.

	Item name	Description
7	Panel button list	Displays a list of panel buttons you can select for the home. Select the panel buttons you want to use.
	Tip In the Home settings, you can r	egister 64 types.


☐ [View Home] screen

You can edit the settings for the home screen.

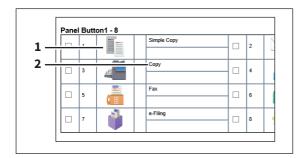


	Item name	Description
1	Button Icon	Displays button icons. You can register new buttons when you click the Undefined icon.
2	Name	Displays the function names.

[Edit Settings] screen

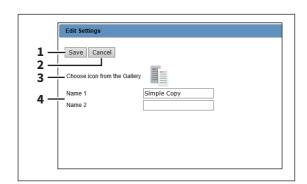

	Item name	Description
1	[Save] button	Stores the icon settings.
2	[Cancel] button	Cancels operations.
3	Choose icon from the Gallery	Select the icon for the image. □ P.418 "[Select Image] screen"
4	Name1/Name2	Enter the button name.

[Select Image] screen

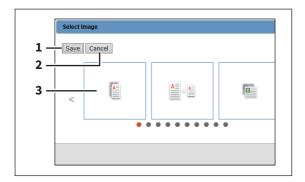

	Item name	Description
1	[Save] button	Stores the icon settings.
2	[Cancel] button	Cancels operations.
3	Select Image	Select the icon for the image.

☐ [Theme Settings] screen


You can specify the theme of the home screen.



	Item name	Description
1	Choose Theme from the Gallery	Specify the theme.

☐ [Settings] screen


You can specify the background, button size, and transparency of the home screen.

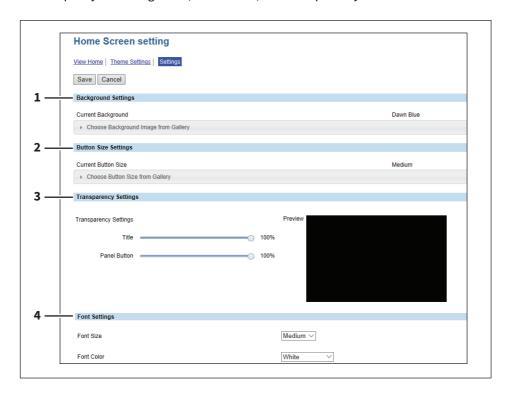

	Item name	Description
1	Background Settings	Specify the background of the home screen. You can select the background design from a list if you select [Edit Background Image from Gallery] at [Current Background].
2	Button Size Settings	Specify the button size. You can select the button size from a list if you select [Edit Button Size from Gallery] at [Current Button Size].
3	Transparency Settings	 Specify the transparency of the home screen. Title — You can specify the transparency of the title bar. Panel Button — You can specify the transparency of the buttons.
4	Font Settings	Specify the font used on the home screen. • Font Size — You can specify the font size. • Font Color — You can specify the font color.

☐ [Confirm Permission] screen

You can display granted permissions of the user who is accessing TopAccess.

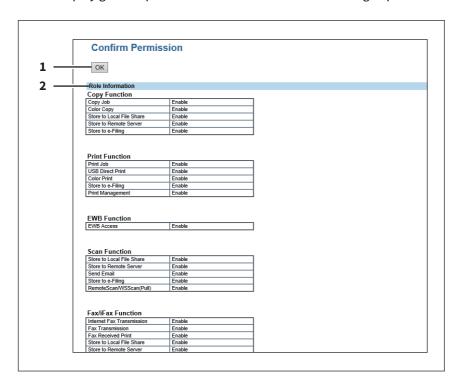

	Item name	Description
1	[OK] button	Closes the [Confirm Permission] screen.
2	Role Information	The role information assigned to the user who is accessing TopAccess is displayed.

Functional Setups

This section contains the following contents.

Setting up Meta Scan Function	422
Procedure for using Meta Scan	422
Checking Meta Scan Enabler	423
Editing XML format file	423
Registering XML format file	42
Registering Extended Field Definition	42
Registering templates for Meta Scan	431
Meta Scan	
Checking logs of Meta Scan	434
Setting Multi Station Print	435
Procedure for Multi Station Print	
Procedure for Multi Station Print (Only in One Equipment Unit)	
Checking the Multi Station Print Enabler	
Setting Home Data Synchronization	437
Procedure for Home Data Synchronization	
Using the Attribute of the External Authentication as a Role of the MFP	438
Exporting the role information setting file	
Defining the role information setting file	
Importing the role information setting file	
Enabling the role base access setting	
Setting up Email	440
Procedure for Email Setting	
 	

Setting up Meta Scan Function

The Meta Scan is a function to attach information (meta data) generated within the device to scanned images. The attached meta data can be processed by workflow servers or other means to supplement the scanned image. To use Meta Scan, select [E-MAIL], [Save as file] and [Save to USB Media] agents of Meta Scan for templates and register them.

Meta data is managed by an XML file which defines the scheme to store the information.

This section describes the data structure using the XML file <defaultForm3.xml> registered as the default as an

The default XML file consists of two data areas; the "basic data area" and "extended data area".

The "basic data area" records device information, scan parameters, and user information, while the "extended data area" records information entered by the user on the touch panel (maximum 25 items) when running Meta Scan. The user can create fields in "extended data area" to store information entered from the touch panel under [Extended Field Definition] - [Extended Field Properties].

When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.

P.422	"Procedure for using Meta Scan"
P.423	"Checking Meta Scan Enabler"
P.423	"Editing XML format file"
P.427	"Registering XML format file"
P.427	"Registering Extended Field Definition"
P.431	"Registering templates for Meta Scan"
P.434	"Meta Scan"
P.434	"Checking logs of Meta Scan"
	P.423 P.423 P.427 P.427 P.431 P.434

■ Procedure for using Meta Scan

Setup

	Operation	Description	Reference
1	Checking the Meta Scan option	Check whether the Meta Scan option can be used with your equipment.	P.423 "Checking Meta Scan Enabler"
2	Editing the XML format file	If necessary, edit the XML format file for meta data.	P.423 "Editing XML format file"
3	Registering an XML format file	Register an XML format file for meta data.	P.427 "Registering XML format file"
4	Registering an extended field definition	If necessary, register an extended field definition.	P.427 "Registering Extended Field Definition"
5	Registering a template for Meta Scan	Register a template for Meta Scan.	P.431 "Registering templates for Meta Scan"

Operation

	Operation	Description	Reference
1	Meta Scan	Perform a meta scan using a template for Meta Scan.	Template Guide "RECALLING TEMPLATES"
2	Checking Meta Scan logs	Check the scan log to confirm if meta data has been correctly created.	P.434 "Checking logs of Meta Scan" Software Troubleshooting Guide "CONFIRMING THE EQUIPMENT STATUS WITH THE TOUCH PANEL"

■ Checking Meta Scan Enabler

The Meta Scan Enabler is required to use the Meta Scan function. For the details, contact your distributor or service technician.

You can check whether the Meta Scan option is set on your equipment as follows. Meta Scan function is available if [Meta scan enabler] is registered under [Admin] - [General] - [License Management].

Note

This function is available only for some models.

■ Editing XML format file

Edit XML format files in accordance with the applications that interact with Meta Scan. You can define variables in the XML format file and the variables are replaced with the corresponding information (meta scan) during the Meta Scan operation.

Tip

Enter variables in XML format files using the \${variable name} format.

☐ Variables of XML format files

Variables that can be defined in XML format files are shown below.

You can use variables for the subject of E-mail, the file name of Meta Scan image files, and the file name of meta data.

Variable (\${variable name})	Data to be stored	Value
\${MANUFACT}	Manufacturer name	TOSHIBA
\${MODEL}	Model name	string
\${FWVER}	Firmware version	string
\${SERIAL}	Serial number for machine	string
\${LOCATION}	Location set from TopAccess	string
\${CONTACT}	Contact information set from TopAccess	string
\${CONTACTTEL}	Contact telephone number set from TopAccess	string
\${IP}	IP address	string
\${IPV6}	IPv6 address	string
\${NETBIOSNAME}	NetBIOS name	string
\${FQDN}	Fully Qualified Domain Name	string
\${RESOLUTION}	Scan resolution	HHHxVVVdpi
\${FILEFORMAT}	File format	MultipleTIFF singleTIFF MultiplePDF singlePDF MultipleSLIMPDF singleSLIMPDF MultipleXPS singleXPS JPEG MultiplePDF/A singlePDF/A

Variable (\${variable name})	Data to be stored	Value
\${COLORMODE}	Color mode	BLACK GRAY SCALE FULLCOLOR AUTOCOLOR
\${NUMFILE}	Number of image files	string
\${PAGES}	Number of pages	string
\${PATH} *1 *2	Save path of the image file	string
\${FILE} *2	Image file name	string
\${MYEMAIL}	Sender email address	string
\${DATE}	Scanned date	YYYY-MM-DD
\${YEAR}	Scanned year	YYYY
\${MONTH}	Scanned month	MM
\${DAY}	Scanned day	DD
\${TIME}	Scanned time	HH:MM:DD.mmmTZ D *3
\${USER}	Login user name	string
\${DOMAIN}	Login user's domain name	string
\${DEPTCODE}	Login department code	string
\${DEPTNAME}	Login department name	string
\${TEMPGROUPNO}	Template group number	string
\${TEMPGROUPNAME}	Template group name	string
\${TEMPGROUPUSER}	Template group user	string
\${TEMPNO}	Template number	string
\${TEMPNAME}	Template name	string
\${TEMPUSER}	Template user	string
\${FIELDNAMEn} *4	Extended field name	string
\${FIELDNAMEn} *4	Extended field name	string

^{*1} It cannot be used for the subject of E-mail.

☐ Default XML file format

Contents of the default XML format file <defaultForm3.xml> registered in this equipment are shown below. XML format files must be in the UTF-8 XML format. During the Meta Scan operation, the equipment stores information corresponding to the variable in each field of the XML format file and attaches it as meta data in the XML format.

- <?xml version="1.0" encoding="UTF-8"?>
- <!-- metadata version 3.1 -->
- <mfp_metadata>
- <metadata_version>
- <major>3</major>
- <minor>1</minor>
- </metadata_version>
- <device_info>
- <ip_address>\${IP}</ip_address>

^{*2} It cannot be used for the file name of image files or the file name of meta data.

^{*3} TZD is Time zone.

^{*4} A field number (from 1 to 25) comes at "n". For details, refer to the next chapter.

```
<ipv6_address>${IPV6}</ipv6_address>
<fqdn>${FQDN}</fqdn>
<netbios name>${NETBIOSNAME}</netbios name>
<location>${LOCATION}</location>
<contact>${CONTACT}</contact>
<contact_tel>${CONTACTTEL}</contact_tel>
<FW_version>${FWVER}</FW_version>
<manufacture>${MANUFACT}</manufacture>
<model>${MODEL}</model>
<serial>${SERIAL}</serial>
<!-- deprecated tag start -->
<host_name>${NETBIOSNAME}</host_name>
<tempt_file_ver>1.0</tempt_file_ver>
<!-- deprecated tag end -->
</device_info>
<scan_info>
<template >
<template_group_no>${TEMPGROUPNO}</template_group_no>
<template_group_name>${TEMPGROUPNAME}</template_group_name>
<template_group_user>${TEMPGROUPUSER}</template_group_user>
<template_no>${TEMPNO}</template_no>
<template_name>${TEMPNAME}</template_name>
<template_user>${TEMPUSER}</template_user>
</template>
<scanned_date>${YEAR}-${MONTH}-${DAY}</scanned_date>
<scanned_time>${DATE}T${TIME}</scanned_time>
<color_mode>${COLORMODE}</color_mode>
<resolution>${RESOLUTION}</resolution>
<file_format>${FILEFORMAT}</file_format>
<no_of_files>${NUMFILE}</no_of_files>
<no_of_pages>${PAGES}</no_of_pages>
<file_path>${PATH}</file_path>
<file_name>${FILE}</file_name>
<sender_email>${MYEMAIL}</sender_email>
<!-- deprecated tag start -->
<workflow>${TEMPGROUPNAME} ${TEMPNAME}</workflow>
<!-- deprecated tag end -->
</scan_info>
<user_info>
<user_id>${USER}</user_id>
<user_domain>${DOMAIN}</user_domain>
<dept_code>${DEPTCODE}</dept_code>
<dept_name>${DEPTNAME}</dept_name>
<!-- deprecated tag start -->
<user_email>${MYEMAIL}</user_email>
<!-- deprecated tag end -->
</user_info>
<user_input>
<field1 name="${FIELDNAME1}">${VALUE1}</field1>
<field2 name="${FIELDNAME2}">${VALUE2}</field2>
<field3 name="${FIELDNAME3}">${VALUE3}</field3>
<field4 name="${FIELDNAME4}">${VALUE4}</field4>
<field5 name="${FIELDNAME5}">${VALUE5}</field5>
<field6 name="${FIELDNAME6}">${VALUE6}</field6>
<field7 name="${FIELDNAME7}">${VALUE7}</field7>
<field8 name="${FIELDNAME8}">${VALUE8}</field8>
<field9 name="${FIELDNAME9}">${VALUE9}</field9>
<field10 name="${FIELDNAME10}">${VALUE10}</field10>
<field11 name="${FIELDNAME11}">${VALUE11}</field11>
<field12 name="${FIELDNAME12}">${VALUE12}</field12>
```

```
<field13 name="${FIELDNAME13}">${VALUE13}</field13>
<field14 name="${FIELDNAME14}">${VALUE14}</field14>
<field15 name="${FIELDNAME15}">${VALUE15}</field15>
<field16 name="${FIELDNAME16}">${VALUE16}</field16>
<field17 name="${FIELDNAME17}">${VALUE17}</field17>
<field18 name="${FIELDNAME18}">${VALUE18}</field18>
<field19 name="${FIELDNAME19}">${VALUE19}</field19>
<field20 name="${FIELDNAME20}">${VALUE20}</field20>
<field21 name="${FIELDNAME21}">${VALUE21}</field21>
<field22 name="${FIELDNAME22}">${VALUE22}</field22>
<field23 name="${FIELDNAME23}">${VALUE23}</field23>
<field24 name="${FIELDNAME24}">${VALUE24}</field24>
<field25 name="${FIELDNAME25}">${VALUE25}</field25>
</user_input>
</mfp_metadata>
```

■ Setting for saving meta data

You can specify the location to save meta data and the file name by adding the following elements to the XML file.

Specifying the location to save meta data

Protocol	Format
SMB	<metadata_file_path>file://server name/path/</metadata_file_path>
FTP	<pre><metadata_file_path>ftp://server name/path/</metadata_file_path></pre>
FTPS	<metadata_file_path>ftps://server name/path/</metadata_file_path>
NetWare (Binary mode)	<metadata_file_path>server name/path/</metadata_file_path>
NetWare (NDS mode)	<metadata_file_path>Tree/Context/file_share/</metadata_file_path>

Example: Protocol: SMB

External server: 192.168.1.1 Save folder:metadata

Format:<metadata_file_path>file://192.168.1.1/metadata/</metadata_file_path>

Note

Ensure that the protocol is the same as the protocol for saving the Meta Scan image file.

You can check the protocol for saving the Meta Scan image file in [Destination] of Save as file Setting, which is set for the template.

Specifying a meta data file name

<metadata_file_name>file name.xml</metadata_file_name>

Example:

File name:Sample_MetaData.xml

Format:<metadata_file_name>Sample_MetaData.xml </metadata_file_name>

Tip

You can use an XML format file variable for the file name of the meta data.

Example using the date variables (\${DATE}):

<metadata_file_name>Sample_MetaData_\${DATE}.xml </metadata_file_name>

P.427 "Registering Extended Field Definition"

For more information on variables, see the following:

P.423 "Variables of XML format files"

■ Registering XML format file

You can select the XML format file when registering the definitions of extended fields.

P.427 "Registering Extended Field Definition"

When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.

Tip

You can register up to 99 XML format files.

■ Registering Extended Field Definition

You can register up to 100 "extended field definitions", select an "XML format file" for each of them, and set "extended field properties" as necessary.

When using applications that interact with Meta Scan, follow the instructions of the application vendor to set the XML format file and the extended field.


Start TopAccess access policy mode.

P.15 "Access Policy Mode"

- Click the [Administration] tab.
- Click the [Registration] menu and [Extended Field Definition] submenu.




Click [Undefined] to register an extended field definition.

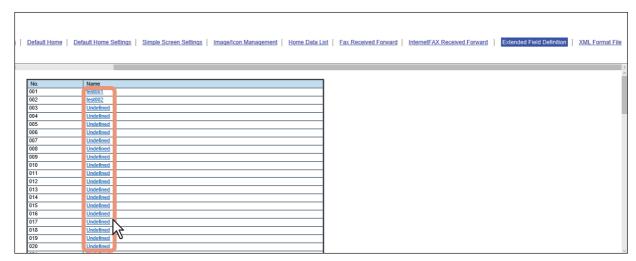

Click a registered extended field name to display the edit screen for the extended field. Skip to step 6.

Enter the field name, select an XML format file, and click the [Save] button.


Click [Edit] on the right of the XML format file to select it when you want to use a customized XML format file. Select "defaultForm3.xml" if you do not have any customized XML format file.

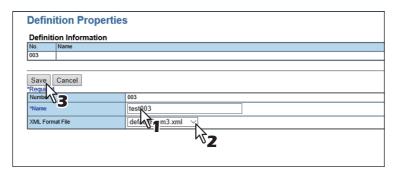

Click the [New] button under Extended Field settings when setting extended field properties. Click [Extended Field Definitions] in the upper part of the screen if you are not setting extended field properties.



Set the extended field properties.

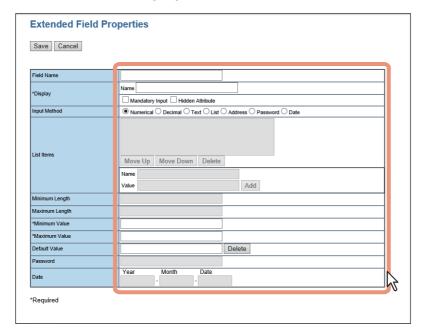

Field Name	Specify the extended field name.
Display	Specify how to display the extended field on the touch panel.
	Name
	Enter the caption of the extended field name for the display on the touch panel. You can enter up to 20 characters. Enter the Box number where a received document will be stored.
	Mandatory Input
	Select this check box if the extended field is a mandatory entry item.
	Hidden Attribute
	Select this check box if the extended field is a hidden item on the touch panel.

Input Method *	Select the type of an extended field.	
	• Numerical — Select this to create an extended field as an integer value.	
	• Decimal — Select this to create an extended field as a decimal value.	
	• Text — Select this to create an extended field as a character string.	
	• List — Select this to create an extended field as a list selection.	
	• Address — Select this to create an extended field as an address.	
	• Password — Select this to create an extended field as a password.	
	• Date — Select this to create an extended field as a date.	
List Items Specify list items to be selected for the extended field. The regist items are listed in the List Items. When you register a list item, entand [Value], and then click [Add]. If you select an item and click [In the selected item moves up in the list. Click [Move Down] to move Select an item and click [Delete] to delete an unnecessary item from the list. Name Enter the name of the item.		
	Value	
	Enter a value or text to be applied for the selected item.	
Note	Note	
You cannot exceed the total	number of characters displayable in the List Items (127).	
 You cannot use a semicolon 		
Minimum Length	Specify the minimum number of characters that can be entered in the extended field if the field is a character string.	
Maximum Length	Specify the maximum number of characters that can be entered in the extended field if the field is a character string.	
Minimum Value	Specify the minimum numerical value that can be entered in the extended field if the field is a numerical value.	
Maximum Value	Specify the maximum numerical value that can be entered in the extended	

The following shows the types and settable items of an extended field for each [Input Method]. (*) is displayed for mandatory setting items.

field if the field is a numerical value.

Specify the default value for the extended field.

Specify the default password for the extended field if the field is a

Specify the default date for the extended field if the field is a date.

Default Value

Password

Date

Input method (Extended field type)	Mandatory setting items	Optional setting items
Numerical value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999 to 999,999,999	[Default Value]
Decimal value	[Maximum Value], [Minimum Value] Settable value: -999,999,999,999.999999 to 999,999,999,999.999999 Contact your service technician if you want to input a value with more than two decimal places.	[Default Value]
Text	[Maximum Length], [Minimum Length] Settable value: 0 to 256	[Default Value]
List	[List Items] You can register up to 30 [List Items]. You can set from 1 to 126 characters in [Name]. You can set from 1 to 126 characters in [Value]. However, the total number of characters set in [Name] and [Value] must be from 2 to 127.	[Default Value] Select from the registered selection items

Input method (Extended field type)	Mandatory setting items	Optional setting items
Address	None	[Default Value]
Password	None Settable value: 0 to 256	[Default Value]
Date	None	[Default Value]

Click the [Save] button to register the extended field properties. You can register up to 25 extended field properties.

The extended field properties are registered.

■ Registering templates for Meta Scan


You must register a template for Meta Scan before using the Meta Scan function.

A template can be a "public template" which is registered by an administrator, or a "private template" which is registered by a user or an administrator.


Both templates can be used to register a Meta Scan template.

The following procedure shows how to register a "private template".


Click the [Registration] tab and the [Template] menu.

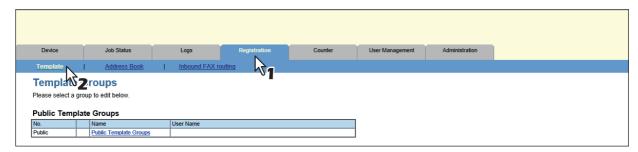


Click an [Undefined] group link.

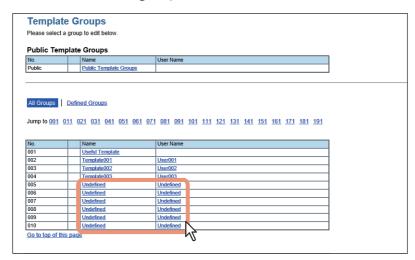

Enter the group name and click the [Save] button.

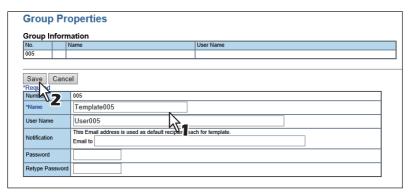

Click an [Undefined] icon from the template list.

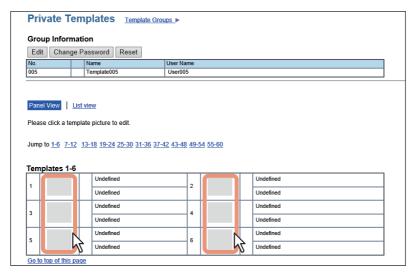


Select the check box for the [Meta Scan] under Template Properties, and then select the agent and click [Select Agent].



Note

To select [Meta Scan], the Meta Scan Enabler must be set up for use. If it is not set up, you cannot select [Meta Scan].

For [Meta Scan], [Email], [Save as file], and [Save to USB Media] are to be selected individually, except for [Email] and [Save as file], which can be selected simultaneously.

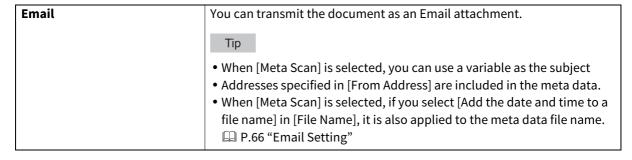


Save as file	You can save the document in a shared folder.	
	Note	
	 When [Meta Scan] is selected, you can only specify one destination. Protocols and network paths specified in the destination are included in the meta data. Example: 	
	Protocol: SMB	
	Network Path: \\192.168.1.1\ImageFolder	
	<pre><file_path>file: //192.168.1.1/ImageFolder/</file_path> • When [Meta Scan] is selected, if you select [Add the date and time to a file name] in [File Name], it is also applied to the meta data file name. \[\P.70 "Save as file Setting"</pre>	
Store to e-Filing	You can store the document in the e-Filing.	
Save to USB Media	You can save the document in USB media.	

Set the agent.


Setting operations are the same as for normal templates. P.98 "Registering and editing private template groups"

The following describes how to set "Extended Field settings".

Click the [Extended Field settings] button to set extended fields.

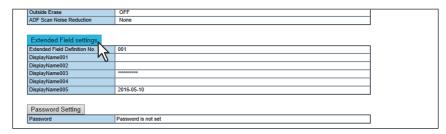

Select a registered extended field definition using [Extended Field Definition No.].

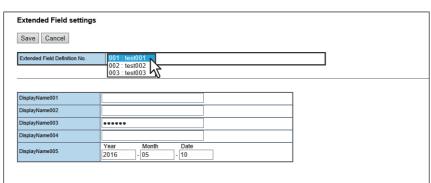


Enter the default value for the [Extended Field Properties].

This is displayed if [Extended Field Properties] are set for the selected extended field definition.

Values set in this screen are used as the default values for [Extended Field Properties] displayed on the touch panel when using Meta Scan.

Items with an asterisk (*) at the beginning of the [Extended Field Properties] name are mandatory entry fields.

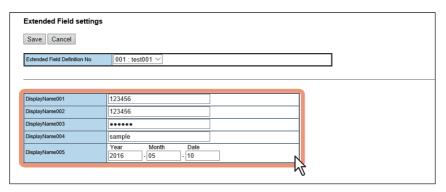

${f 10}$ Click the [Save] button to register the template.

The template for Meta Scan is registered.

■ Meta Scan

You can run Meta Scan using a Meta Scan template. For the operational procedure, refer to the **Template Guide**.

Tip

If [Extended Field Definition] set in [Extended Field Settings] in the Meta Scan template is deleted, the default XML format file <defaultForm3.xml> is used.

■ Checking logs of Meta Scan

You can check the scan log to confirm if meta data has been correctly created.

Check the following items in the scan log.

Check Item	Description
Mode	Displays "MSxxxx" (xxxx is in the code format) to indicate Meta Scan.
Status	Meta data is correctly created if no errors are displayed.

See the following for details of the scan log: P.37 "Scan Log"

Setting Multi Station Print

Multi Station Print is the function to enable printing from any of the registered MFPs when a job is sent from a client computer, by adding multiple MFPs as a cooperative device in advance. Up to 10 MFPs can be registered.

Operating with only one equipment unit is possible if the purpose is to use the output setting change function when printing. You can connect up to 10 MFPs in a group and connect up to 5 groups including a group to which this MFP belongs: you can add 4 groups for the connection.

Ш	P.4	35	"Proce	dure	for	Multi	Station	Print"
---	-----	----	--------	------	-----	-------	---------	--------

- P.436 "Procedure for Multi Station Print (Only in One Equipment Unit)"
- P.436 "Checking the Multi Station Print Enabler"

■ Procedure for Multi Station Print

When the Multi Station Print function is used, it is necessary to set all MFPs to be connected. There are two methods to set the 2nd or later MFPs to be connected: by manual means and by copying the settings of the 1st MFP using a clone file.

Setup

	Operation	Description	Reference
1	Checking the Multi Station Print Enabler	Check whether the Multi Station Print Enabler can be used with your MFP.	P.436 "Checking the Multi Station Print Enabler"
2	Enabling user authentication	Enable user authentication.	P.307 "Authentication settings"
3	Enabling the Multi Station Print function	Enable the Multi Station Print function.	P.271 "Setting up Multi Station Print"
4	Setting the connection MFP (1st device/no group connection)	Register the MFP (this equipment) which is being connected with TopAccess as the 1st device.	P.271 "Setting up Multi Station Print"
5	Setting the connection MFP (2nd or later devices/	Register the 2nd or later MFPs by manual means.	P.271 "Setting up Multi Station Print"
	groups)	When registering the 2nd or later MFPs by copying the settings for the 1st MFP, create a clone file and install it in them.	P.338 "Create Clone File settings" P.341 "Install Clone File settings"

Operation

	Operation	Description	Reference
1	Performing Multi Station Print	Print a job from the MFP connected by the network.	Printing Guide "Printing from Another MFP (Multi Station Print)"

■ Procedure for Multi Station Print (Only in One Equipment Unit)

When an attempt is made to use the Multi Station Print function only in one equipment unit, register only the MFP to be used since no MFP connection is carried out.

Setup

	Operation	Description	Reference
1	Checking the Multi Station Print Enabler	Check whether the Multi Station Print Enabler can be used with your MFP.	P.436 "Checking the Multi Station Print Enabler"
2	Enabling the Multi Station Print function	Enable the Multi Station Print function.	P.271 "Setting up Multi Station Print"
3	Setting the MFP	Register the MFP (this equipment) which is being connected with TopAccess.	P.271 "Setting up Multi Station Print"

Operation

	Operation	Description	Reference
1	Performing Multi Station Print		Printing Guide "Printing from Another MFP (Multi Station Print)"

■ Checking the Multi Station Print Enabler

The Multi Station Printer Enabler is required for the use of the Multi Station Print function. For details, contact your service technician or representative.

The setting of the Multi Station Print Enabler in your MFP can be confirmed as below.

[User Functions -User-] > the [Admin] tab > [General] > [License Management]

If [Multi Station Print] is registered in [License Management], the Multi Station Print function can be used.

Setting Home Data Synchronization

Once you have registered multiple MFPs for connection, you can use the common HOME screen when you log in to any one of the registered MFPs that are connected to the network. If MFP is used to synchronize the HOME screens, up to 10 MFPs can be connected.

P.437 "Procedure for Home Data Synchronization"

Note

If you change the default settings on any of the connected MFPs after you start the home data synchronization, you need to set the same changes for all of the connected MFPs or you need to create a clone file except User Management and Address Book on the MFP where you have changed the settings and install it into all the other connected MFPs.

■ Procedure for Home Data Synchronization

The following table explains the procedure to synchronize the HOME screens by means of MFP.

	Operation	Description	Reference
1	Setting the first MFP for connection	Register this MFP where you currently log in with TopAccess as the first device. Make several settings such as user information, address book, default settings for jobs, installation of applications, EWB function settings, and others.	P.136 "[User Management] Tab Page Overview" P.83 "[Address Book] Item list" P.406 "[Application] Item List" P.277 "Embedded Web Browser settings"
		Note Make sure that [Enable FTP Server] is en P.209 "Setting up FTP Server"	abled.
2	Creating a clone file	Create a clone file to copy the settings of the first MFP and install it into the second or later MFPs. Include the following categories in the clone file: • Default Settings • User Management • Network/Print Service • Address Book • Application	P.338 "Create Clone File settings"
3	Setting the second or later MFPs for connection	Install the created clone file into the second or later MFPs.	P.341 "Install Clone File settings"
		Note Execute [Delete All Shared Data] before P.175 "Home Setting"	you install the clone file.
4	Setting the primary server	Select one MFP as the primary server for connection and configure the shared user management and the shared address book.	P.309 "Setting up User Authentication Setting" P.86 "Shared Setting"
5	Setting the home data synchronization	Set the home data synchronization on all MFPs for connection.	P.175 "Home Setting"
		 Note To disconnect MFP, select [Disable] from concerned. Select [Assume this MFP is the Primary primary server. 	

Using the Attribute of the External Authentication as a Role of the MFP

When the external authentication (Windows domain authentication and LDAP authentication) is enabled, associating the role defined in this equipment with the attribute of the external authentication server is required in order to log in the equipment from an external authentication server as an administrator. The role can be associated with the equipment by importing the role information setting file in this equipment. The role information setting file is a file in which the attributes of the external authentication server and corresponding MFP are defined in XML. You can edit the role information setting file exported from the equipment and import it back to the equipment.

P.438	"Exporting the role information setting file"
P.438	"Defining the role information setting file"
P.439	"Importing the role information setting file"
P.439	"Enabling the role base access setting"

■ Exporting the role information setting file

See the following page for how to export the role information setting file. P.159 "Export"

■ Defining the role information setting file

The role information setting file is written in XML format. The role of this equipment can be assigned to the attribute set in the external server by defining the role information setting file in accordance with the external authentication server setting. The three examples of the major definition method for this file are explained here. Alphanumeric characters can be used for the content of each element. An asterisk (*) can be used as a wildcard for the <attributeValue> element.

Tip

The role of the user that does not correspond to the <RoleSet> element is defined in the <AnyOtherUser> element. This element can only be used once.

■ When setting one role to one attribute

Attribute name set in the external authentication server	Department
Attribute value set in the external authentication server	ITDept
Role name to be set	Administrator

- <RoleSetting>
- <RoleSet>
- <Condition>
- AttributeName>department</attributeName>
- <AttributeValue>ITDept/AttributeValue>
- </Condition>
- <Role>Administrator</Role>
- </RoleSet>
- <AnyOtherUser>User</AnyOtherUser>
- </RoleSetting>

■ When setting multiple roles to one attribute

Attribute name set in the external authentication server	Department
Attribute value set in the external authentication server	ITDept
Role name to be set [1]	Administrator
Role name to be set [2]	PrintOperator

- <RoleSetting>
- <RoleSet>
- <Condition>
- AttributeName>department</attributeName>
- <AttributeValue>ITDept</AttributeValue>
- </Condition>
- <Role>Administrator</Role>
- </RoleSet>
- <RoleSet>
- <Condition>
- AttributeName>department</attributeName>">
- <AttributeValue>ITDept/AttributeValue>
- </Condition>
- <Role>PrintOperator</Role>
- </RoleSet>
- <AnyOtherUser>User</AnyOtherUser>
- </RoleSetting>

■ When setting one role to multiple attributes

Attribute name set in the external authentication server [1]	Department
Attribute value set in the external authentication server [1]	Sales
Attribute name set in the external authentication server [2]	Title
Attribute value set in the external authentication server [2]	SeniorManager
Role name to be set	Print

- <RoleSetting>
- <RoleSet>
- <Condition>
- AttributeName>department</attributeName>
- AttributeValue>Sales/AttributeValue>
- </Condition>
- <Condition>
- AttributeName>
- AttributeValue>SeniorManager</attributeValue>
- </Condition>
- <Role>Print</Role>
- </RoleSet>
- <AnyOtherUser>User</AnyOtherUser>
- </RoleSetting>

■ Importing the role information setting file

See the following page for how to import the role information setting file.

P.160 "Import"

Tip

To change the setting, import the role information setting file again.

■ Enabling the role base access setting

In order to use the imported role information setting file, enabling the role base access setting is required. See the following page for the procedure.

P.309 "Setting up User Authentication Setting"

Setting up Email

Set the necessary settings for the email transmission, reception and operation from the [Administration] tab displayed by logging in by means of the access policy mode.

т	н	_
	н	()
	۰	Μ.

When Email is used, setting up of the basic settings of the network is necessary. The [Network] submenu can be accessed from the [Setup] menu on the [Administration] tab. See the following pages for how to access it and information on the [Setup] menu:

- P.15 "Access Policy Mode"
- P.165 "[Setup] Item List"
- P.284 "Setting up Network settings"

■ Procedure for Email Setting

	Operation	Description	Reference
1	Email transmission function confirmation	Check whether [Enable] is set for the Email transmission function from [Setup] - [General] - [Setting up Functions].	P.165 "General settings" P.167 "Setting up Functions"
2	Setting up SMTP Client	Set [Enable] for SMTP transmission of Email.	P.284 "Setting up Network settings" P.214 "Setting up SMTP Client"
3	Email Settings	Set the necessary settings for the Email transmission operation.	P.292 "Setting up E-mail settings" P.249 "Email settings"
4	Setting up URL Transmission Settings	Set to apply to an Email the URL where scanned images are stored, instead of attaching themselves.	P.292 "Setting up E-mail settings" P.253 "Setting up URL Transmission Settings"
5	Setting up Email Authentication	Set to require the entry of a user name and a password when Email transmission is attempted from the scanning screen.	P.307 "Authentication settings" P.315 "Setting up Email Authentication"
6	Setting up Email Address Setting	Set to enable Email transmission to a sender's e-mail address when [Enable] is set for Email authentication or user authentication.	P.307 "Authentication settings" P.309 "Setting up User Authentication Setting" P.315 "Setting up Email Authentication" P.316 "Setting up Email Address Setting"
7	Setting up Single Sign On Setting	Set to apply the user name and the password, which are entered from the control panel, for logging into the equipment to the SMTP communication, when an authentication method for connecting an SMTP server is selected in [SMTP Client] and [Enable] is set for [User Authentication] or [Email Authentication].	P.284 "Setting up Network settings" P.214 "Setting up SMTP Client" P.307 "Authentication settings" P.309 "Setting up User Authentication Setting" P.315 "Setting up Email Authentication" P.317 "Setting up Single Sign On Setting"

APPENDIX

This section contains the following contents.

Installing Certificates for a Client PC	442
Configuring the Microsoft Management Console	
Importing certificates to a client PC	

Installing Certificates for a Client PC

- P.442 "Configuring the Microsoft Management Console"
- P.444 "Importing certificates to a client PC"


■ Configuring the Microsoft Management Console

The following describes a configuration on Windows 10. The procedure is the same when other versions of Windows are used.

Open the command prompt, type "mmc" and press the Enter key.




From the [File] or [Console] menu of the window that appears, select [Add/Remove Snap-in].

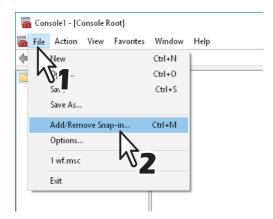


The [Add or Remove Snap-ins] dialog box appears.

From the list of [Available snap-ins:], select [Certificates] and click [Add].

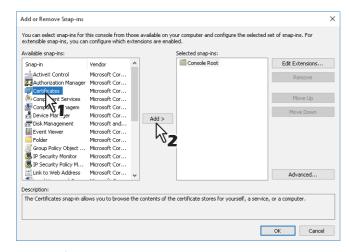


The [Certificates snap-in] dialog box appears.

Select [Computer account] and click [Next]. 4

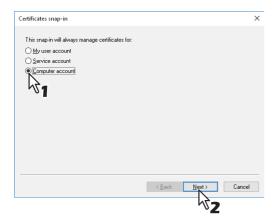


The [Select Computer] dialog box appears.

Select [Local computer: (the computer this console is running on)] and click [Finish].

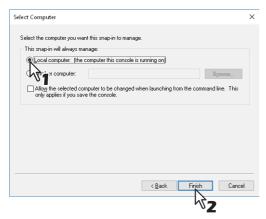


The [Select Computer] dialog box is closed.

Make sure that "Certificates (Local Computer)" is added under the [Console Root] folder; click [OK].

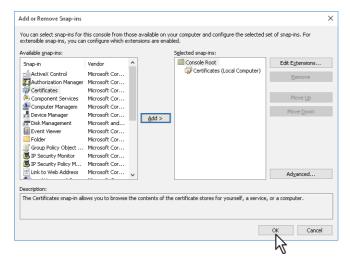

Save the setting.

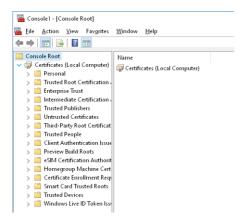


■ Importing certificates to a client PC


The following describes an import on Windows 10. The procedure is the same when other versions of Windows are used.

Note

- For Windows 10, you must log in to Windows as a user who has the "Administrators" privilege.
- Before importing certificates, make sure that User Account Control (UAC) is turned off. Select [Control Panel] > [User Accounts] > [Change User Account Control Settings], and then select [Never Notify].

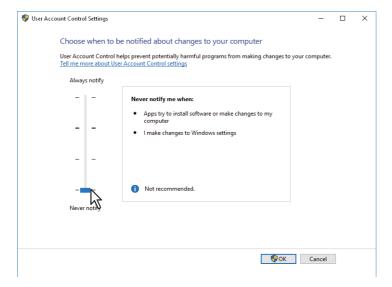

On the MMC, select and right-click on the appropriate folder to store the certificate and select [All 1 Tasks] > [Import]

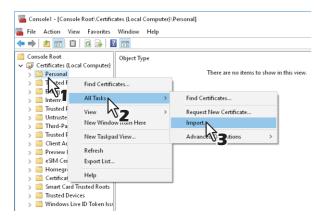

Select the appropriate folder according to the type of your certificate:


- Self-signed certificate: Console Root > Certificates (Local Computer) > Trusted Root Certification Authorities
- Client certificate: Console Root > Certificates (Local Computer) > Personal
- CA certificate: Console Root > Certificates (Local Computer) > Trusted Root Certification Authorities The [Certificate Import Wizard] appears.

On the Certificate Import Wizard, click [Next].




For importing a client certificate, proceed to the next step. Otherwise, skip to step 5.


? From [Browse], select the certificate to install, and click [Next].

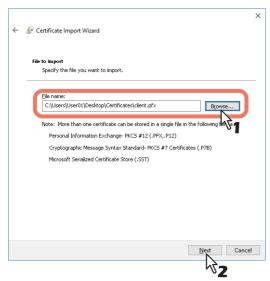

▲ Enter the password for the private key and click [Next].

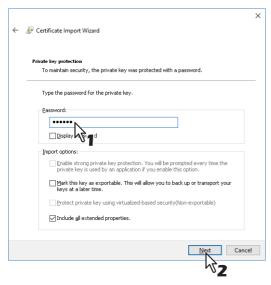

5 Click [Next].

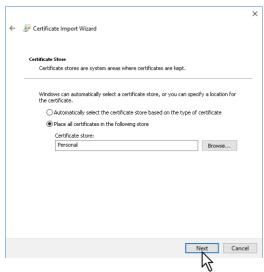

Note

Do not change the certificate store using [Browse].

Click [Finish].



Tip


If the security warning message appears, click [Yes].

Click [OK] to complete the import.

If you are importing a client certificate (.pfx) to a Windows 10 PC, proceed to the next step. Otherwise, the installation is complete.


If you need to install another certificate, repeat the steps from the beginning.

Double-click the imported client certificate.

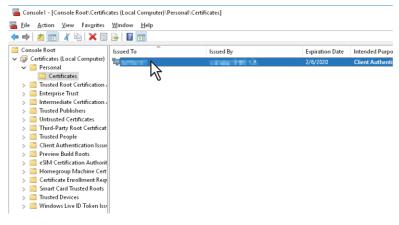

The [Certificate] window appears.

Click the [Details] tab and select [Thumbprint] to check the 40-digit thumbprint. 9

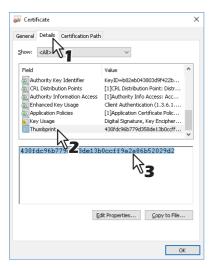

$10^{\,\mathrm{Open}}$ the command prompt and execute the "netsh" command as shown below.

Tip


If you log in to Windows 10 as a user without the administrator privilege, open the command prompt by rightclicking the icon and selecting [Run as administrator.] This way, you can temporarily have the administrator privilege to execute the command.

```
:\WINDOWS\system32>netsh http add sslcert ipport=0.0.0.0:5358 certhash=430fdc96b779d358de13b0ccff9a2a86b52029d2 appid
00112233-4455-6677-8899-AABBCCDDEEFF}
SSL Certificate successfully added
 :\WINDOWS\system32>
```

- Using the thumbprint obtained in Step 9, type the following command: netsh http add sslcert ipport=0.0.0.0:5358 certhash=(your 40-digit thumbprint) appid={00112233-4455-6677-8899-AABBCCDDEEFF}
- When inputting the thumbprint, exclude the spaces.

Note

When your client certificate is created with Certificate Revocation List (CRL), you need to check if the CA server is accessible by FQDN (see the following figure).

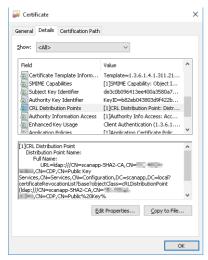

If no FQDN connection is established, ask your administrator to perform either of the following options:

- In the "hosts" file accessible from the following folder path, add the IP address and the host name: C:\Windows\System32\drivers\etc
- Configure the DNS server to handle the name-to-address resolution.

INDEX

A		D	
About the maintenance functions	360	Data Backup	354
Access policy mode	10, 15	DDNS	185
Accessing TopAccess	12	Default Home	379
Accessing TopAccess by entering URL	12	Default Home Settings	379
Activate	411	Default roles and privileges	148
Add Filter	191	Default XML file format	424
Add IKE	194	Defining the role information setting file	438
Add Manual Key	193	Definition Properties	398
Add New LPR Queue	264	Delete Shared Files settings	348
Add New URL	279	Deleting a device certificate installed	
Add Policy	200	automatically	331
Add Profile	198	Deleting a server	304
Adding new contacts from the LDAP server	108	Deleting all jobs	31
Adding or editing an LPR queue	296	Deleting an imported device certificate	329
Adding, editing, and deleting contacts manually		Deleting an LPR queue	296
Address Book		Deleting CA certificate	334
Address Book Item list	83	Deleting data	364
Administration Tab	163	Deleting jobs	30
Application Item List	406	Deleting profiles	301
Application List	406	Deleting SNMP V3 user information	287
Application Log	40	Deleting the data from local folder	364
Application Setting	408	Department Counter	123
Assignment for Programmable button	177	Department Information 12	24, 154
Authentication settings	307	Department Management	122
В		Department Management Item list	
	100	Destination Setting	
Basic Setting		Destination Setting (Mailbox)	
Box Setting (Mailbay)		Device Item list	18
Box Setting (Mailbox)	91	Device Tab	17
C		Displayed icons	
Certificate management settings		Displaying job logs	
Change Group Password		Displaying print jobs	
Change Password	416	Displaying public templates	
Checking logs of Meta Scan	434	Displaying templates in the public group	
Checking Meta Scan Enabler		Displaying the department counter	
Checking recovery information	32	Displaying the total counter	
Configuring the EWB function		Displaying version information	
Configuring the source profile		DNS	185
Confirm Permission		E	
Contact Property		Edit Department Information	155
Contacts		Edit Destination information	
Copier settings		Edit Group Information	146
Counter How to Set and How to Operate		Edit Group information	
Counter Item list		Edit LDAP Information	
Counter Tab		Edit Role	152
Counter Tab Page Overview		Edit Settings	417
Create Client Certificate		Edit User Information	
Create Clone File settings		Editing XML format file	423
Create Destination information		Email Setting	66
Create Group Information		Email Setting (Mailbox)	
Create Group information		Email settings	
Create LDAP Information		Embedded Web Browser settings	
Create New Role		Enabling the role base access setting	
Create SNAD V3 User Information		End-user mode	
Create User Information		Enter Password	
Create User Information		Entering the destinations manually	
Creating/exporting a self signed cortificate		Export 8	
Creating/exporting a self-signed certificate	326	Export Logs Item list	
		Export settings	346

Export/Import Item list	159	J	
Exporting address book data		Job Status How to Set and How to Operate	30
in the CSV/XML format	370	Job Status Tab	
Exporting logs	46	Job Status Tab Page Overview	
Exporting profiles			
Exporting SNMP V3 user information	286	L	
Exporting the address book data	113, 370	Languages settings	
Exporting the role information setting file	438	LDAP Authentication	
Extended Field Properties	81	LDAP Client settings	
Extended Field settings	81	License Item List	
Extended Fields		License List	
Extended Fields Properties	396	List View	-
F		LLMNR Log Settings Item list	
Favorite Contact	84	Log size	
Favorite Groups		Logs How to Set and How to Operate	
Fax Received Forward and InternetFAX Received		Logs Tab	
Forward settings	383	Logs Tab Page Overview	
Fax Setting		Long File Name Setting	
Fax settings			200
Fax/InternetFax Job Item list		M	
,		MailBox Setting (Mailbox)	
G		MailBoxes Properties	
General Setting		Maintenance How to Set and How to Operate	
General settings		Maintenance Item list	
Group		Managing address book	
Group Assignment		Managing contacts in the Address Book	
Group Information		Managing groups in the Address Book	
Group Management Item list		Managing mailboxes	
Group Properties	51	Managing templates	
н		Message Log	
Home Data List	383	Meta Scan	
Home Screen setting		Modify Filter	
Home Setting		Modify IKE	
Home Setting	113	Modify Manual Key	
1		Modify Policy	
ICC Profile settings	274	Modify Profile	
Image/Icon Management	381	Multi Station Print Job Item list	23
Import	. 87, 160	My Account Item list	
Import settings	344	My Account Tab	
Importing address book data		My Account Tab Page Overview	414
in the CSV/XML format	367	N	
Importing and exporting	367	Network settings	170
Importing profiles	299	Notification Events	
Importing the address book data	111, 367	Notification settings	
Importing the role information setting file	439	Notification settings	340
Inbound FAX routing	92	0	
Inbound FAX routing Item list	92	OCR Setting	177
Install Clone File settings		Off Device Customization Architecture settings	
Install Language Pack			
Installing a device certificate		Р	
Installing a device certificate automatically		Panel Background Image	
Installing an imported device certificate		Panel Icon Image	
Installing CA certificate		Panel Setting	56
InternetFax Setting		Panel View52	2, 54, 358
InternetFax Setting (Mailbox)		Password Policy settings	322
InternetFax settings		Password Setting	
IPv4		PDF/A Fileformat Setting	
IPv6		Preparing a driver file for uploading	
		Print Counter	
		Print Data Converter settings	

Print Job Item list	. 24	Save as file Setting (Private template)	70
Print Service settings	266	Save as File settings	
Printer settings	259	Scan Counter	122
Printer/e-Filing settings	258	Scan Job Item list	28
Private Template Groups		Scan Log	37
Private Templates		Scan Setting (Private template)	
Procedure for Email Setting		Search Address List	
Procedure for Home Data Synchronization		Search Contact	
Procedure for using Meta Scan		Search User Account	
Project Management Item list		Searching for destinations in the LDAP server 61	
Proxy Setting		Security How to Set and How to Operate	
Public Home		Security Item list	
Public Home Settings		Security Stamp Setting	
Public Template Groups		Select Home Type	
Public Templates		Select Image	
Public Theme Settings		Selecting the destinations from the address book	410
r ublic Theme Settings	311	59	402
Q		Selecting the groups from the address book 60	
Quota Setting	130	Server Assignment screen	
_		Setting for saving meta data	
R			
Reboot settings		Setting Home Data Synchronization	
Rebooting the equipment	372	Setting up Address Book	
Reception Journal	. 36	Setting up AppleTalk	
Recovery Information	. 26	Setting up Application	
Register from Application	376	Setting up Bonjour	219
Register from Function List	375	Setting up Box Setting	
Register from Home	376	(Fax/InternetFAX Received Forward)	
Register from Job History	374	Setting up CA Certificate	
Register from Recommendation	375	Setting up Category Setting	
Register from URL List		Setting up Certificate Files	
Registering a server		Setting up Certificate Setting	
Registering and editing private template groups		Setting up Client Certificate	
Registering Extended Field Definition		Setting up Clone File	
Registering Fax and Internet Fax received forward		Setting up Clone File Information	342
Registering or editing SNMP V3 user information		Setting up CMYK Source Profile	274
Registering or editing templates		Setting up Combined 345	, 347
Registering templates for Meta Scan		Setting up Confidentiality Setting	169
Registering the Fax or Internet Fax	.01	Setting up Configuration	280
received forward	399	Setting up Copier settings	288
Registering XML format file		Setting up Copy Job Enforcement Continue	231
Registration How to Set and How to Operate 98,		Setting up Current Language Pack List	
Registration Item list		Setting up Current Software List	358
Registration Tab		Setting up Customized RGB Profile	
Registration Tab Page Overview	. 41	Setting up Date & Time	
Relay End Terminal Report (Mailbox)		Setting up Daylight Savings Time Setting	
		Setting up Default Direct Print Setting	
Releasing print jobs		Setting up Default Raw Job Setting	
Remote Setting List		Setting up Default setting	
Remote Setting screen	245	Setting up Default Setting for PanelUI	
Remove Software settings		Setting up Definition Information	
Removing the client software		Setting up Department Setting	
Removing the contacts from the Recipient List		Setting up Destination	
Removing the destinations from the Recipient List		Setting up Destination Profile	
Removing the software from TopAccess		Setting up Destination Setting	213
Report Settings		(Fax/Internet Fax Received Forward) 383	402
Restriction of Destination Selection Method		Setting up Device Certificate	
Role Assignment		Setting up Device Certificate	
Role Management Item list	147	Setting up Document Print	
S		(Fax/InternetFax Received Forward)	
Save as file Setting (Mailbox)	. 96	Setting up Driver Customization Packages Setting	261

Setting up e-Filing Notification Events	168	Setting up Policy for Users	322
Setting up Email		Setting up POP3 Client	
Setting up Email Address Setting	316	Setting up Print Data Converter settings	
Setting up Email Authentication		Setting up Print Service settings	
Setting up Email Print	270	Setting up Printer settings	295
Setting up Email Setting2	49, 349	Setting up Printer/e-Filing Job	
Setting up Email Setting		Enforcement Continue	258
(Fax/InternetFAX Received Forward)	390	Setting up Printer/e-Filing settings	294
Setting up E-mail settings	292	Setting up Proxy Setting	277
Setting up Energy Save	170	Setting up Raw Job Setting 2	63, 296
Setting up EWB History Setting	278	Setting up Raw TCP Print	266
Setting up Extended Field settings	395	Setting up Remote 1 and Remote 2	243
Setting up Fax Setting	232	Setting up Restriction on	
Setting up Fax settings	289	Address Book Operation by Administrator	169
Setting up File Composition	242	Setting up RGB Source Profile	274
Setting up File Upload	342	Setting up Save as file Setting	
Setting up Filtering	188	(Fax/InternetFAX Received Forward)	385
Setting up Folder Name	240	Setting up Save as file settings	
Setting up Format	240	Setting up Searching Interval	243
Setting up FTP Client		Setting up Server Registration Setting	278
Setting up FTP Print	269	Setting up Setting data included in Clone File	342
Setting up FTP Server	209	Setting up Single Page Data Saving Directory	241
Setting up Functions		Setting up Single Sign On Setting	
Setting up General Setting		Setting up SLP	
Setting up General settings		Setting up SMB	
Setting up Home Directory Setting		Setting up SMTP Client	
Setting up Home Page Setting		Setting up SMTP Server	
Setting up HTTP		Setting up SNMP	
Setting up ICC Profile settings		Setting up SNTP Service	
Setting up Install Language Pack		Setting up System Message Notification Events	
Setting up Install Software Package		Setting up Template	45, 347
Setting up InternetFax Setting	255	Setting up the notifications	265
Setting up InternetFax Setting	204	of system errors and events	
(Fax/Internet Fax Received Forward)		Setting up URL List for Menu Screen	
Setting up InternetFax settings		Setting up USB Coble Print	
Setting up IPP Security		Setting up USB Cable Print	
Setting up IPP Print Setting up IPX/SPX		Setting up User Authentication Setting Setting up User Name and Password	309
Setting up Job Notification Events		at User Authentication for Save as File	242
Setting up Job Skip Control		Setting up WEB General Setting	
Setting up License		Setting up WSD	
Setting up LLTD		Settings 4	
Setting up Local Storage Path		Setup How to Set and How to Operate	
Setting up LPD Print		Setup Item list	
Setting up MailBoxes		Shared Setting	
Setting up mailboxes		Shared Settings Item list	
Setting up Meta Scan Function		Shutdown Setting	
Setting up Mobile Scan(eSCL)		Simple Screen Settings	
Setting up Multi Station Print		SNMP V3 settings	
Setting up N/W-Fax Destination		Store to USB Device Setting	
Setting up N/W-Fax Folder		Supported browsers	11
Setting up NetWare	226	Syslog Setting	224
Setting up NetWare Print		System Updates settings	
Setting up Network		т	
Setting up Network settings		T	40
Setting up notification	365	Template Groups	
Setting up Off Device Customization		Template list	
Architecture settings		Template list	
Setting up Policy		Template Properties Template settings	
Setting up Policy for Administrator, Auditor	323	Theme Settings	
		11101110 JCKHIISJ	T⊥O

TopAccess Conditions	. 11
TopAccess Overview	. 10
TopAccess screen descriptions	. 14
Total Count	120
Transmission Journal	. 35
U	
Upload Software settings	335
Uploading new versions	
of client software in TopAccess	361
Uploading the client software	361
User Accounts Item list	
User Counter	127
User Information	128
User Management Tab	135
User Management Tab Page Overview	136
User Paper Type	
Using the attribute of the external authentication	
as a role of the MFP	438
V	
Variables of XML format files	423
Version	281
View Home	
View Logs Item list	. 34
Viewing counters	
VNC Setting	
w	
When setting multiple roles to one attribute	438
When setting one role to multiple attributes	
When setting one role to one attribute	
Windows Domain Authoritication	

MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS / MULTIFUNCTIONAL DIGITAL SYSTEMS

TopAccess Guide

E-STUDIO2010AC/2510AC

©-STUDIO2515AC/3015AC/3515AC/4515AC/5015AC

E-STUDIO2518A/3018A/3518A/4518A/5018A

E:STUDIO5516AC/6516AC/7516AC

C-STUDIO 5518 A / 6518 A / 7518 A / 8518 A

E-STUDIO330AC/400AC

Toshiba Tec Corporation

1-11-1, OSAKI, SHINAGAWA-KU, TOKYO, 141-8562, JAPAN